




1907 Woodland Ave.
Coffeyville, KS 67337
Phone: (620) 251-9100
Fax: (620) 251-2622

INSTALLATION INSTRUCTIONS

MODEL NO. JATJ150 ARMRESTS

FOR THE TJ MODEL JEEP

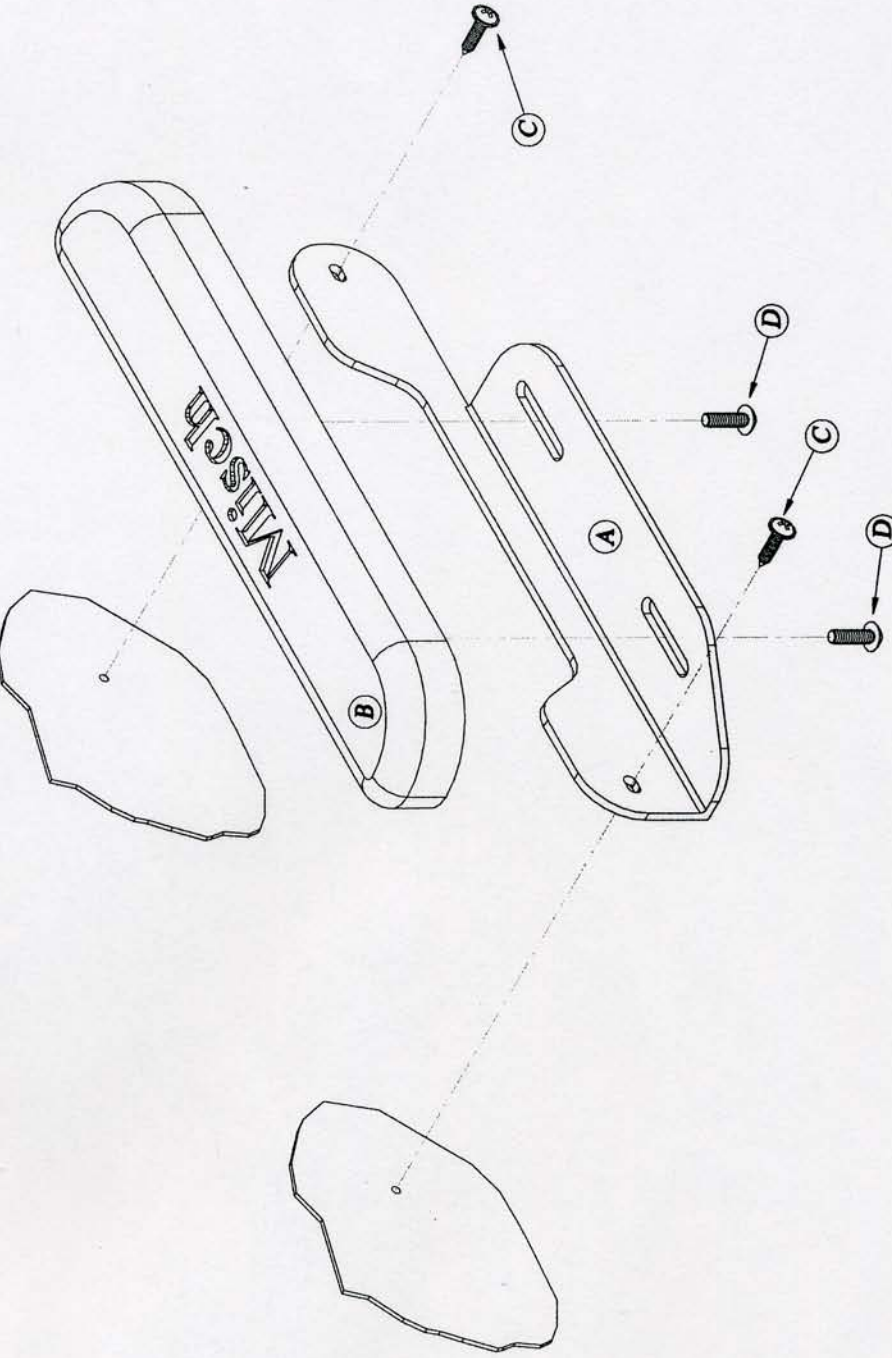

1. Remove the door closure strap by removing the two screws holding them in place.
2. Attach the armrest bracket (A) to the door, using (2) of the #8 x 1" tapscrews (C) supplied. The armrest attaches to the door using the same holes that previously held the door closure strap.
3. Mount the polyurethane cushion (B) to the armrest bracket, using (4) of the #10-24 x 1/2" button allen head screws (D) supplied, adjusting the fore and aft position to suit your comfort.

FIG. 1 TJ MODEL ARMREST INSTALLATION