




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Part #13260.07

C3 Cargo Cover, Renegade

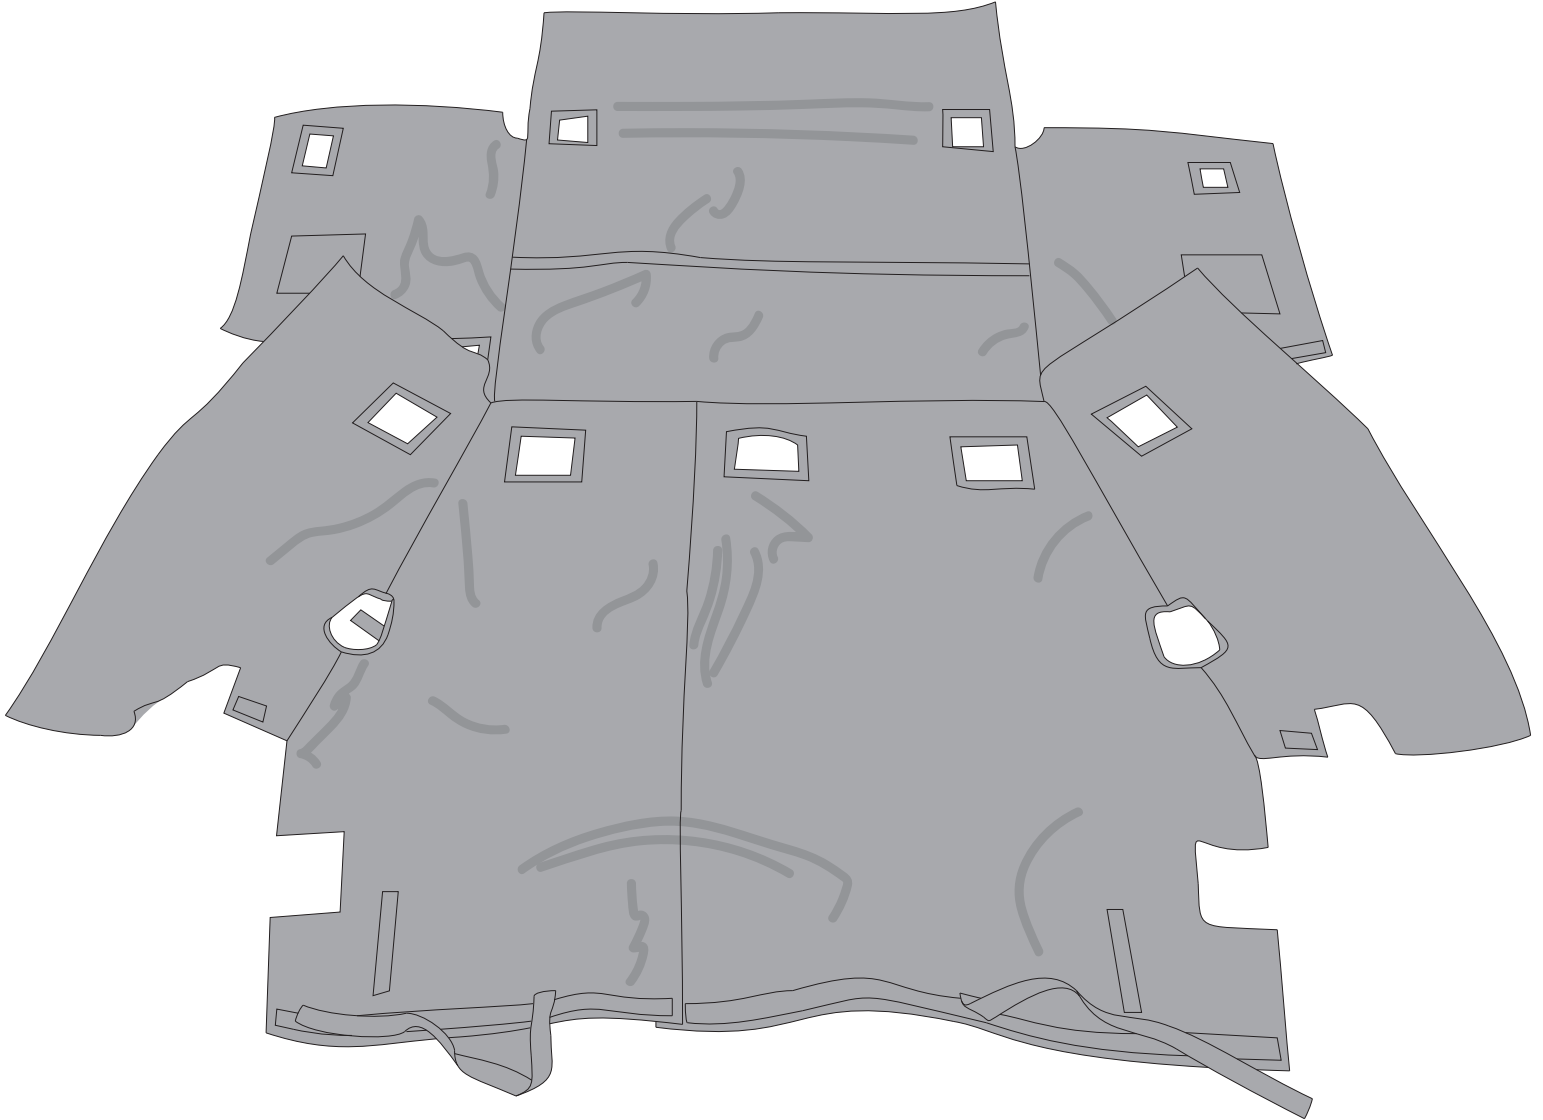

Components

- 1. Cargo Cover (1)
- 2. 13" Hook and Loop Strip (6)
- 3. Adhesive Promoter (1)

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

C3 Cargo Cover, Renegade

1. Lower rear seats and lay Cargo Cover in cargo area as shown on right.

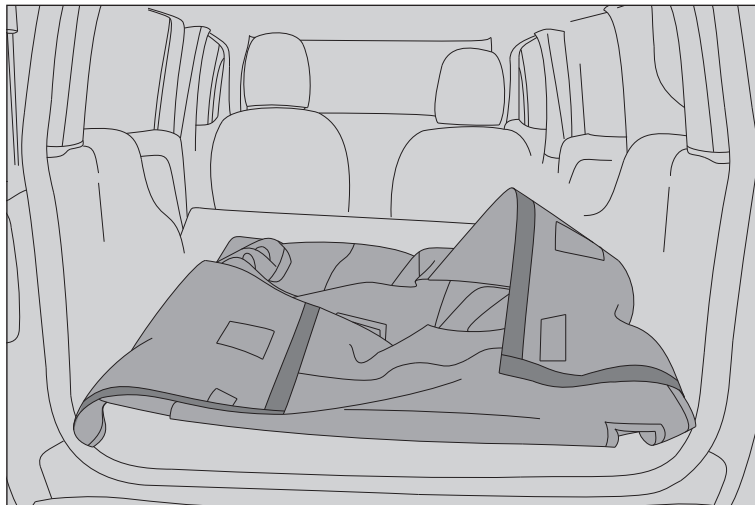


2. Measure and cut hook and loop strips for inner edge of body tub using cargo cover as a guide.



3. Apply adhesive promotor to body tub and allow to dry 1 minute. Attach hook and loop strip to area. Secure hook and loop strip on Cargo Cover to body tub.

Repeat second side.

3. Follow steps 2 and 3 for the upper line of body tub as shown on right.

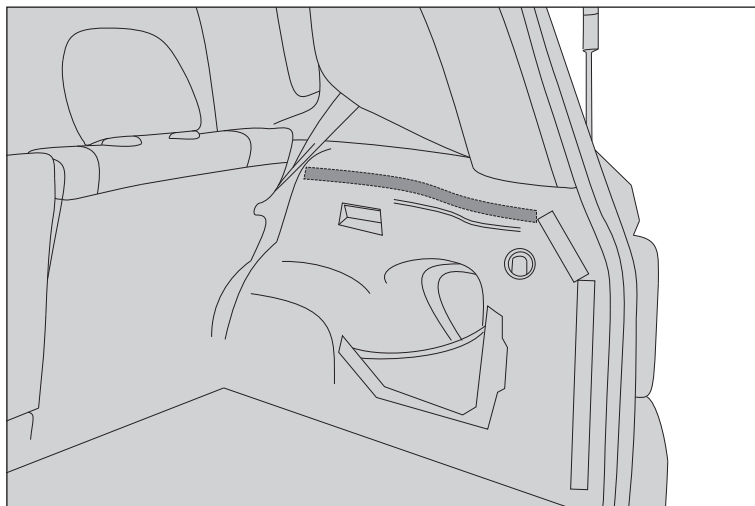

4. Attach hook and loop strips on Cargo Cover to upper line of body tub. Secure middle hook and loop strips on Cargo Cover near rear seats.

Repeat second side.

5. Attach hook and loop strips on cargo cover to corresponding strips on vehicle tub.




OMIX-ADA, Inc.


460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

C3 Cargo Cover, Renegade


6. Secure vertical hook and loop strips on cargo cover near rear door.

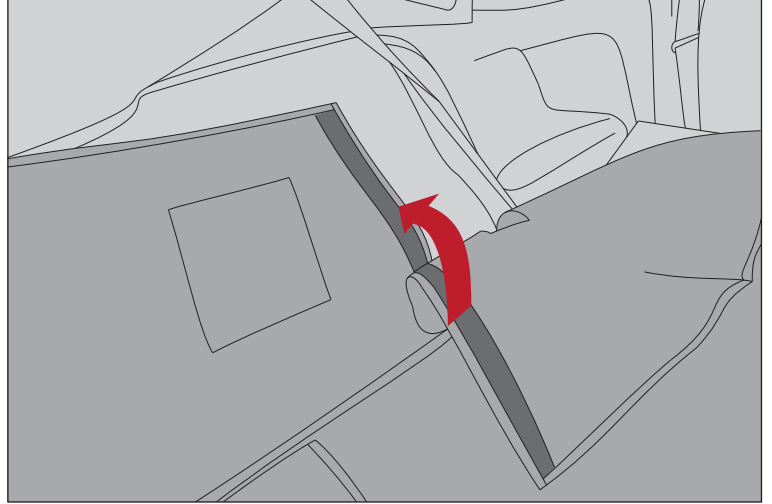

6. Loop top two straps around front seat headrests and secure with hook and loop strips.

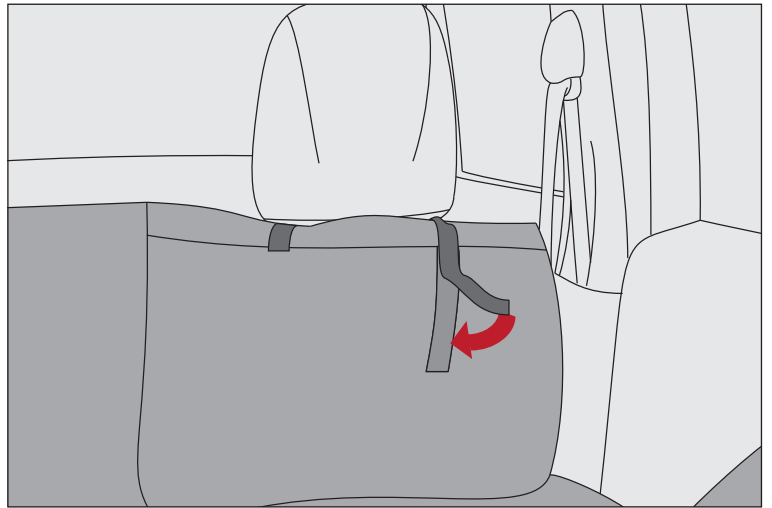

7. Secure hook and loop strips located at bottom on front seats.

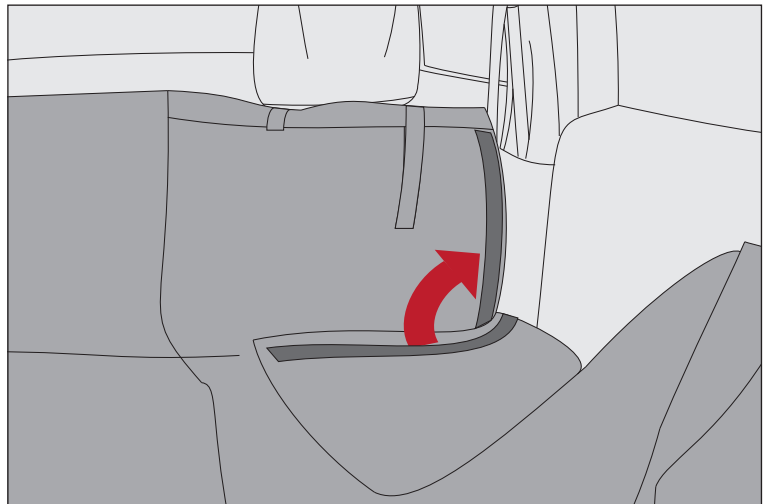



OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

C3 Cargo Cover, Renegade

For 60/40 split:


Release headrest strap. Undo hook and loops along seam of seat.

Fold top half of seat cover down to meet lower hook and loop strap near seat mounts.

Secure hook and loop strap(s) to rear seat headrest(s). Raise seat(s). Ensure side notches align with seat latches.

For raised rear seats:

Repeat directions for 60/40 split for second side.

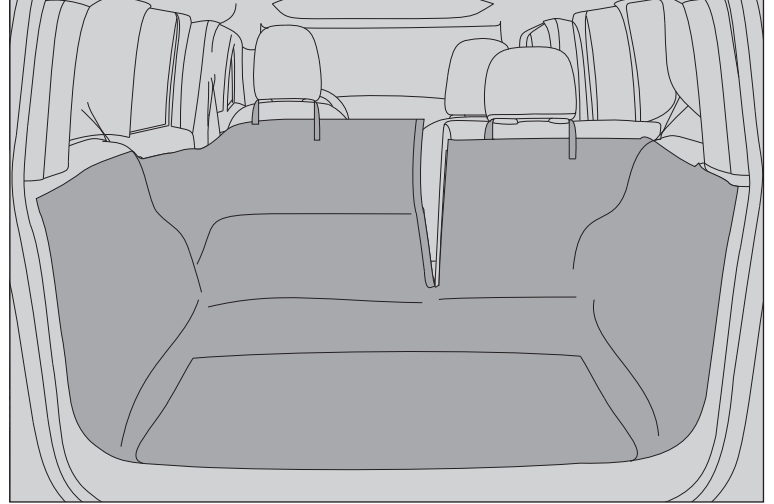

For more tailgate and bumper protection:

Undo hook and loop strap in trunk. Fold cover out to cover rear bumper.

