




OMIX-ADA, Inc.

460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | www.omix-ada.com

Part #13260.09

# C3 Tailgate Cover

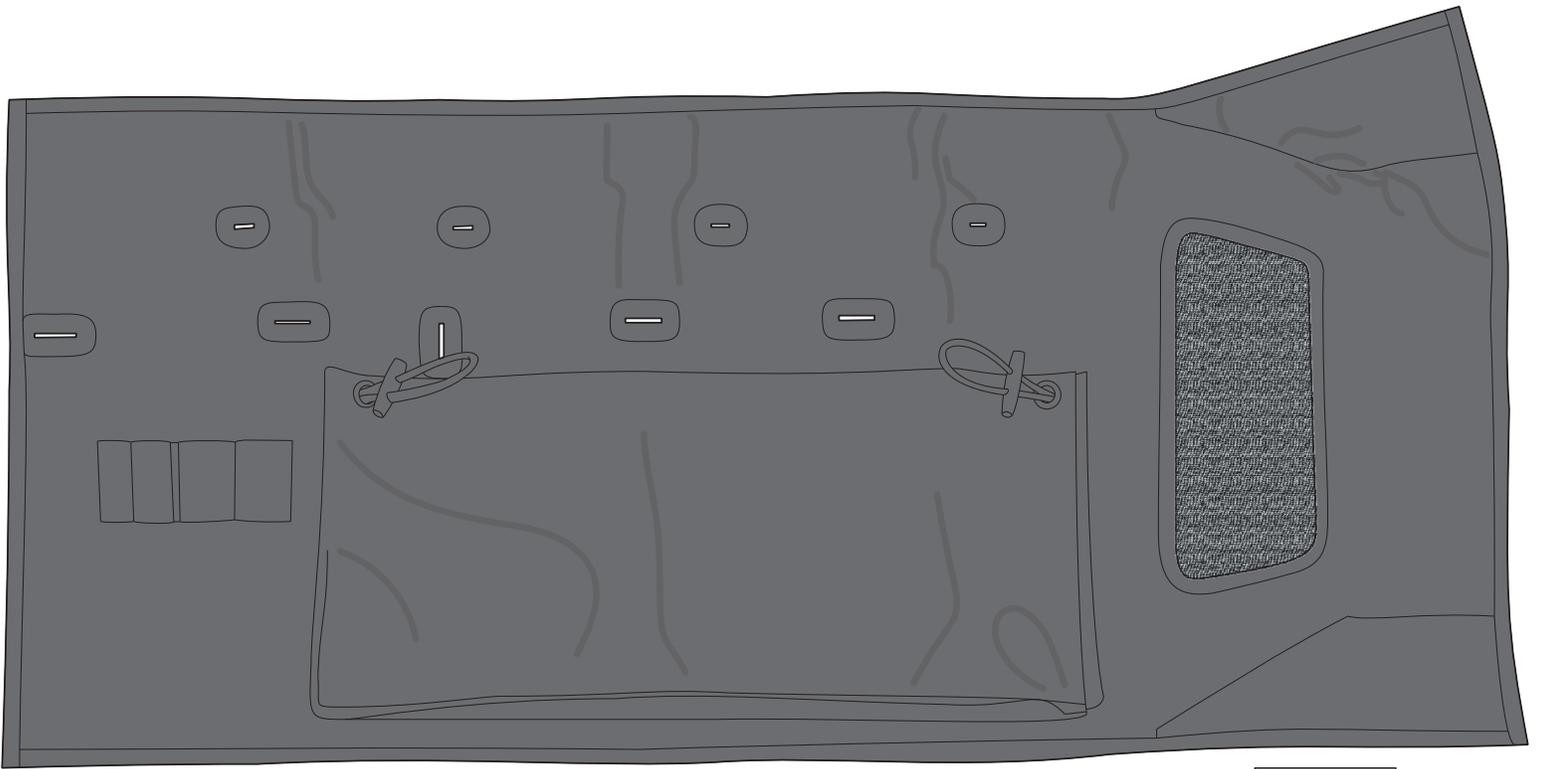

## Components

- 1. Tailgate Cover (1)
- 2. Adhesive Promoter (1)

### OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | SUPPORT: [www.omixsupport.com](http://www.omixsupport.com)

FOR WARRANTY INFORMATION VISIT: [www.Omix-Ada.com](http://www.Omix-Ada.com)




OMIX-ADA, Inc.


460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | www.omix-ada.com

## C3 Tailgate Cover

1. From the bottom edge, gently pull plastic trim away from tailgate.
2. Clean surface of tailgate thoroughly. Apply adhesive promoter to outside perimeter of tailgate where tape will be applied.

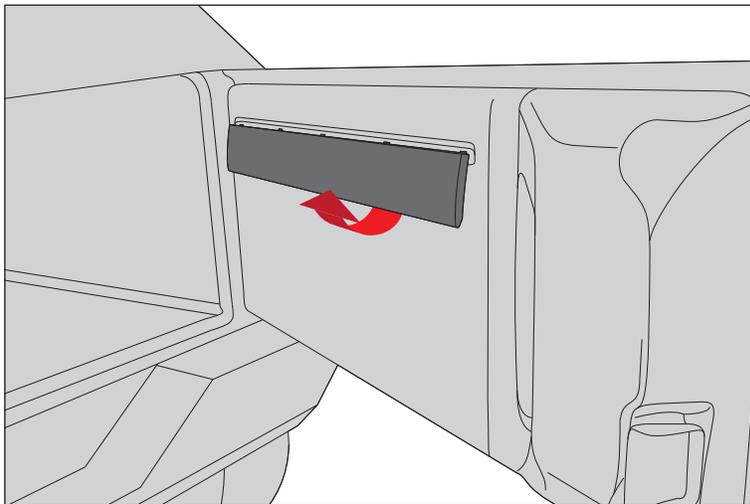

3. From the top edge, insert plastic hooks on plastic trim through top row of cut outs in Tailgate Cover.
4. Snap bottom row of plastic trim through bottom row of cut outs and into tailgate.

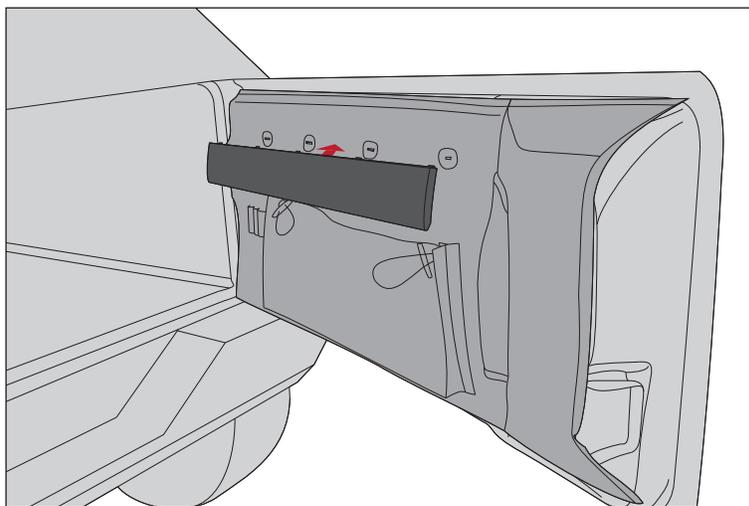

5. Remove adhesive backing from tape. Pull edges of Tailgate Cover tightly over tailgate and press firmly to adhere to tailgate.

