


## Jeep JK Headlight Installation

The Jeep JK Headlight is convex in shape and requires you to utilize a special technique to achieve a successful installation. It is best to install the film dry without any moisture. **Note: Use warm sunlight or blow dryer heat to keep the Lamin-x soft and pliable.** The few basic tools required to install the film are simply water, a towel, and your thumbs or provided squeegee. We're sure you're aware of the specially designed small split seams. Don't worry though, these seams will mate together once the install is complete.

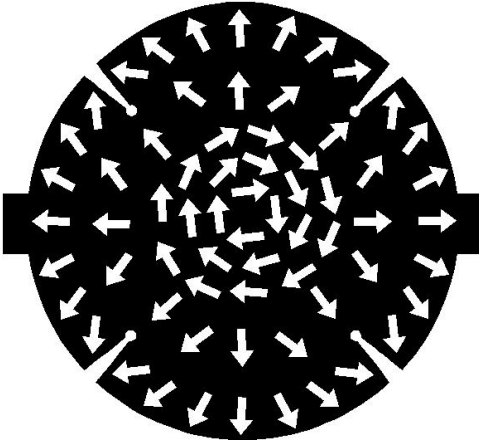

Start by cleaning all debris off the headlights by using clean water and a towel. Be sure not to leave any lint or fibers behind from the towel.

Grab hold of one handling tab (try not to touch the adhesive beyond the tabs), and then carefully remove the backing liner from the Lamin-x. Be gentle around the split seam areas. Once the liner is removed, you can center up the Lamin-x onto the headlight. Do a visual alignment as best as possible and then lightly apply the film down from one handling tab to the other. Do this as many times as you need until it is even at both edges. Once lined up pull the sides of the Lamin-x back up, but leave the very center still applied. Now for the fun part:

Starting in the very center, apply the Lamin-x in a circular/spiral motion working your way outwards. Keep any wrinkles or fingers-as we like to call them-as small as possible by distributing the film evenly and over a larger area. Once you get close to the small eyes of the split seams, go ahead and apply the Lamin-x towards them. Then apply the four areas by pressing your way outward evenly and incrementally. Again, do not allow the Lamin-x to bunch up in any large areas. Keep the wrinkles or fingers as small as possible. If they get too big, then

pull the Lamin-x back up and reapply it back down and try again. When mating the seams together, be sure to have them meet side-by-side and not overlap.

Once you get the Lamin-x applied all of the way to the edge, just trim off the handling tabs with a razor blade. No need to cut deep, just lightly score the outside layers. You might have some small folds or areas around the edges that don't want to stay down after installation. If this happens, just clean your fingers really well and keep them lubricated with water, peel that problem area up and reapply down using a side-to-side wiper motion with your squeegee or thumbs. This will help distribute the Lamin-x over a larger area.