



## PPM-541003-08 JEEP JK RUBICON FRONT SWAY BAR MOTOR RELOCATION KIT INSTALL INSTRUCTIONS


### GENERAL NOTES:

- These instructions are also available on our website; [www.polyperformance.com](http://www.polyperformance.com). Check the website before you begin for any updated instructions and additional photos for your reference.
  - The Poly Performance JK front sway bar motor relocation is a bolt on installation but does require minor trimming and cutting with tin snips or cut off wheel.
- \*\*\*\*\*Apply only to a Rubicon Model with a disconnecting stabilizer (anti-sway) bar.


1. Remove the bottom rear bolt in the disconnecting stabilizer bar housing as shown.




2. Remove the disconnecting stabilizer bar tension link bolt.

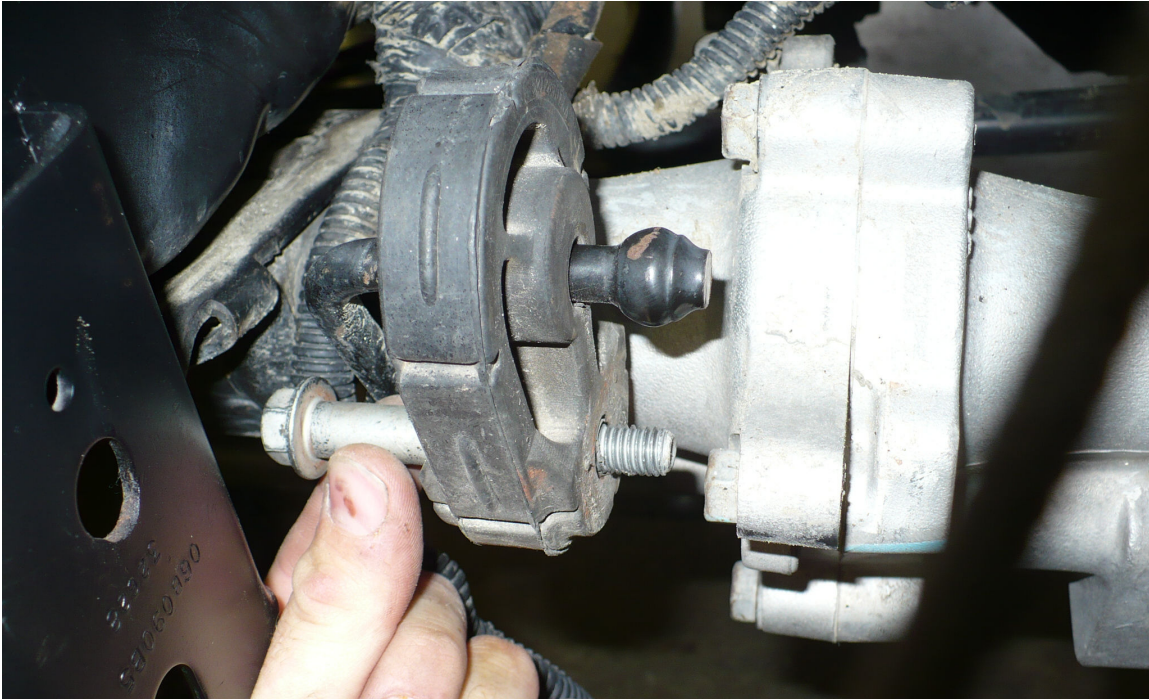

3. Loosen the front stabilizer bar retainer bolt on the passenger side to lower the stabilizer bar enough to rotate the disconnecting stabilizer bar unit up and in front of the radiator. You will need to notch the lower radiator plastic cover to clear the electrical plug.

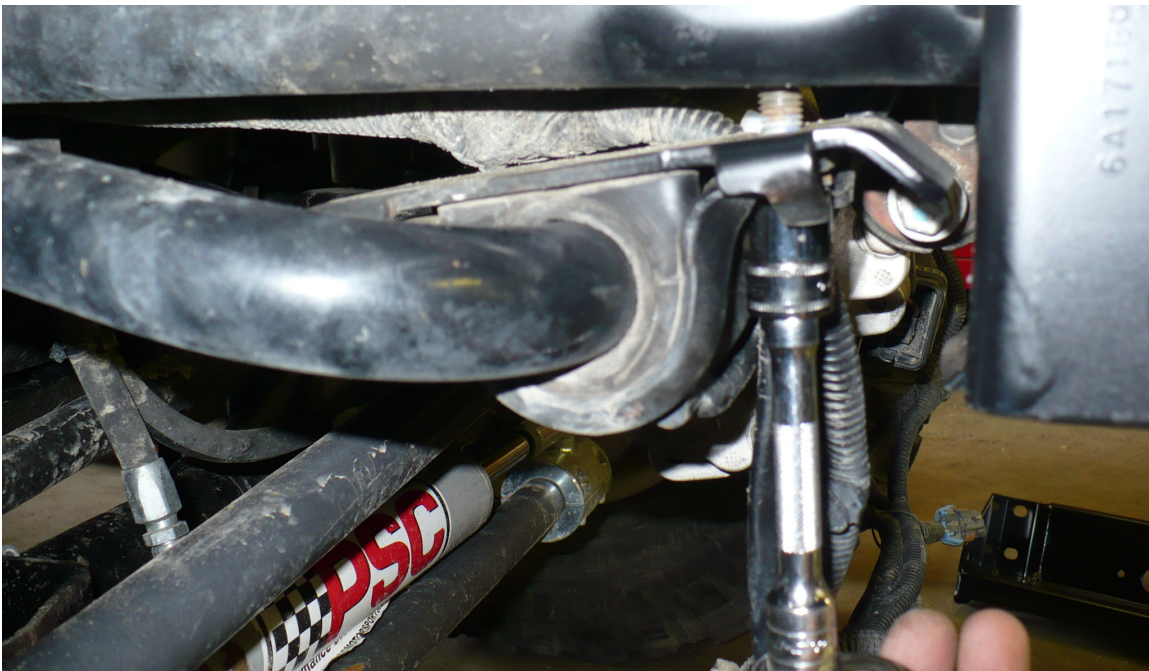

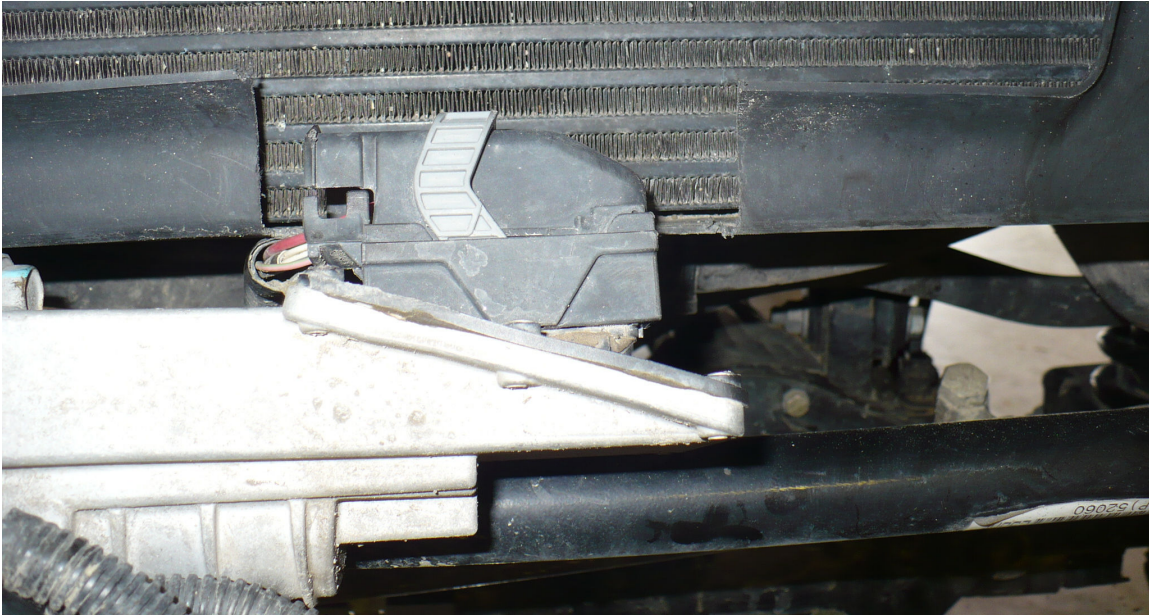

4. Tighten the front stabilizer bar retainer bolt. To 45 ft-lbs.
5. Install the M10 x 100 bolt with a 3/8" washer and sleeve thru the stabilizer bar tension link into the disconnecting stabilizer bar housing where you removed the bolt in step 5. Tighten to 20 ft-lbs.

