



CFE PRODUCTS

MODEL # YJ-SPKUP

Jeep Wrangler YJ Dash Speaker Upgrade Kit '87 to '95

Please take note that in order to show clear pictures of the installation procedure, we used a YJ Dash Board that was removed from the vehicle.

You will not need to remove your Dash to install the new speakers.



INSTALLATION INSTRUCTIONS

The First Step Is Very Important, So Pay Attention!

Driver's Side Speaker Installation





1. Position the Black Template Plate on the Dash Board with the Top Edge just covering the First Speaker Slot as shown in picture #1. The Alignment Pins of the Template should be inserted into the first WIDE slot which is the 4th Slot down from the top and the 1/4" Drill Hole should be facing the Driver's Door. (Picture #2 shows an **incorrect** positioning of template...you should not see the slot above the Template.)

2. Using the 1/4" Drill that is supplied in the Kit, carefully Drill a hole as shown in picture #3. This will remove the speaker stud that is inaccessible without removing the entire Dash.

3. Using a Phillips Screw Driver, remove the two screws that hold the Plate to the Dash shown in picture #4. This plate will restrict your access to the speaker.


4. Undo the Speaker Wire Plug from the Factory Speaker. Picture #5 shows where the Plugs are located. If your Factory Plugs have already been cut off, you will use the Color Code Chart on page 3 of the instructions to install the After Market Speaker Plugs that are included in the Kit.

5. Using the Speed Nut Removal Tool that was supplied with the Kit, remove the 3 remaining nuts from the Speaker. Shown in picture #6.

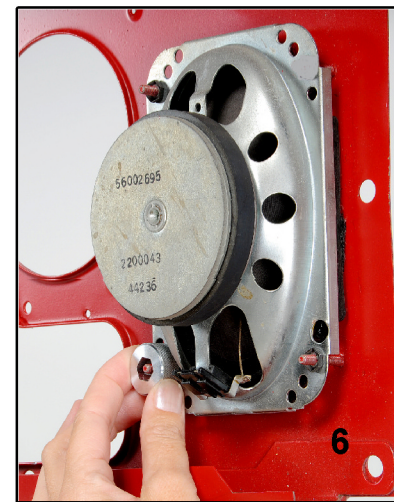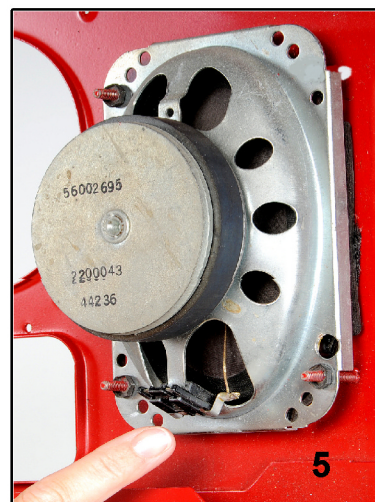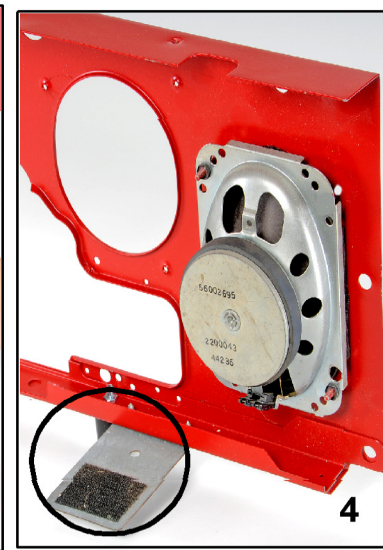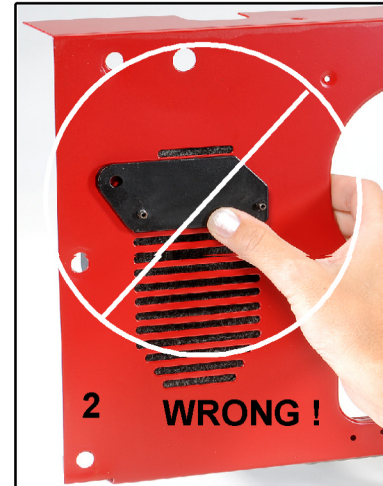

Questions or Comments ? call CFE PRODUCTS @

610 358 1886 / ASK FOR BOB

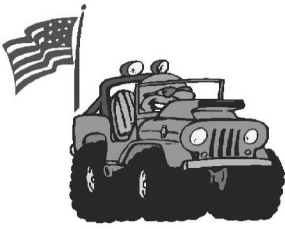

CFE PRODUCTS

MODEL # YJ-SPKUP

Jeep Wrangler YJ Dash Speaker Upgrade

Kit '87 to '95

INSTALLATION INSTRUCTIONS

6. You are now ready to remove the old Speaker.

7. When trying to remove the Speaker, pull the Speaker off from the bottom two studs first. The third stud, shown in picture #7 may require you to reach up and bend the stud down to allow the speaker frame to clear the dash brace. Straighten stud after removal. (*Only a very slight bend will be required...don't break it off.*)




8. Slide the Black Spacer Plate onto the Studs as shown in picture #8. Make sure that the Notches on the Plate are on the top and face away from the Dash as shown by the arrow in picture #8.

8. Plug the Speaker Wire into the Speaker Plug. (See page 3 if your Factory Plugs were cut off)

9. Slide the Speaker Labeled "Driver Side" onto the Studs with the Label Arrow pointing down as shown in picture #9.

10. Attach the 3 Speed Nuts to the 3 remaining Studs and tighten using the Speed Nut Tool as shown in picture #10.

11. Using a Phillips Screw Driver, install the #8/32 Black Machine Screw in the Hole you Drilled in the Dash as shown in picture #11.

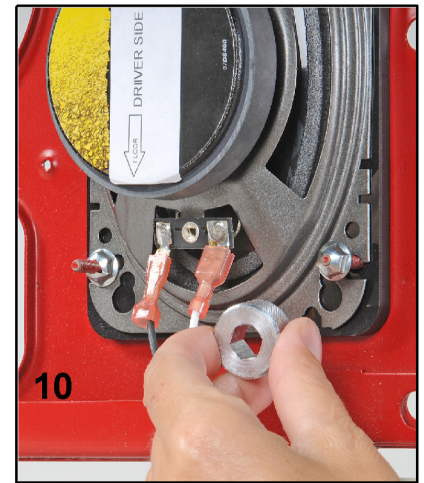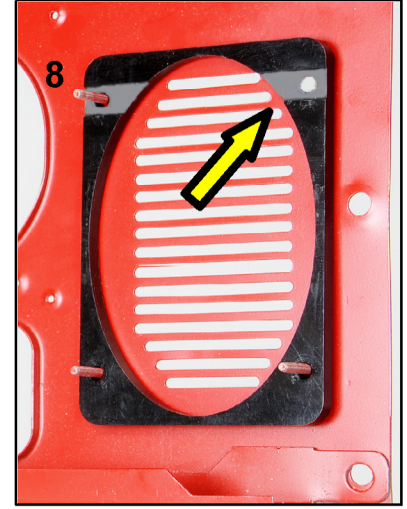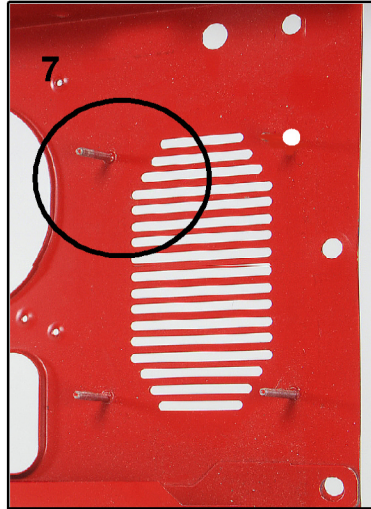

Passenger Side Installation

Repeat the same procedure used for the Driver's Side Speaker to install the Speaker Labeled "Passenger Side." Pictures # 12 & 13 show the proper positioning of the Black Template plate for the Passenger Side Speaker. The Template will be flipped so that the 1/4" Hole in the template will face the passenger door.



If your Factory Speaker Plugs have been cut off, see page 3 for detailed instructions on how to proceed.

Questions or Comments ? call CFE PRODUCTS @
610 358 1886 / ASK FOR BOB



CFE PRODUCTS

MODEL # YJ-SPKUP

Jeep Wrangler YJ Dash


Speaker Wire Identification Page

This Page is Only Necessary if Your Factory Speaker Plugs In the Dash Have Been Cut Off.

If your **Factory Speaker Plugs** have been cut off, you will need to identify the speaker wires using the pictures below. You will attach the **Gray & Black Speaker Leads** that come with the Kit using the **Red Crimp Connectors** that are supplied with the Kit. See pictures below. In order to attach the **Gray & Black Leads** you will need to remove the **Factory Plugs** from the New Speakers.

Driver Side

1. Two Dash Wires : Brown w/ Red Stripe attach to Gray Speaker Lead w/ Black Stripe. (Neg. Lead)
2. Two Dash Wires: Green attach to the Gray Wire. (Pos. Lead)

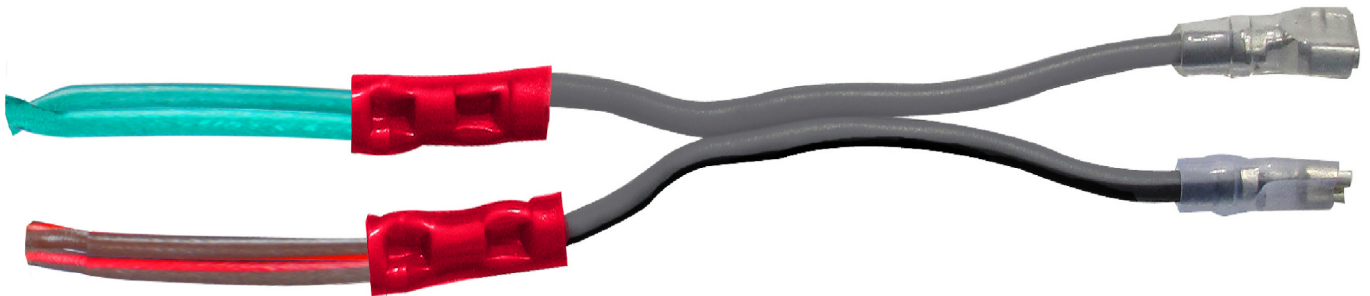

Passenger Side

1. Two Dash Wires : Blue w/ Red Stripe attach to Gray Speaker Lead w/ Black Stripe. (Neg. Lead)
2. Two Dash Wires: Purple attach to the Gray Wire. (Pos. Lead)

