




SPLASH GUARDS

for AEV Rear Bumper

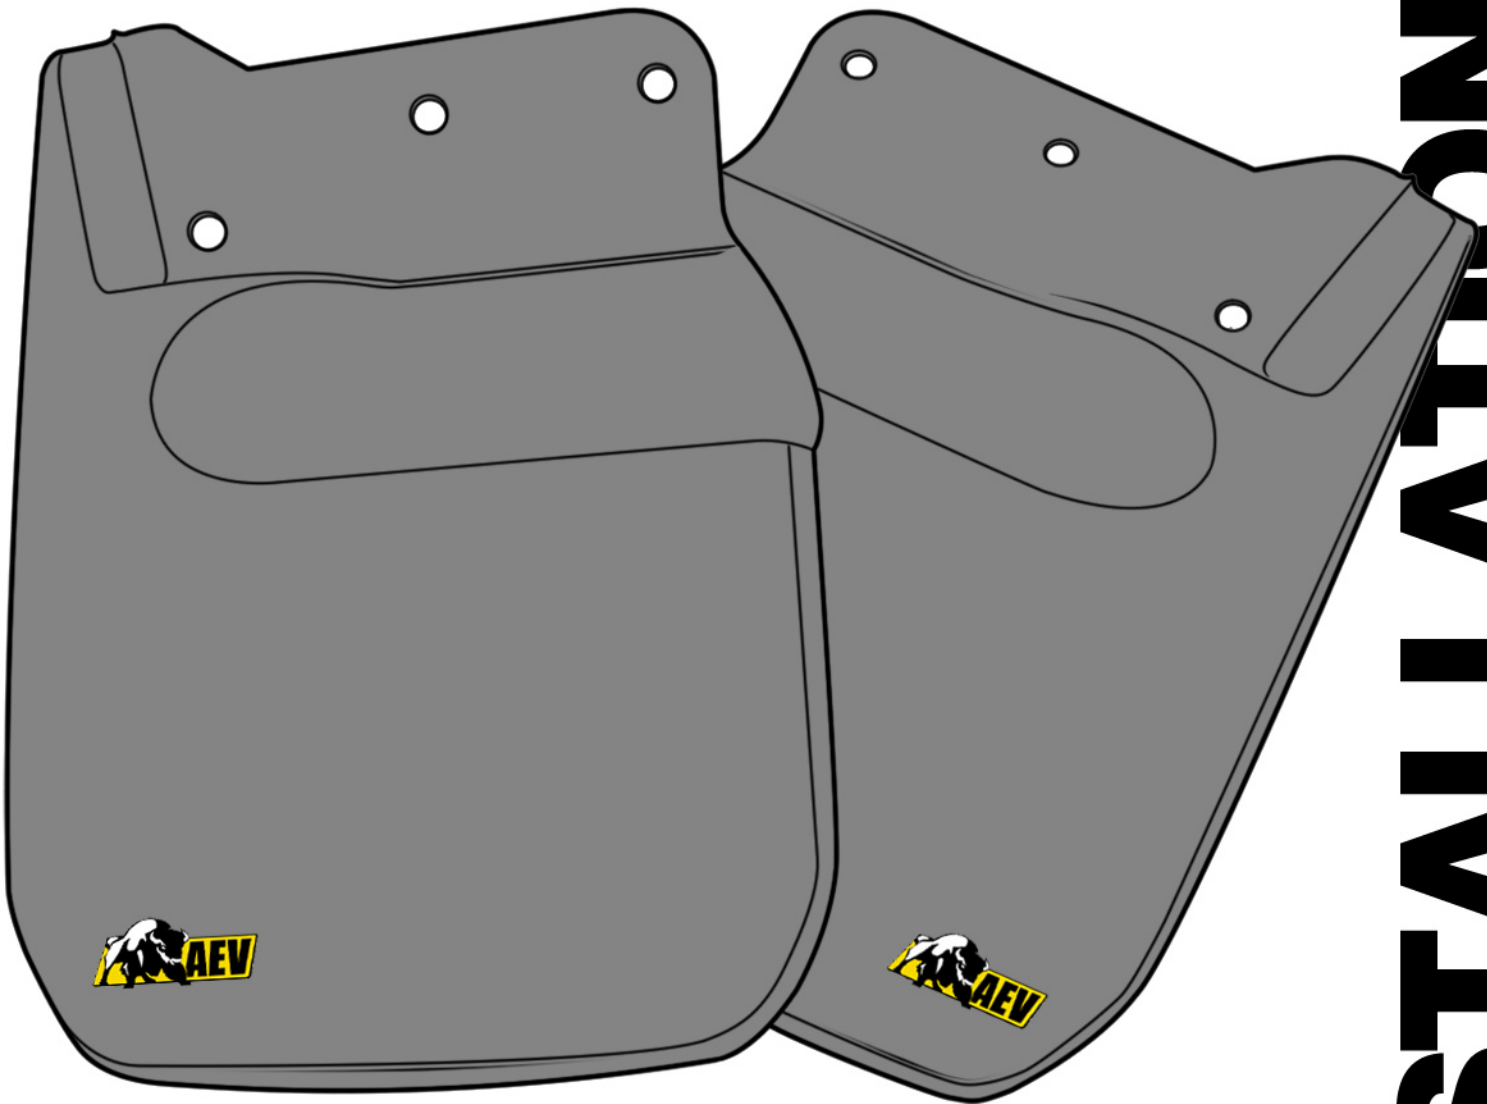

INSTALLATION GUIDE



PLEASE READ BEFORE YOU START

TO GUARANTEE A QUALITY INSTALLATION, WE RECOMMEND READING THESE INSTRUCTIONS THOROUGHLY BEFORE BEGINNING ANY WORK. THESE INSTRUCTIONS ASSUME A CERTAIN AMOUNT OF MECHANICAL ABILITY AND ARE NOT WRITTEN OR INTENDED FOR SOMEONE NOT FAMILIAR WITH AUTO REPAIR.

Included Parts


Splash Guard, right
Splash Guard, left
Hardware Pack

QTY


1
1
1

Required Tools


Common hand tools

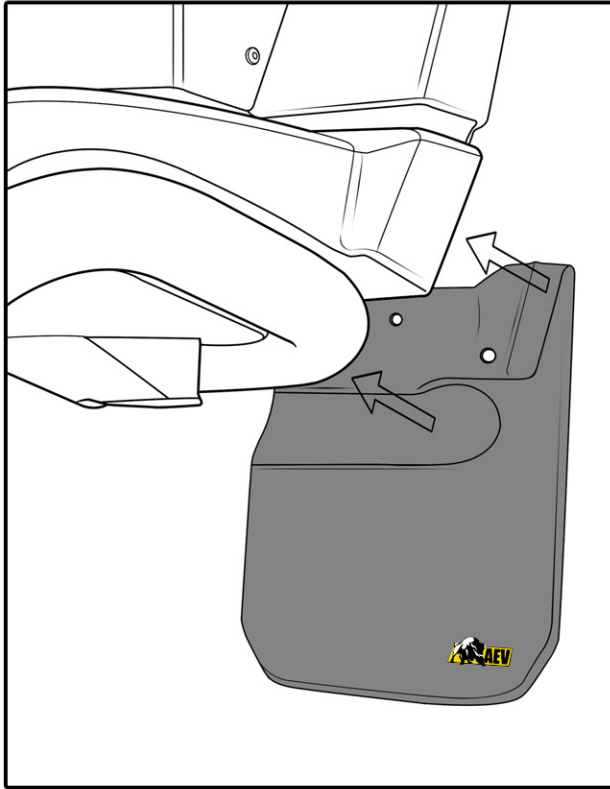

1.

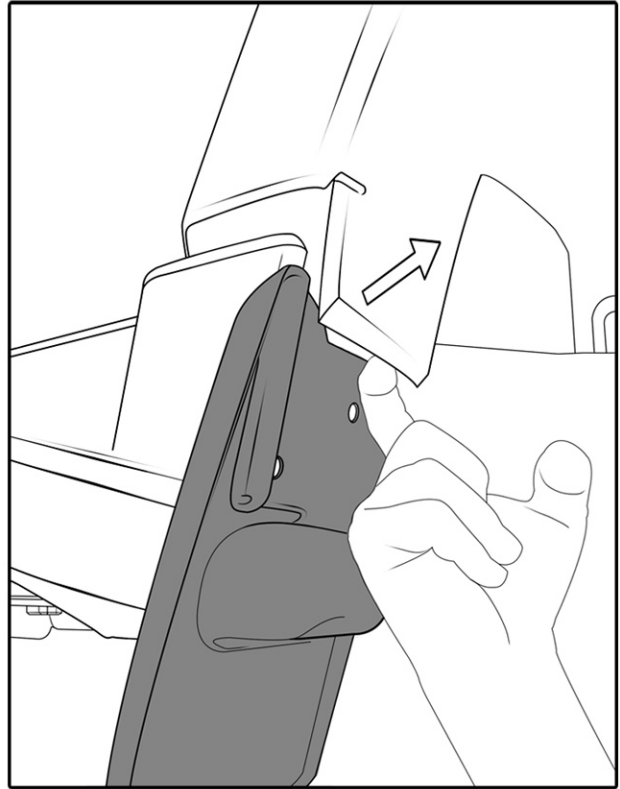


2.

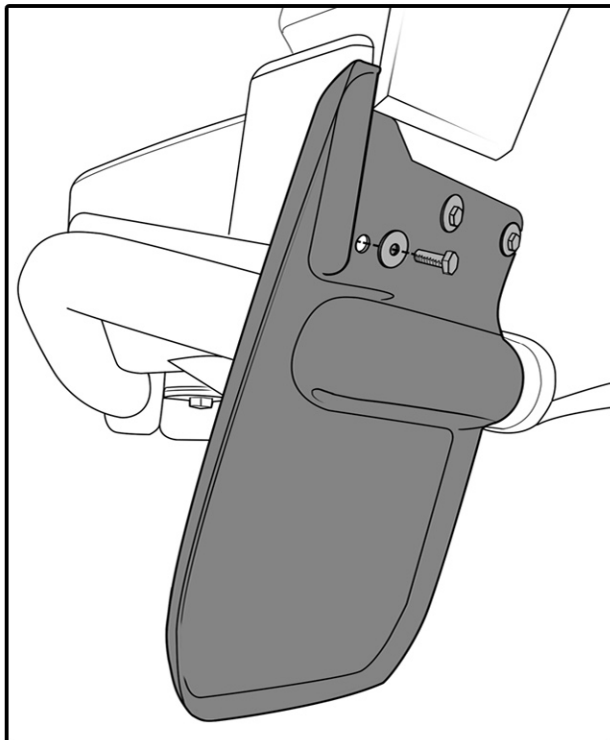

3. Hand tighten bolts.

IMPORTANT NOTE: IF INSTALLING FOR THE FIRST TIME ON A BUMPER PREVIOUSLY INSTALLED ON THE VEHICLE, DEBRIS MAY HAVE ACCUMULATED IN TANK THREADS. USE A 1/4"-20 TAP TO CLEAN THE THREADS AND MAKE SURE BOLT INSTALLS FULLY BY HAND BEFORE TIGHTENING. AEV WILL NOT WARRANT AGAINST BROKEN BOLTS IN TANK THREADS.

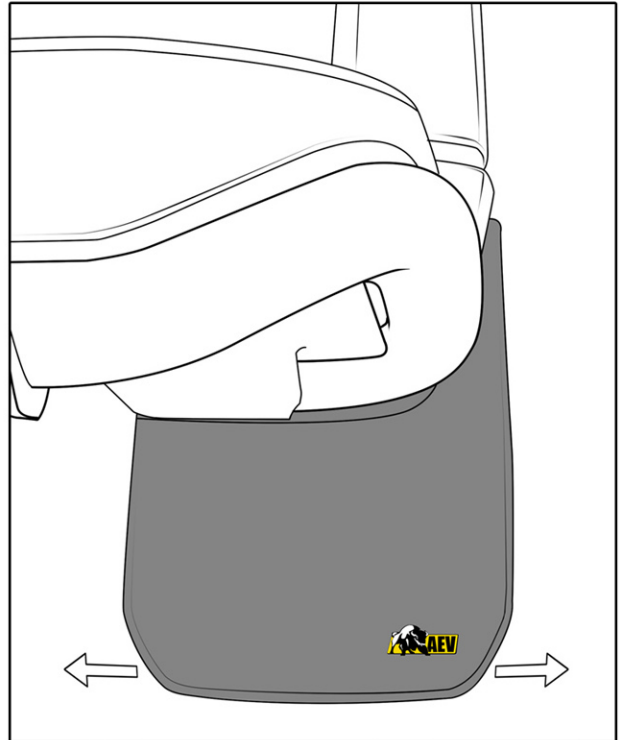

4. Make any alignment adjustments before final tightening.
Torque to 10 ft-lbs max.