



INSTALLATION INSTRUCTIONS

VEHICLE	HITCH NO.
JEEP GRAND CHEROKEE	75139 87601

EQUIPMENT REQUIRED:
WIRING ACCESS LOCATION: SUV3
DRILL BITS:
HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.
WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 18mm, 19mm

DO NOT EXCEED LOWER OF TOWING VEHICLE MFR'S RATINGS OR

HITCH TYPE ▼	MAX GROSS TRLR WT(LB)	MAX TONGUE WT(LB)
WEIGHT DISTRIBUTING	7500	750
WEIGHT CARRYING BALL MOUNT	5000	500

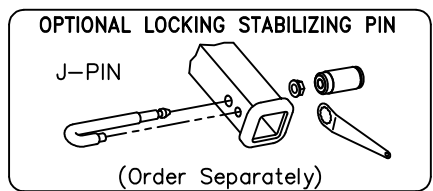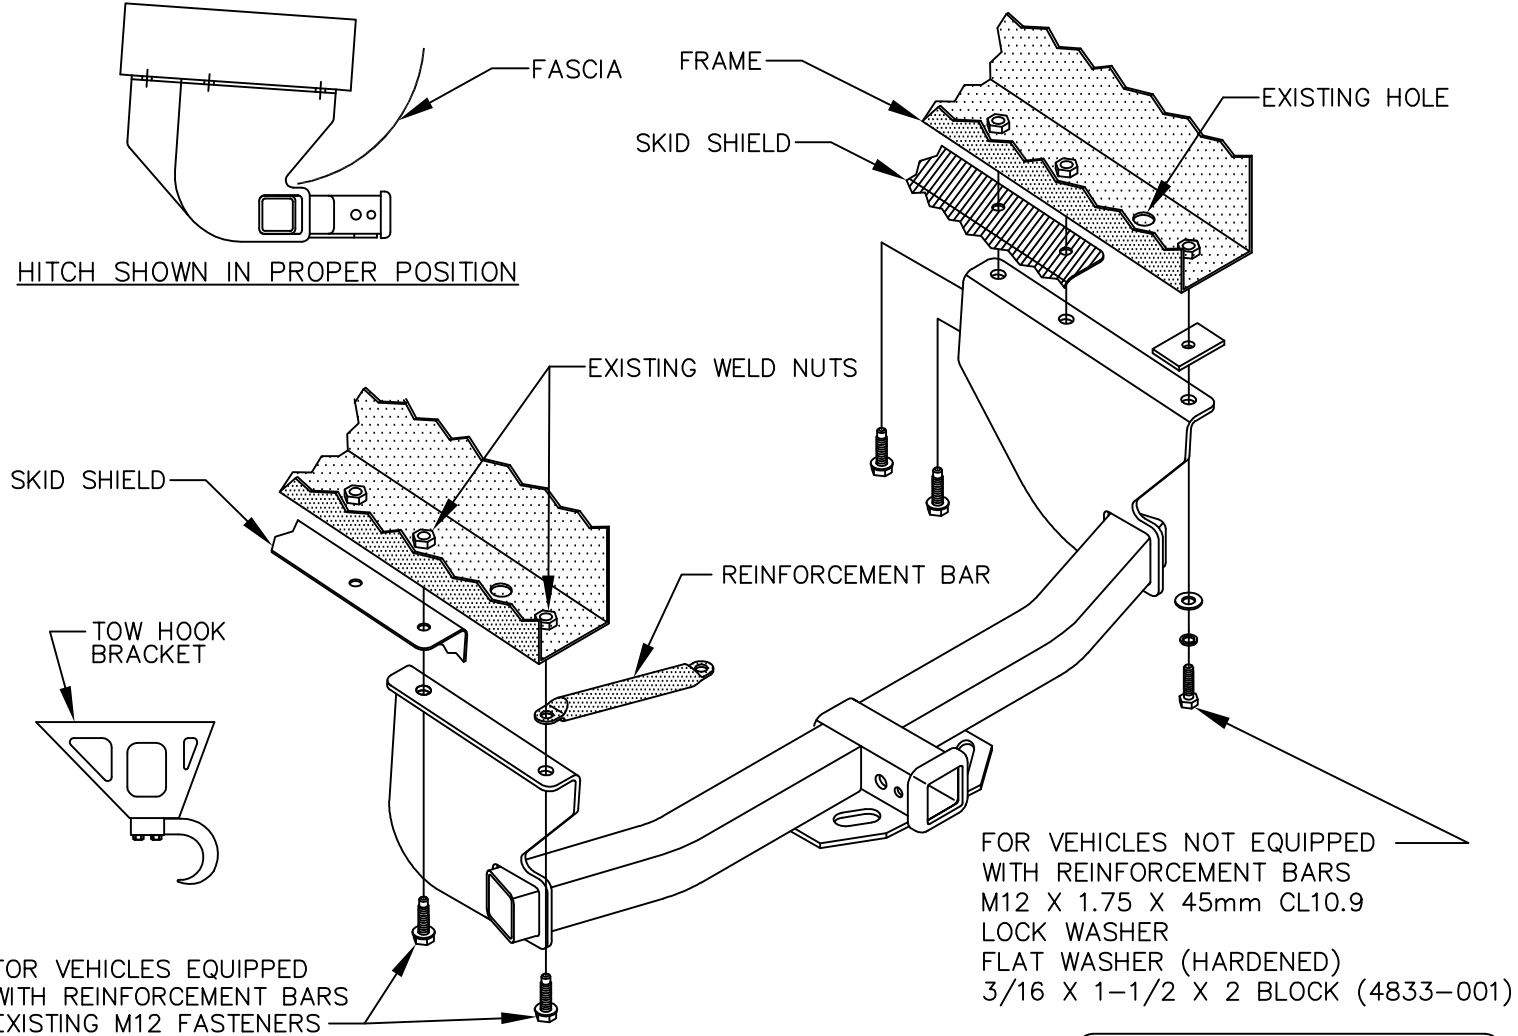

NO DRILLING REQUIRED

1. REMOVE TOW HOOK BRACKET IF PRESENT.
2. REMOVE THE M12 FASTENERS FROM THE FIVE REARMOST VEHICLE FRAME WELDNUTS. THE SKID SHEILD WILL REMAIN IN PLACE.
3. RAISE HITCH INTO POSITION AND INSTALL/RE-INSTALL FASTENERS AS SHOWN ABOVE.
 NOTE: USE EXISTING FASTENERS IF VEHICLE IS EQUIPPED WITH REINFORCEMENT BARS.

TIGHTEN ALL M12 CL10.9 FASTENERS TO 75 LB-FT.

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX WEIGHT (LB.)	42.8	FASTENER KIT NO.	F75139
---------------------	------	------------------	--------

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.

