


# DETERMINATION HEADLIGHT BEZEL

## INSTALLATION INSTRUCTIONS

### STEP 1: FACTORY BEZEL REMOVAL

A) Using a #15 torx driver remove the 3 screws holding the factory headlight bezel.

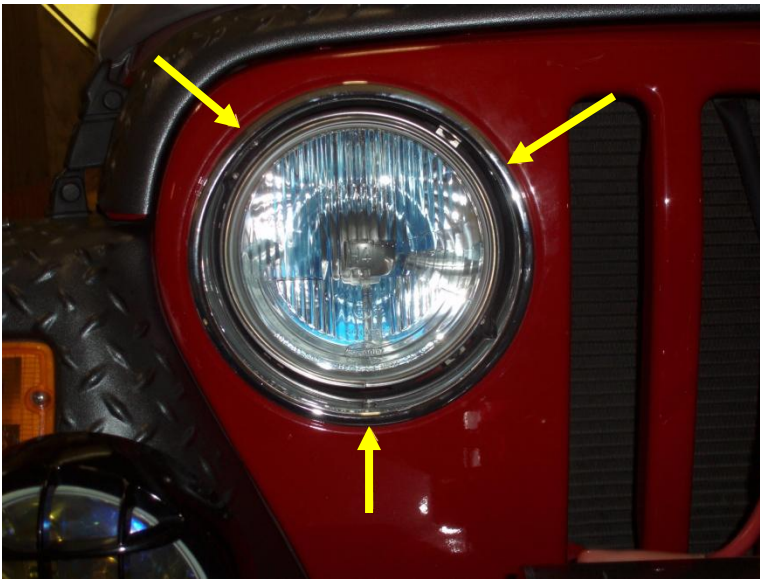

B) There are 2 molded plastic tabs inside the factory bezel that snap it into place. To remove the factory bezel, flex the part toward the inside and pull outward.



## STEP 2: EYEBROW BEZEL INSTALLATION

A) Place the eyebrow bezel in the opening around the headlight aligning the 3 holes in the part with the plastic screw grommets in the grill.



B) Using a #15 torx driver fasten the bezel to the grill with the 3 screws previously removed



Installation complete!