

Tread Lightly® Ultimate Floor Liner

Installation & Use Instructions

⚠️ WARNING ⚠️

Unsecured Front Liners may shift, restricting pedal movement which may lead to loss of vehicle control. **TO AVOID RISK OF SERIOUS INJURY: Front Driver's Side Liner Must Be Secured with EITHER anchor that came with your Jeep® or carpet anchor available from Quadratec (Part #12999.1007). Replace carpet anchor if damaged or missing. DO NOT STACK OR USE OTHER LINERS OR MATS under your Ultimate Floor Liner. Floor Liner MUST be anchored directly to carpet. READ AND FOLLOW ALL INSTRUCTIONS.**



For CJ-7 and '87-'06 Jeep® Wrangler (YJ/TJ) Vehicles without factory carpet anchor hook

Your Quadratec Ultimate Floor Liners are designed by Jeep® experts to be the most satisfying interior floor liners you have ever used! If you do not agree, we want to know right away.

Package Contents:

- (2) Front Floor Liners - or -
- (2) Front and (2) Rear Floor Liners

Floor Liner Installation

Step 1:

Permanently remove all existing factory or aftermarket floor mats or liners. Do not stack or combine your new floor liners over any other floor mats or liners. For best results, we recommend vacuuming your vehicle carpet before installation.

Step 2:

Refer to separate Instruction sheet titled "Floor Liner Carpet Anchor" for steps to properly install a floor liner anchor (hook) on the driver's side carpet.

Step 3:

With Floor Liner Carpet Anchor in place, put driver side liner into position and put carpet anchor hook through the hole in the floor liner. Install passenger & rear floor liners and check for proper fit.

Use and Enjoy! Enter and exit vehicle in foul weather without worry about your carpet. When floor liners are dirty, simply remove as needed and hose them off.

Limited Lifetime Warranty:

See other side of this sheet and save for your records.

Thank You and enjoy!

Your \$5.00 contribution (contained in the cost of these ultimate floor liners) will go a long way to helping Tread Lightly! preserve open space.

Tread Lightly! provides outdoor ethics for all types of outdoor recreation - everything from hiking to hunting to camping, with a special focus on motorized & mechanized recreation - like four wheeling, motorcycling, snowmobiling, and boating. The organization's goal is to balance the needs of people who enjoy outdoor recreation with our need to maintain a healthy environment. Tread Lightly! is leading the way to help remedy current recreation issues. With your purchase of this item, you are now supporting these worthy goals!

tread lightly!®
ON LAND AND WATER



Limited Lifetime Warranty

QUADRATEC FLOOR LINERS

Your Quadratic® Ultimate Floor Liner is covered by the following **Limited Warranty** provided exclusively by Quadratic Inc, 1028 Saunders Lane, West Chester PA 19380. This **Limited Warranty** is the only warranty made in connection with purchase. Quadratic® neither assumes nor authorizes any vendor, retailer or other person or entity to assume for it any other obligation or liability in connection with this product or **Limited Warranty**.

What is covered:

Subject to the terms, exclusions and limitations herein and with respect only to products first sold in the United States, Quadratic® warrants to the initial retail purchaser only that your Ultimate Floor Liner shall be free of defects in material and workmanship for so long as your Ultimate Floor Liner is owned by the initial retail purchaser. All other warranties are hereby disclaimed, except to the extent prohibited by applicable law in which case any implied warranty of merchantability or fitness for a particular purpose on this product is limited to 1 year from date of initial retail sale. Quadratic® reserves the rights to: (a.) require invoice or other proof your Ultimate Liner is within the terms of this **Limited Warranty** as a condition of warranty service and, (b.) make future revisions to this product and **Limited Warranty** without prior notice or obligation to upgrade your product.

What is not covered:

Your Quadratic® **Limited Warranty** does not cover products Quadratic® determines to have been damaged by or subjected to: (a.) installation damage, alteration, modification or failure to maintain or attempted repair or service by anyone not authorized by Quadratic®, (b.) normal wear & tear, fading, cosmetic damage or damage from mechanical or environmental force, (c.) Acts of God, accidents, misuse, negligence, inadequate mounting or impact with vehicle(s), obstacles or other aspects of the environment, (d.) theft, vandalism or other intentional damage.

Remedy Limited to Repair/Replacement:

The exclusive remedy provided hereunder shall, upon Quadratic® inspection and at Quadratic's option, be either repair or replacement of product or parts (new or refurbished) covered under this Limited Warranty.

Customers requesting warranty consideration on Ultimate Floor Liners should first contact Quadratic® to obtain a RGA number (610-701-3336). All labor, removal, shipping and installation costs are customer's responsibility.

Other Limitations - Exclusion of Damages - Your Rights Under State Law:

In consideration of the purchase price paid, neither Quadratic® nor any independent Quadratic® distributor/licensee are responsible for any time loss, rental costs, or for any incidental, consequential, punitive or other damages you may have or incur in connection with any part or product purchased. Your exclusive remedy hereunder for covered parts is repair/replace-ment as described above.

This **Limited Warranty** gives you specific rights. You may also have other rights that vary from state to state. For example, some states do not allow limitations of how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you.

© Quadratic, Inc. All Rights Reserved. 6/1/12 Revision



The Trusted Source

#12999.0204

Floor Liner Carpet Anchor

Installation Instructions - For CJ-7 & '87-'02 Wrangler without Carpet Anchor

⚠ WARNING ⚠

Unsecured Front Liners may shift, restricting pedal movement which may lead to loss of vehicle control. **TO AVOID RISK OF SERIOUS INJURY: Front Driver's Side Liner Must Be Secured with EITHER anchor that came with your Jeep® or carpet anchor available from Quadratec (Part #12999.1007). Replace carpet anchor if damaged or missing. DO NOT STACK OR USE OTHER LINERS OR MATS under your Ultimate Floor Liner. Floor Liner MUST be anchored directly to carpet. READ AND FOLLOW ALL INSTRUCTIONS.**

Quadratec supplies an original equipment style carpet anchor for vehicles that are NOT originally equipped with one. As an added safety precaution, install this anchor on the driver's side of the vehicle to prevent your Ultimate floor liner from interfering with any pedals. Always ensure free movement of all pedals before driving. Most '03-'06 Wrangler vehicles came with a factory carpet anchor. This piece is also a direct replacement.

Kit Contents:

- (1) Carpet & Floor Mat Anchor (#12999.1007)
- (1) Adhesive Carpet Hook Template (#12999.1009)

Tools Required:

- Sharp Hobby Knife (i.e. X-acto Knife)

Carpet Anchor Installation

Step 1:

Permanently remove all existing floor mats or liners. Do not stack or combine your floor liners over other floor mats or liners. Vacuum the vehicle carpet and make sure it is completely dry.







Step 2:

Place the driver side liner into position and slide the carpet hook template underneath driver side floor liner. Align the green tear drop so it is completely visible through tear drop opening in the liner. See photos A & B.



The Trusted Source

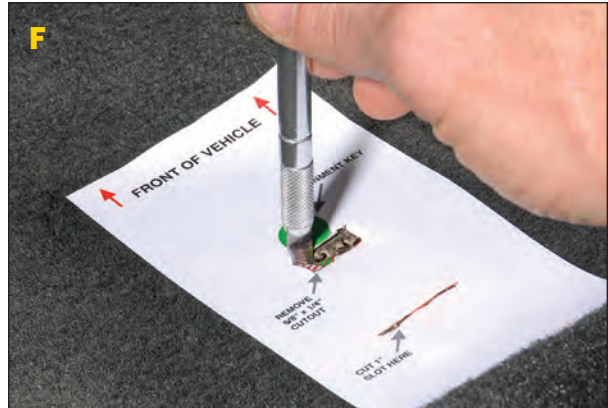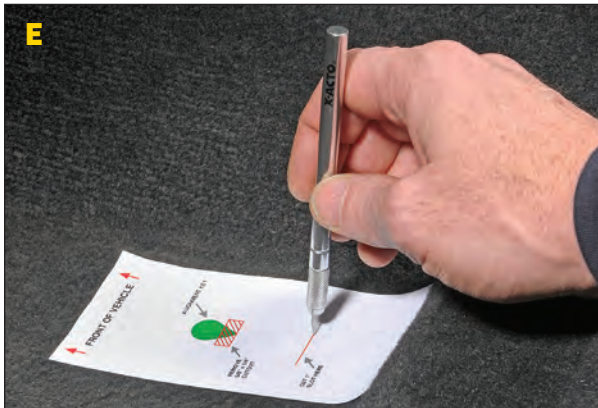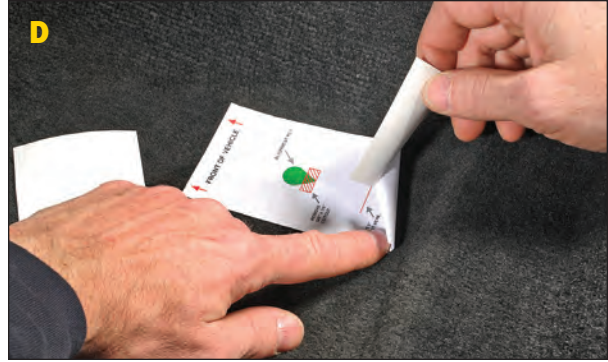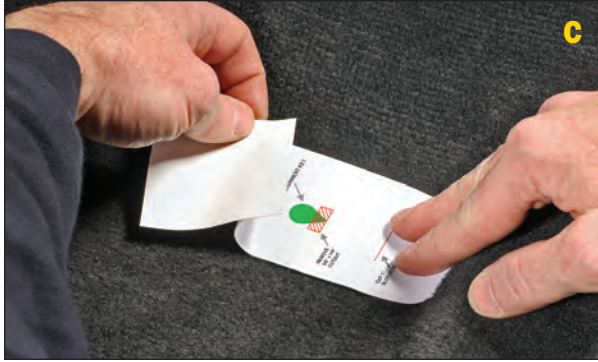

Step 3:

Carefully lift and remove the liner without moving the template. While pressing down on the template to maintain its position, peel back and remove one half of the sticker backing and press the template into place. See photo C. Remove the other sticker backing half and press the template to ensure contact with the carpet. See photo D. Replace the liner to check that proper alignment is maintained. If the green teardrop is still fully aligned as in photo B, move to step 4. If not, replace the backing to the sticker and repeat step 2.

Step 4:

Using a sharp hobby knife, cut the carpet along the red cut lines. First cut a 1" slot and then remove a small 5/8" wide x 1/4" piece of carpet. See photos E & F. Do not cut beyond the designated cut lines. Remove the template and install the anchor as shown in photos G & H. The teardrop points to the rear of the vehicle. Install your mat and check for proper fitment. See sheet "Ultimate Floor Liner Installation & Use Instructions"



The Trusted Source

#12999.1019
6.1.12 Revision