

# CFE PRODUCTS

## JK CUSTOM HEAVY DUTY BATTERY TERMINALS

### MODEL #JK- HDBT12

#### Jeep Wrangler JK / 2012 & UP





**Whenever working on your battery, always disconnect the Negative Terminal First.**

1. Disconnect the Negative Battery Terminal.
2. Take one of the Brass Buss Bars included in the kit and install it on the Negative Battery Terminal on the unused stud as shown in picture A. Secure it with the Brass Extension Nut as shown in picture A2. Install the Green or Black Battery Pad included in the kit on the Battery Post but **DO NOT** reattach the Negative Battery Terminal yet.
3. Remove the Positive Battery Terminal and install the Red Battery Pad on the Battery Post. Re-install the Positive Battery Terminal to the Battery.
4. Remove the Green Wire attached to the Positive Battery Terminal shown in picture B. Install the Battery Buss Bar using the Brass Extension nut shown in picture C.
5. Reinstall the Green Wire which was disconnected in picture A, under bolt D.
6. Reattach the Negative Battery Terminal.

The picture below shows the connection of an optional accessory.

7. You are now finished installing your Heavy Duty Battery Terminals.
8. Both Bolts on top of the Brass Extension Nuts should be used for adding High Current Accessory such as a winch or high powered audio system.
9. The Bolts on the Flat Buss Bars can be used for additional accessories such as running lights etc...

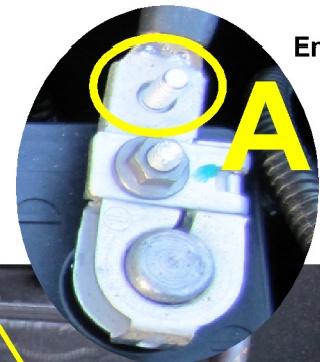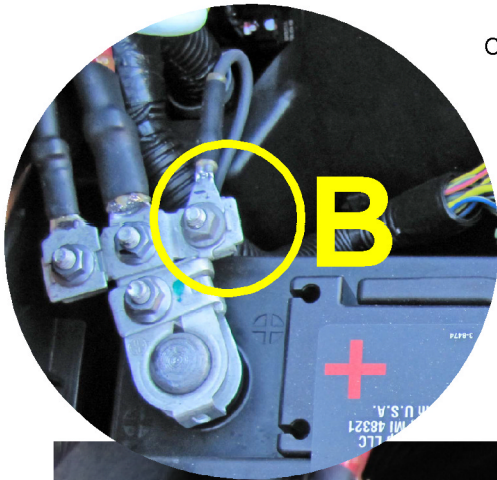

Empty stud

