


INSTALLATION INSTRUCTIONS

Part No. 30467

Billet Style Stone Guard Set

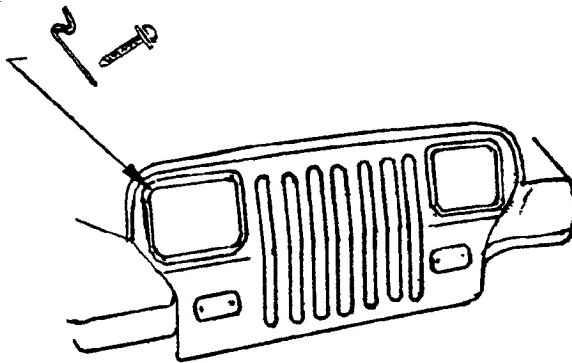

Instructions:

Remove the four screws holding the Headlight Bezel in place. Take wire mesh clips (4 total per side) and fasten, using flat washers and screws provided.

