

#1= Align mount plate holes with clamp plate holes (in cross beams **D**) and attach mount plates **08** with bolts **G**, lock washers **K**, and flat washers **L**, finger tight so mount can easily slide on cross beams.

#2= Next move factory luggage rack cross bars to each end of rails so Safari rack can be mounted between factory cross bars. (It is not necessary to completely remove your existing cross bars).

#3= Adjust mount plates **08** in or out along rack cross beams so it rests on rails and rack is centered from side to side with equal distance on all end caps to mounting plates. Now position clamp **07** into rail groove and attach to plate **08** using cap screws **M** lock washers **K** and flat washers **L**.

#4= Now snug mounting hardware in place after locating your rack in desired location front to rear. Measure to ensure equal distance from all end caps to mounting plates, (see diagram #1a). Tighten bolts **G** after rack has been centered side to side to lock in place.

#5= Next tighten all bolts and your installation is complete!

HARDWARE KIT FOR CHEROKEE TYPE MOUNT


G
(8 ea.)
5/16" x 3/4"
Hex Bolt



K
(16 ea.)
5/16"
Lock Washer



L
(16 ea.)
5/16"
SAE Flat Washer

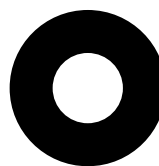

M
(8 ea.)
5/16-18 X 5/8"
Button Head Cap Screw



Shown Actual Size