



OMIX-ADA, Inc.

460 HORIZON DR. SUITE 400 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com


GENERAL INSTALLATION INSTRUCTIONS FOR TAPE MOUNT ACCESSORIES

Read all instructions thoroughly before installation.


Failure to follow instructions could result in poor attachment of item.

NOTICE For proper installation, bonding surface and item should be between 4-38°C (40-100°F) prior to application.


1. Test fit item to the vehicle before removing plastic liner from mounting tape. This will aid in aligning the item before adhesion
2. Clean bonding surface with an untreated, lint-free cloth and isopropyl alcohol (rubbing alcohol).
3. Apply 3M Adhesive Promoter 06396 to bonding surface. Avoid areas that tape will not contact. Allow 90 seconds for Adhesive Promoter to dry before proceeding.
Note: For best results, install item within 10 minutes of applying Adhesive Promoter.

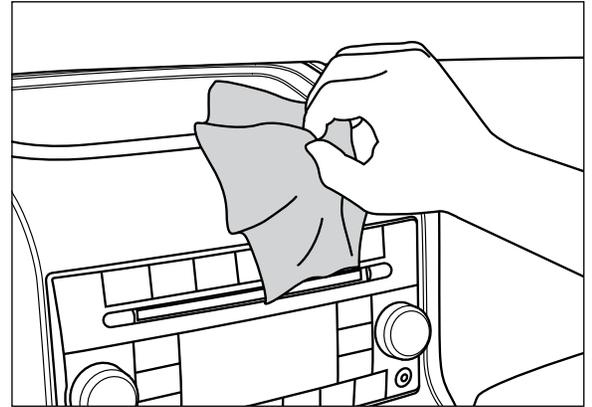

4. Remove only enough plastic liner to be easily gripped when item is installed.
Note: The plastic liner of the shorter tape sections may need to be fully removed before installing.
5. Install item in proper mounting position while keeping partially removed liner ends accessible.

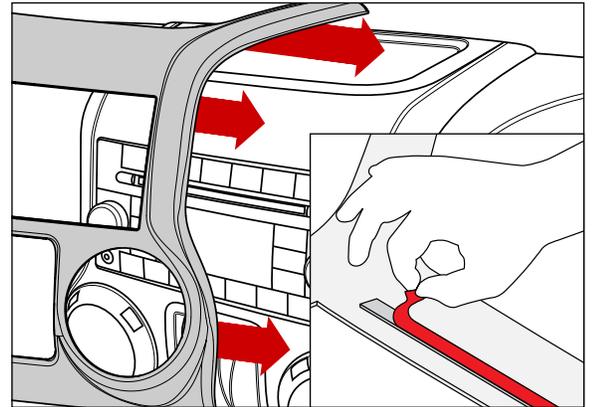

6. Firmly hold item in proper mounting position while pulling the exposed plastic liner to completely remove. Maintain pressure on installed item for 60 seconds to ensure proper contact. Full adhesion occurs within 24 hours of application.

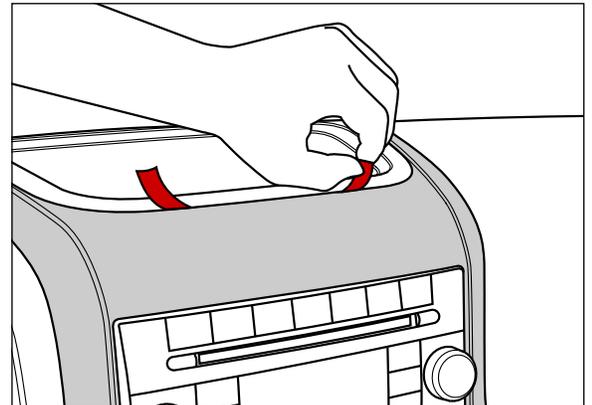

NOTICE Areas where Adhesive Promoter may be visible can be cleaned with isopropyl alcohol (rubbing alcohol).

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com