



1907 Woodland Ave.
Coffeyville, KS 67337
Phone: (620) 251-9100
Fax: (620) 251-2622

INSTALLATION INSTRUCTIONS YJ MODEL SHELF FOR THE YJ MODEL JEEP

1. Turn sunvisors down against inside of windshield.
2. Install trim-lok (M) onto shelf front lip by gently tapping with a rubber or wooden mallet until trim-lok is completely seated as shown in Fig. 3.
3. Open the circular brackets (B) and slip around side roll bars attaching the circular brackets to each side of the shelf (A) with the 5/16" x 3/4" carriage bolt (C), 5/16" flat washer (D), and 5/16" nyloc nut (E) provided. Do not tighten hardware.
4. Attach center bracket (I) to shelf using the 1/4" pan head screw (F), 1/4" flat washer (G), and 1/4" nyloc nut (H) provided. Do not tighten hardware.
5. Attach slip joint bracket (J) to center bracket (I) using 3/16" flat washer (L) and 3/16" nyloc nut (K) provided. Do not tighten hardware. Slide shelf forward toward windshield until slip joint bracket (J) clamps around windshield loop as shown in Fig. 2. Tighten 3/16" nyloc nut (L) securing windshield loop between center bracket (I) and slip joint bracket (J).
6. Tighten all remaining hardware at this time. Place the provided non-skid shelf lining into completed shelf.

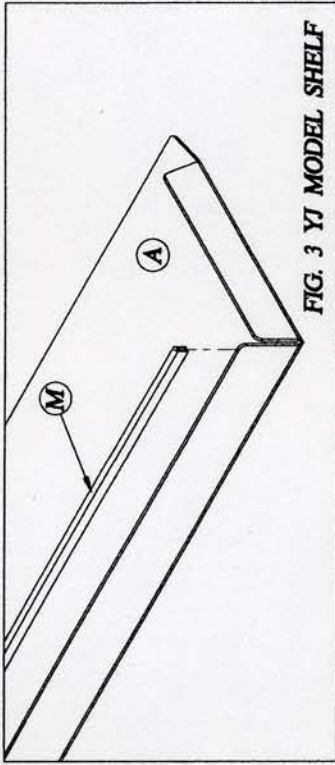


FIG. 3 YJ MODEL SHELF

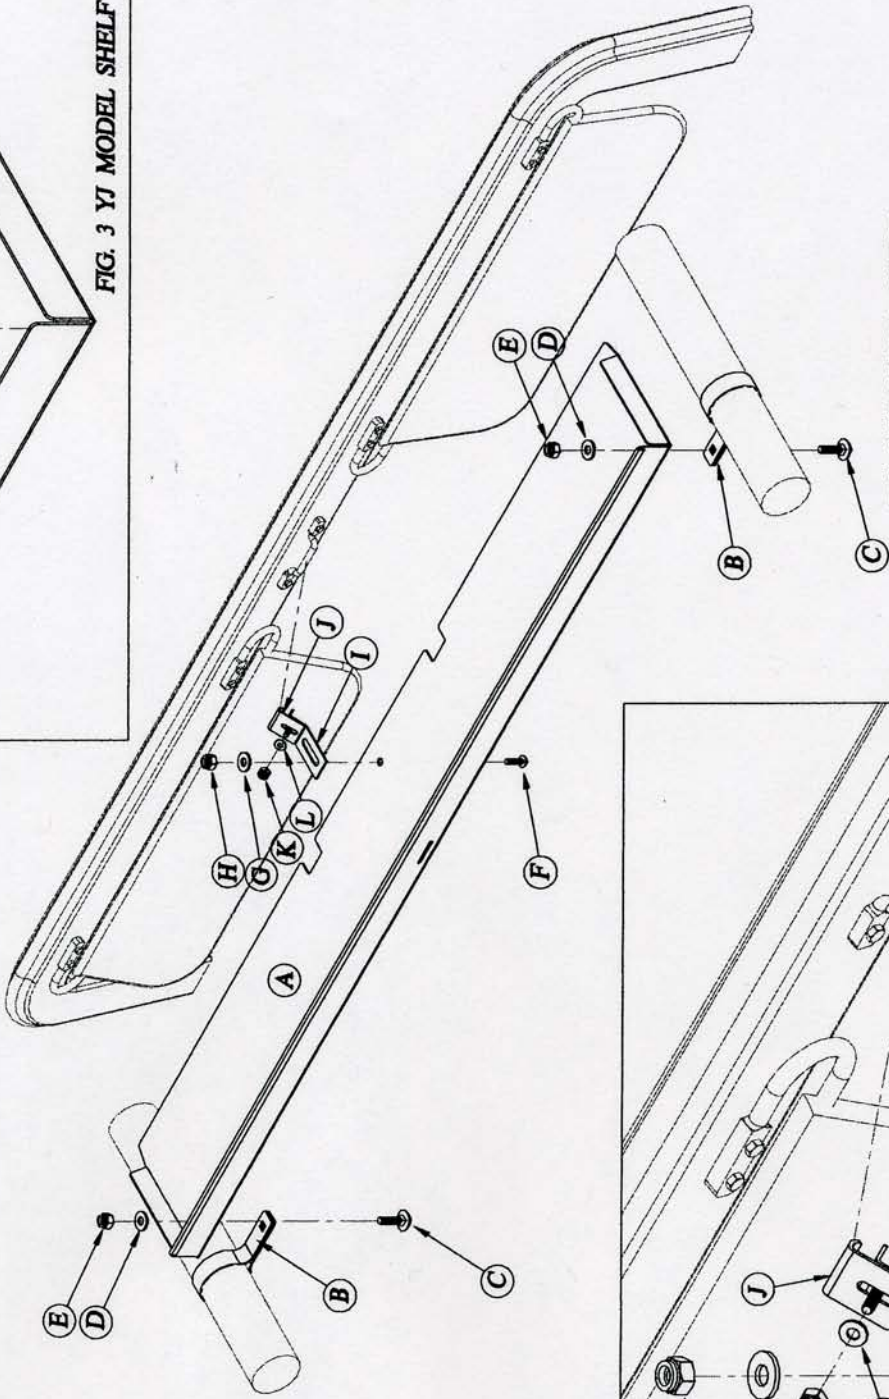


FIG. 1 YJ MODEL SHELF

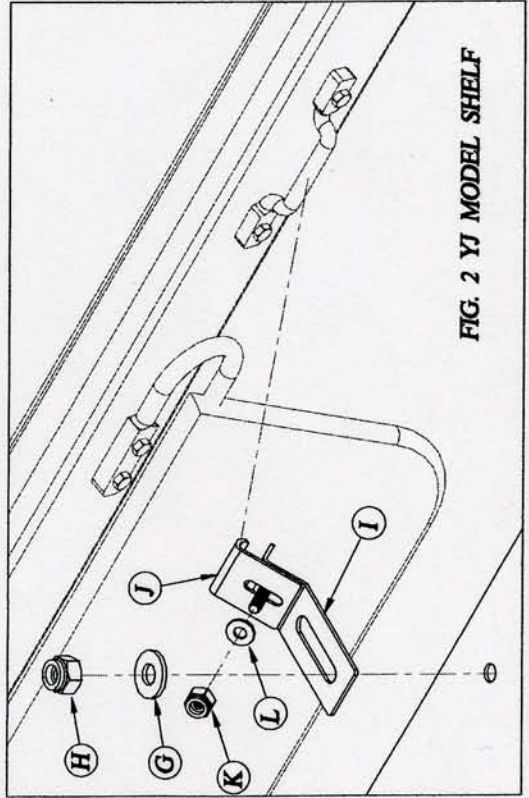


FIG. 2 YJ MODEL SHELF