



CFE PRODUCTS

CUSTOM SPEAKER UPGRADE KIT

MODEL # MFK - XJR 9701 [REAR]

INSTALLATION INSTRUCTIONS

REAR SPEAKERS

YOUR CUSTOM SPEAKER KIT IS PLUG & PLAY , AS LONG AS YOUR ORIGINAL WIRING HAS NOT BEEN CUT.

STEP 1: USING A FLAT EDGE OR A TRIM STICK GENTLY REMOVE THE SPEAKER GRILL AS SHOWN IN FIG # 1

STEP 2: REMOVE THE TWO TORX SCREWS AND REMOVE THE FACTORY SPEAKER, AS SHOWN IN FIG # 2

STEP 3: PLUG THE NEW SPEAKER IN, AND REINSTALL. MAKE SURE TO USE THE TWO MODIFIED SLOTS ON THE KICKER SPEAKER FRAME TO MOUNT THE SPEAKER, AS SHOWN IN FIG # 2, 3 & 3A , 4

STEP 4: REINSTALL THE GRILL, AS SHOWN IN FIG # 6



SPECIAL NOTE

IF YOUR FACTORY PLUGS HAVE ALREADY BEEN CUT OFF , REMOVE THE FACTORY PLUG FROM THE KICKER SPEAKER AND USE THE OPTIONAL JUMPER LEADS SHOWN IN FIG # 5


THE GRAY WIRE WITH THE BLACK STRIP IS THE NEGATIVE LEAD
THE GRAY WIRE IS THE POSITIVE LEAD.

Left Rear Speaker Wire (+): Brown/Yellow

Left Rear Speaker Wire (-): Brown/Light Blue

Right Rear Speaker Wire (+): Dark Blue/White

Right Rear Speaker Wire (-): Dark Blue/Orange

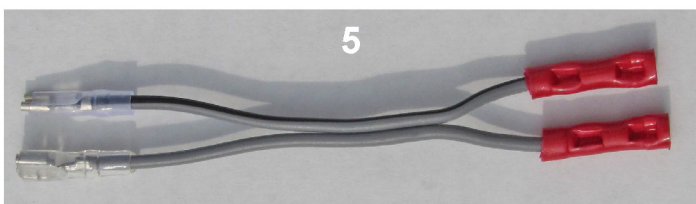

Questions or Comments ? call CFE PRODUCTS
@ 610 358 1886 / ASK FOR BOB