





## EVO-1072 RCC Rear Roll Center Correction Trackbar Bracket, JK

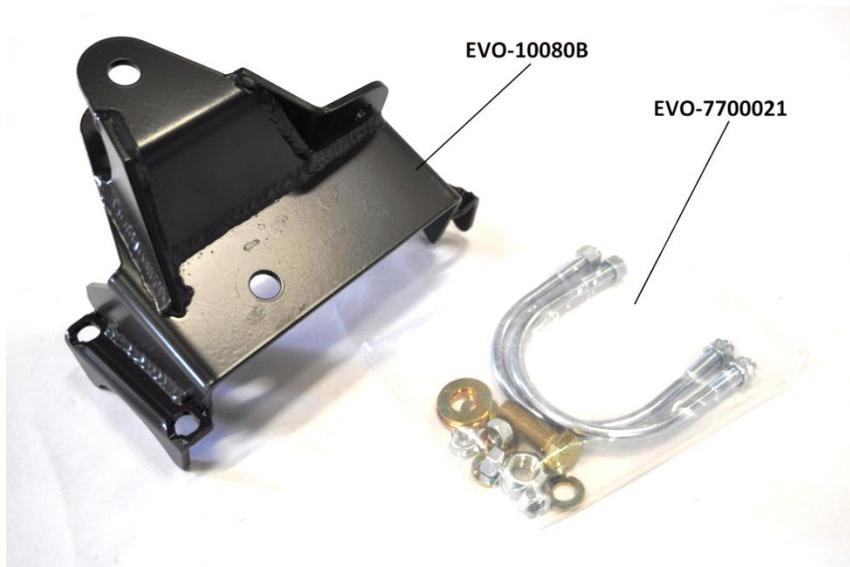

**NOTES: Cutting and grinding is required to complete the installation of the rear roll center correction trackbar bracket. Welding on rear trackbar bracket is recommended after installation.**

	<b>QTY</b>	<b>PART#</b>	<b>DESCRIPTION</b>
☐	1	EVO-760005	BOX 8x8x8
☐	1	EVO-10080B	Rear Trackbar Bracket, JK, Black
☐	1	EVO-7700021	Rear Trackbar Bracket Hardware Pack

1. Park vehicle on level ground.
2. Remove rear trackbar bolt at axle, leave trackbar bolt at frame installed
3. Cut factory rear trackbar as shown. Only remove the rear most part of the bracket.
4. Sand all cuts smooth with flat mounting plate.

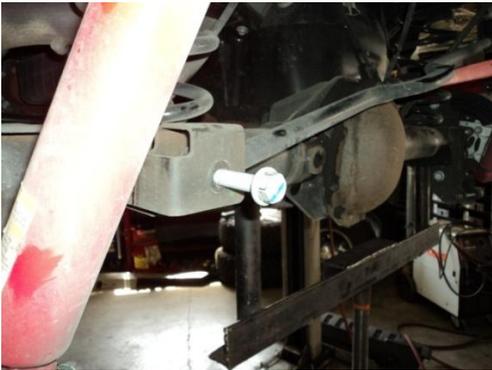

5. Install rear trackbar bracket as shown with supplied 9/16 bolt and U-bolts (make sure to use the locking nuts on the U-bolts).
6. Weld on rear trackbar bracket to axle where ever possible, see photo



7. Reinstall trackbar into new higher location with factory bolt. (torque to factory specifications once vehicle is on ground and at ride height.)

8. Torque lug nuts to factory specifications

9. Torque all bolts to factory specifications
10. Retorque all hardware after 500 miles and every off road trip.