


INSTALLATION INSTRUCTIONS

Part No. 30466

Wire Mesh Stone Guard Set

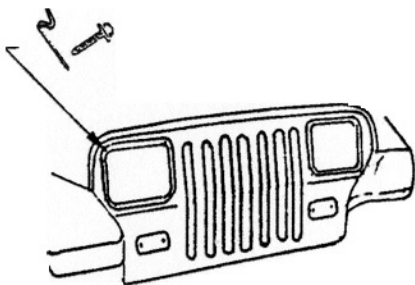

Instructions:

Remove the four screws holding the Headlight Bezel in place. Take wire mesh clips (4 total per side) and fasten, using flat washers and screws provided.

Remove the two screws holding the plastic parking lens in place. Position and align the wire mesh cover and fasten, using screws and washers that are provided.

Remove the four taillight screws holding the plastic lens in place. Position and align the wire mesh cover and fasten, using screws and washers provided.

