





CFE PRODUCTS TJ CUSTOM CB MOUNT MODEL # JW-CBM Jeep Wrangler 1997 to 2006



INSTALLATION INSTRUCTIONS

1. Using one hand to slightly lift up the console, slide the Mounting Bracket onto the console lip as shown in picture #1.
2. Adjust the position of the Mounting Bracket so there is a 1" space between the back of the console and the back edge of the Mounting Bracket as shown in picture #2.
3. Install the Nylon Shim between the Bracket and the console and position in the slot so that the Mounting Bracket is vertically straight as shown in picture #3.
4. Using a 3/16" drill bit, drill a hole in the console as shown in picture #4.
5. Remove the Mounting Bracket from the vehicle and install your CB's bracket using the supplied hardware as shown in picture #5. (your CB bracket comes with your CB)
6. Using the 1" 10/32 Bolt and the Wing Nut, install the Wing Nut behind the console and tighten Bolt as shown in picture #6.
7. Picture #7 shows a finished install. We recommend installing your CB so that the speaker faces out.

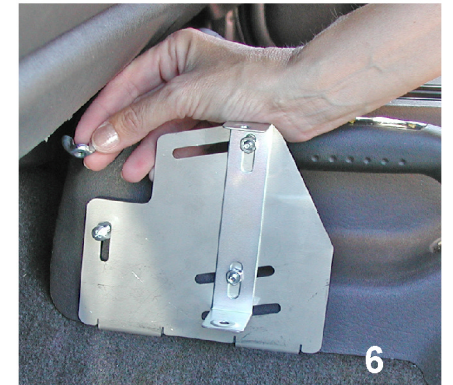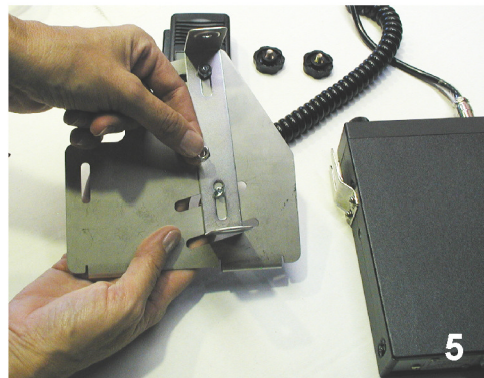

Questions or Comments ?
call CFE PRODUCTS @ 610 358 1886
ASK FOR BOB