



Installation Instructions

Arm Rest

TJ Wrangler

Part#: 769515

Rugged Ridge #: 11830.02

IMPORTANT NOTICE:

Carefully read instructions before attempting to install this product. Rugged Ridge– Outland are in no way responsible for any damage to the vehicle or persona injury that may occur during the installation or use of this product.

INCLUDED COMPONENTS

- 2 – Arm Rest Padding
- 2 – Brackets (Left & Right)
- 4 – Rubber Plugs
- 4 – Sheet Metal Screws
- 4 – Phillips Machine Screws

INSTALLATION INSTRUCTIONS

- 1) Remove the factory door closure strap by unscrewing the two screws holding them in place (Figure 1).
- 2) After removing factory door strap from door panel, there will be two cavities on each door. Use Rubber Plugs to cover cavities (Figure 2).

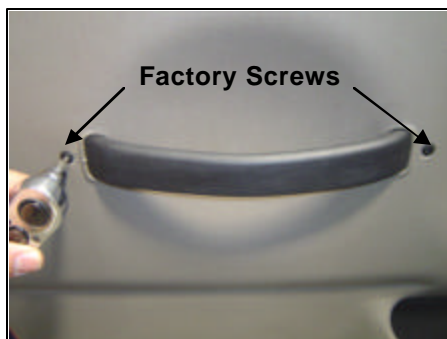


Figure 1

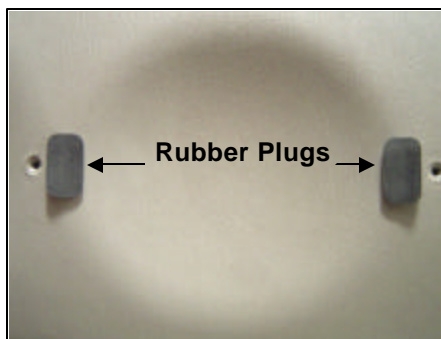


Figure 2

- 3) Attach Bracket to door using the same holes that previously held the factory door closure strap. Use the included Sheet Metal Screws to attach Bracket to door (Figure 3)
- 4) Mount Arm Rest Padding onto Bracket. Use the included Phillips Machine Screws to attach Padding onto Bracket (Figure 4).
- 5) Adjust Padding fore and aft to your position of maximum comfort.

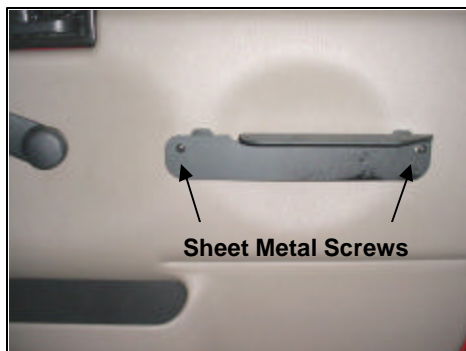


Figure 3

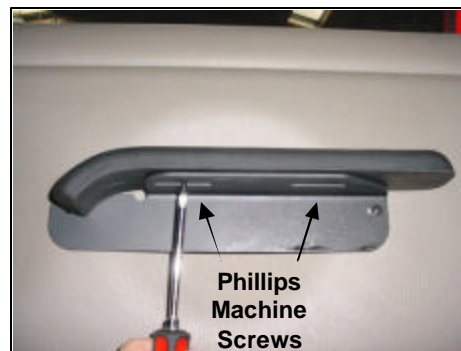


Figure 4