




Accessory Mount/CB Mount #570-500/510

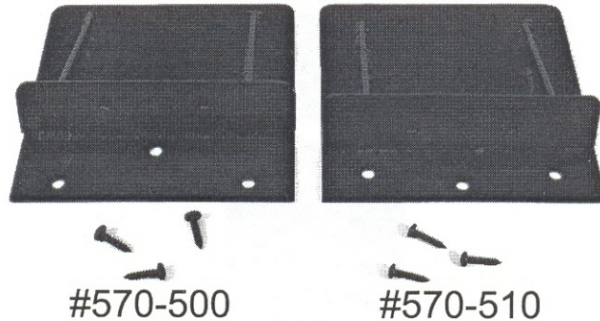

Installation Instructions

1. Make sure that you have correct Part Number of two shown above by hole pattern on lip.
2. #570-500 fits '97-'01 Wrangler. #570-510 fits all YJ Wranglers.
3. Remove original loop on center of windshield frame.
4. Position Mount over mount holes. Mark position of holes to be drilled, using holes on bottom of plate as guide.
5. Remove Accessory Mount. Carefully drill holes for mounting screws.
6. Re-install Accessory Mount. Tighten all screws.
7. Wires can be run inside rubber seal around windshield, or in small wire clamps.
8. Accessories can be mounted to plate in most user convenient position.
9. **Bill of Materials:** (1) Steel Accessory Mount, (3) #10 x 3/4" Sheet Metal Screws