

## **707- 40X HD Tire Carrier**

Replaces your stock wrangler tire carrier with a heavy-duty 3/16" thick steel tire carrier. An excellent upgrade when using the Olympic 4x4 700-Tire swing. You must purchase 1/2" RH thread wheel lug nuts separately, or re-use OEM ones off your old tire carrier. Olympic 4x4 Products are serviced by our factory. We provide answers to installation questions. We ship parts ASAP. Try us before the hassle of returning Olympic 4x4 Products to your retailer or mail order specialist. 707-HD tire carrier is designed to work with Olympics 700-tire swing. While the 707-HD tire carrier will fit onto your wranglers tailgate we highly recommend our 708- HD tire carrier if you want to mount your oversized tire to your tailgate. Fitment is dependent on your tire, wheel, and bumper combination. Wheels with a high amount of backspacing (greater than 4.5") when used with wide tires might not fit when mounted on tailgate.

**For assistance please call (800) 777- 0878.**

### **Hardware List:**

- 3 1/2" wheel studs
- 4 5/16" X 1" hex head bolt
- 4 5/16" flat washer
- 4 5/16" Flange nut

### **Parts list:**

- Tire carrier


### **Optional parts (must be purchased separately)**

- 3 1/2" RH threaded lug nuts      OEM lug nuts can be used
- Or
- 2 1/2" RH threaded lug nuts
- 1 1/2" RH threaded wheel lock

Step 1. Install wheel studs into tire carrier into appropriate holes for your wheel bolt pattern. The top holes are for a 5.5" on 5-bolt pattern and the bottom holes are for 4.5" on 5-bolt pattern. The very bottom hole will be used with both bolt patterns. Install wheel studs by inserting them through tire carrier and either using a press, press them into place or thread on a lug nut and tighten the lug nut until the wheel stud is fully seated.

Step 2. Install tire carrier onto your tail gate or your 700- tire swing using 5/16" X 1" hex head bolts, 5/16" flat washers, and a 5/16" flange nut. To secure on factory tailgate install a flat washer onto the 5/16" hex head bolt and insert it through tire carrier and into the threaded holes in the factory tailgate. We recommend using a medium strength loc-tite on these bolts. To install tire carrier onto Olympic 4x4's 700- Tire Swing, install a flat washer onto the 5/16" hex head bolt, insert bolt through tire carrier, then through mounting holes in the tire swing and then install a flat washer, then a lock washer and secure with 5/16" nut.

Step 3. Install your spare tire onto tire carrier using wheel lug nuts (must be purchased separately), or re-use OEM lug nuts. A wheel lock is recommended to prevent theft of spare tire and must be purchased separately for an auto parts store or Jeep supply store.

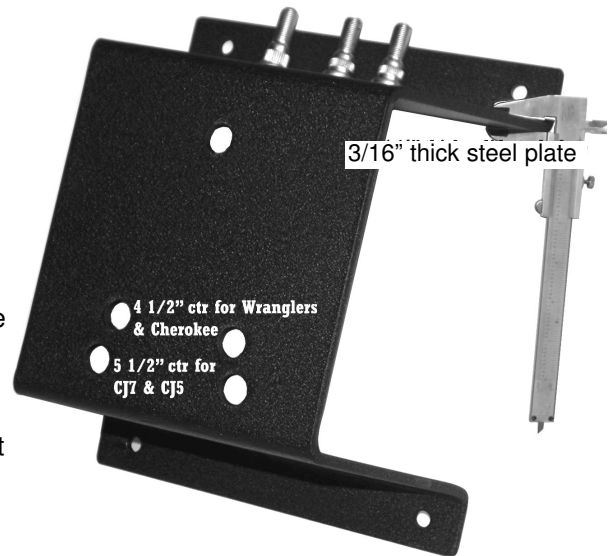

707-HD Tire carrier mounted on a 700-Tire Swing(not included)