

# SMITTYBILT®

## PART# JB44-F/FC/FNO/FTI

Product: Front Bumper

Vehicle: Jeep

Installation Time: 15 min

LEADING MANUFACTURER OF TUBULAR PRODUCTS SINCE 1956!

QTY	PART#	DESCRIPTION
1	JB44-F/FC/FNO/FTI	Front Bumper
1	604426	hardware kit

**\*\*\*NO DRILLING REQUIRED.**


**IMPORTANT:** To obtain correct installation, we recommend you to follow these installation instructions carefully. Please review the instruction sheet before proceeding to install product. Please take care when installing this product to protect the finish and your investment.

Step One: Locate hardware marked 604426. Check contents of 604426 with the hardware listed below.

Qty	Part #	Description
4	901011	1/2 Flat washer, zinc plated USS

Step Two: Remove the stock front bumper from the vehicle. Position the new Smittybilt Bumper up to the frame as the factory bumper. Line up the holes of the front bumper to the holes on the body mount. Using the sock bolts and flat washers supplied secure the bumper to the vehicle.(Fig#1)

Be sure to use all hardware supplied and tighten all bolts.

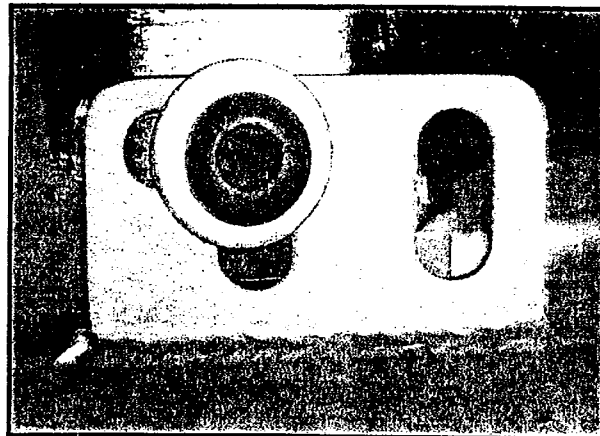

Fig#1

This Bumper is a genuine SMITTYBILT, INC. precision built bumper for that clean look and added protection. It has been designed and engineered to give long lasting service and beauty to your vehicle. Thank you for choosing a SMITTYBILT, INC. product.

For an added protection and appearance, Smittybilt also offers dual tube rear bumpers and Sure Steps for your vehicle, made only by Smittybilt, your tubing specialist since 1956!

702122 Rev A120502