



# Tough Stuff Products, Inc.

## Dash Netz

### READ ALL OF THE INSTRUCTIONS BEFORE STARTING

Check our website for any updated instructions! [www.toughstuffproducts.com](http://www.toughstuffproducts.com) >>  
[Jeep® Accessories](#)>>[NETZ](#)>>[Dash NETZ](#)>>[Installation Instructions](#).

### TOOLS REQUIRED

Scissors

Drill with 3/32" drill bit


Tape

Phillips Screwdriver

### INSTRUCTIONS

Cut template on dotted lines.

Locate the 2 mold mark lines on the front corners of the dash bezel, to do this fold your mirror up and place your head under the mirror, then look down to find the mold mark lines.

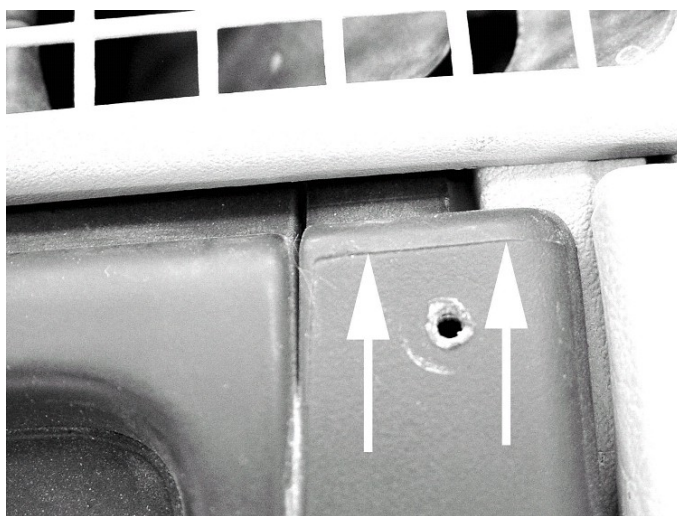


Tape template securely in place.

Drill through template in four (4) marked locations.

Remove template.

Screw 4 snaps into place with Phillips screwdriver. **DO NOT** over tighten, just snug them until the base is flat on the plastic.

Snap Dash Netz into place.

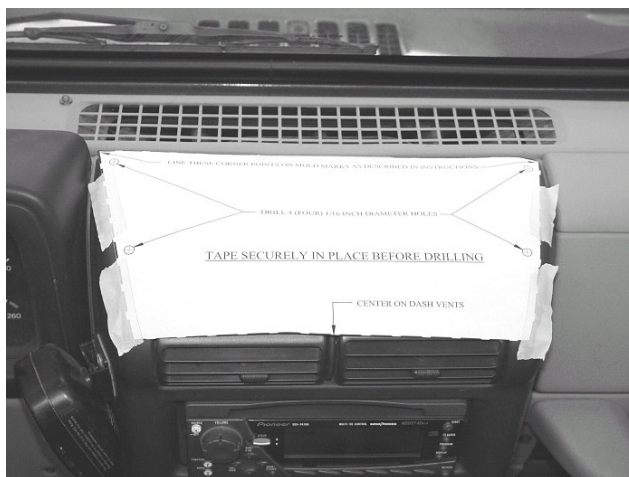

Thank you for purchasing our product. We also manufacture many other body protection and accessory items for your vehicle, our complete product line can be viewed at [www.toughstuffproducts.com](http://www.toughstuffproducts.com).



# Tough Stuff Products, Inc.

## Glove Box Netz

### READ ALL OF THE INSTRUCTIONS BEFORE STARTING

Check our website for any updated instructions! [www.toughstuffproducts.com](http://www.toughstuffproducts.com) >>  
[Jeep® Accessories](#)>>[NETZ](#)>>[Glove Box NETZ](#)>>[Installation Instructions](#).

### TOOLS REQUIRED

Duct tape          Phillips Screwdriver          Ink Pen          Razor knife

### INSTRUCTIONS


Open glove box and slide nylon strap out of it's slot. Let glove box continue downward and remove.

Place glove box face down on soft surface, remove 8 (eight) Phillips screws from the bottom perimeter of the glove box.

Fold open the tray from the box face and cut with the razor knife at the "hinge". Lay this tray aside for now.


Note the top edge of the Glove Box NETZ has an elastic strap and a non-elastic strap, the elastic (stretchy) side faces away from the glove box front when assembled.

Lay the NETZ , elastic side DOWN, on the work surface. Place the glove box face down on top of the NETZ, as pictured.

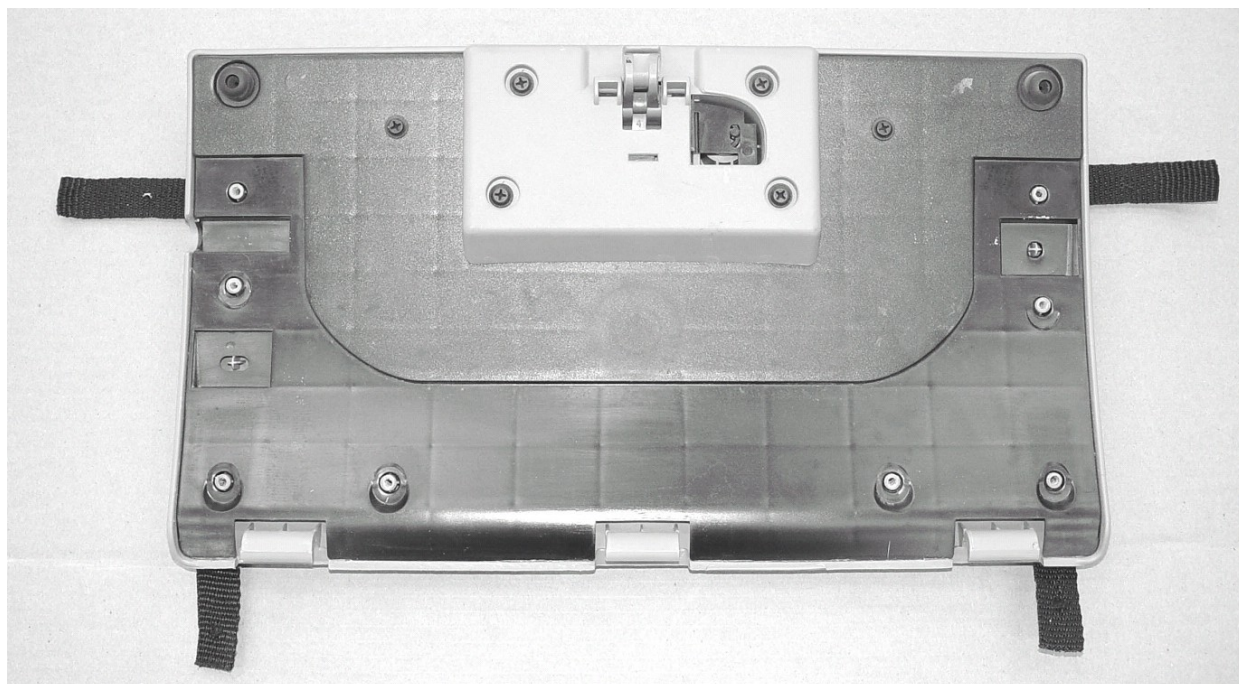


Tear off 4 strips of duct tape approx. 3 inches long.

Stretch the 2 upper straps around the edges of the dash face and tape in place as shown. Make sure the front of the NETZ is centered on the glove box face and the 2 screw holes are centered on the straps. Keep the strap as tight

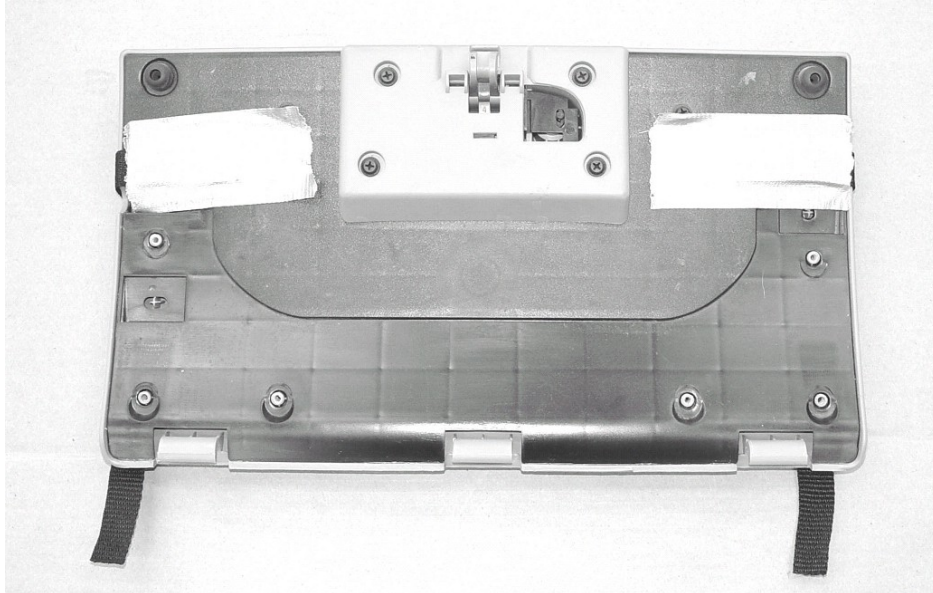

possible.

Pull the lower 2 straps downward until the bottom edge of the NETZ is even with the bottom of the glove box face. Pull the straps around the bottom edge, and then center the straps on the screw holes and tape securely in place.

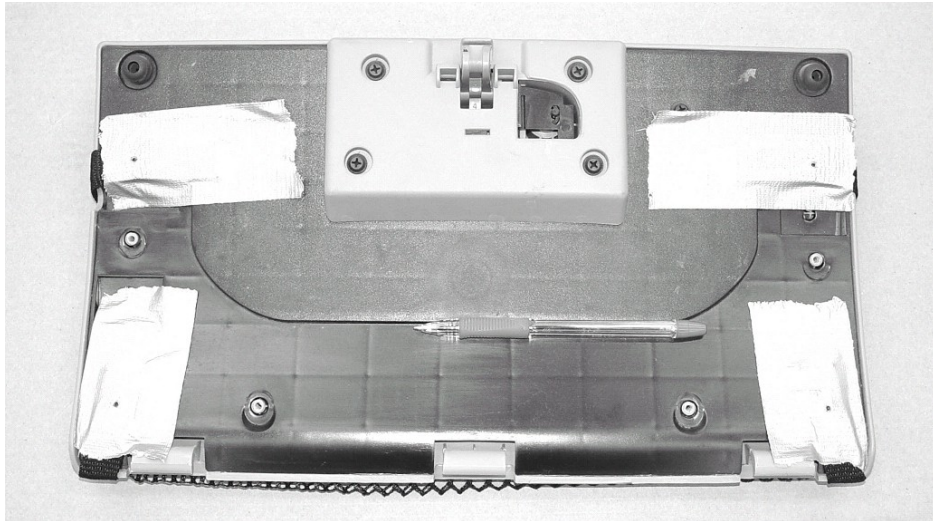

Use the ink pen and punch out the screw holes through the tape and straps.

Replace the tray removed earlier with the 8 screws you removed, cut the exposed duct tape (being careful NOT to cut the straps) with the razor knife, remove and discard. Re-install the glove box.

Thank you for purchasing our product. We also manufacture many other body protection and accessory items for your vehicle, our complete product line can be viewed at [www.toughstuffproducts.com](http://www.toughstuffproducts.com).