




## Installation Instructions for Front Light Bars KC 7400, 7401, 7402 Fits 97-06 Jeep Wrangler

Follow these simple instructions to mount your new KC HiLiTES Front End Lite Bar.

1. Using a #55 Torx bit, remove the bolts holding the two tow hooks. (see photo) **NOTE - Some vehicles may not have tow hooks, but the same bolts will be used.**
2. Align the KC bar mounting plate with the tow hook bolt holes, place the tow hooks on top of the bar mounting plate, re-insert the bolts and tighten securely.
3. You're DONE. You may now mount the KC lights of your choice.

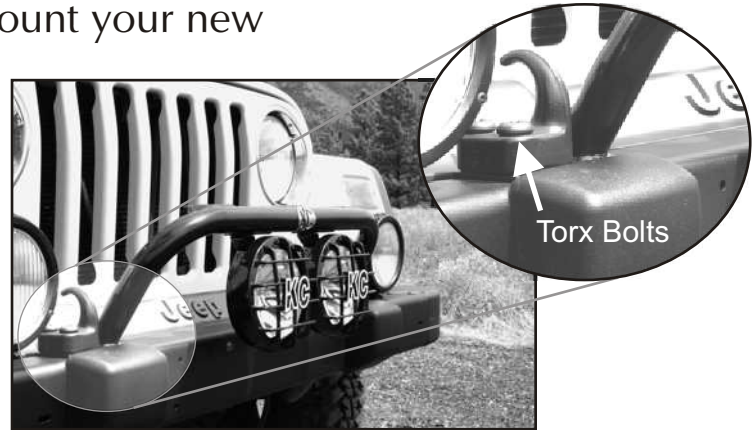

**23 Year Warranty**

See details on our website at  
[www.kchilites.com](http://www.kchilites.com)

IF YOU HAVE ANY PROBLEMS OR QUESTIONS, PLEASE CALL  
CUSTOMER SERVICE AT 800-528-0950