


INSTALLATION : CAUTION ! ALWAYS DISCONNECT THE NEGATIVE BATTERY TERMINAL BEFORE DOING ANY ELECTRICAL WORK ON YOUR VEHICLE.

- 1 - Remove fuse from hood light harness fuse holder.
- 2 - Locate screw hole as shown in figure 1. This is found directly above the oil dip stick.
- 3 - Align hood light bracket with hole and install supplied screw and lock washer as shown in figure 2.
- 4 - Remove bolt from grill brace as shown in figure 3.
- 5 - Install ground lug under bolt and retighten. Use supplied tie straps to route & secure harness along firewall as shown.
- 6 - Locate and open fuse panel as shown in figure 4.
- 7 - Carefully install red lead under bolt in fuse panel as shown .
- 8 - Close fuse panel lid.
- 9 - Reinstall fuse. If you see the light on...congratulations you have successfully installed your under hood light.
- 10 - Slowly close the hood while watching the light to insure the bulb goes out before the hood is secure.

the **GRIPPER** TM
AUTOMATIC UNDER HOOD LIGHT
MODEL #JW-UHL
Jeep Wrangler
1997 & UP / 1987 - 95 YJ

NOTE: If you need to work under the hood for a long period of time, you can turn the hood light off by removing the fuse on the under hood light harness.

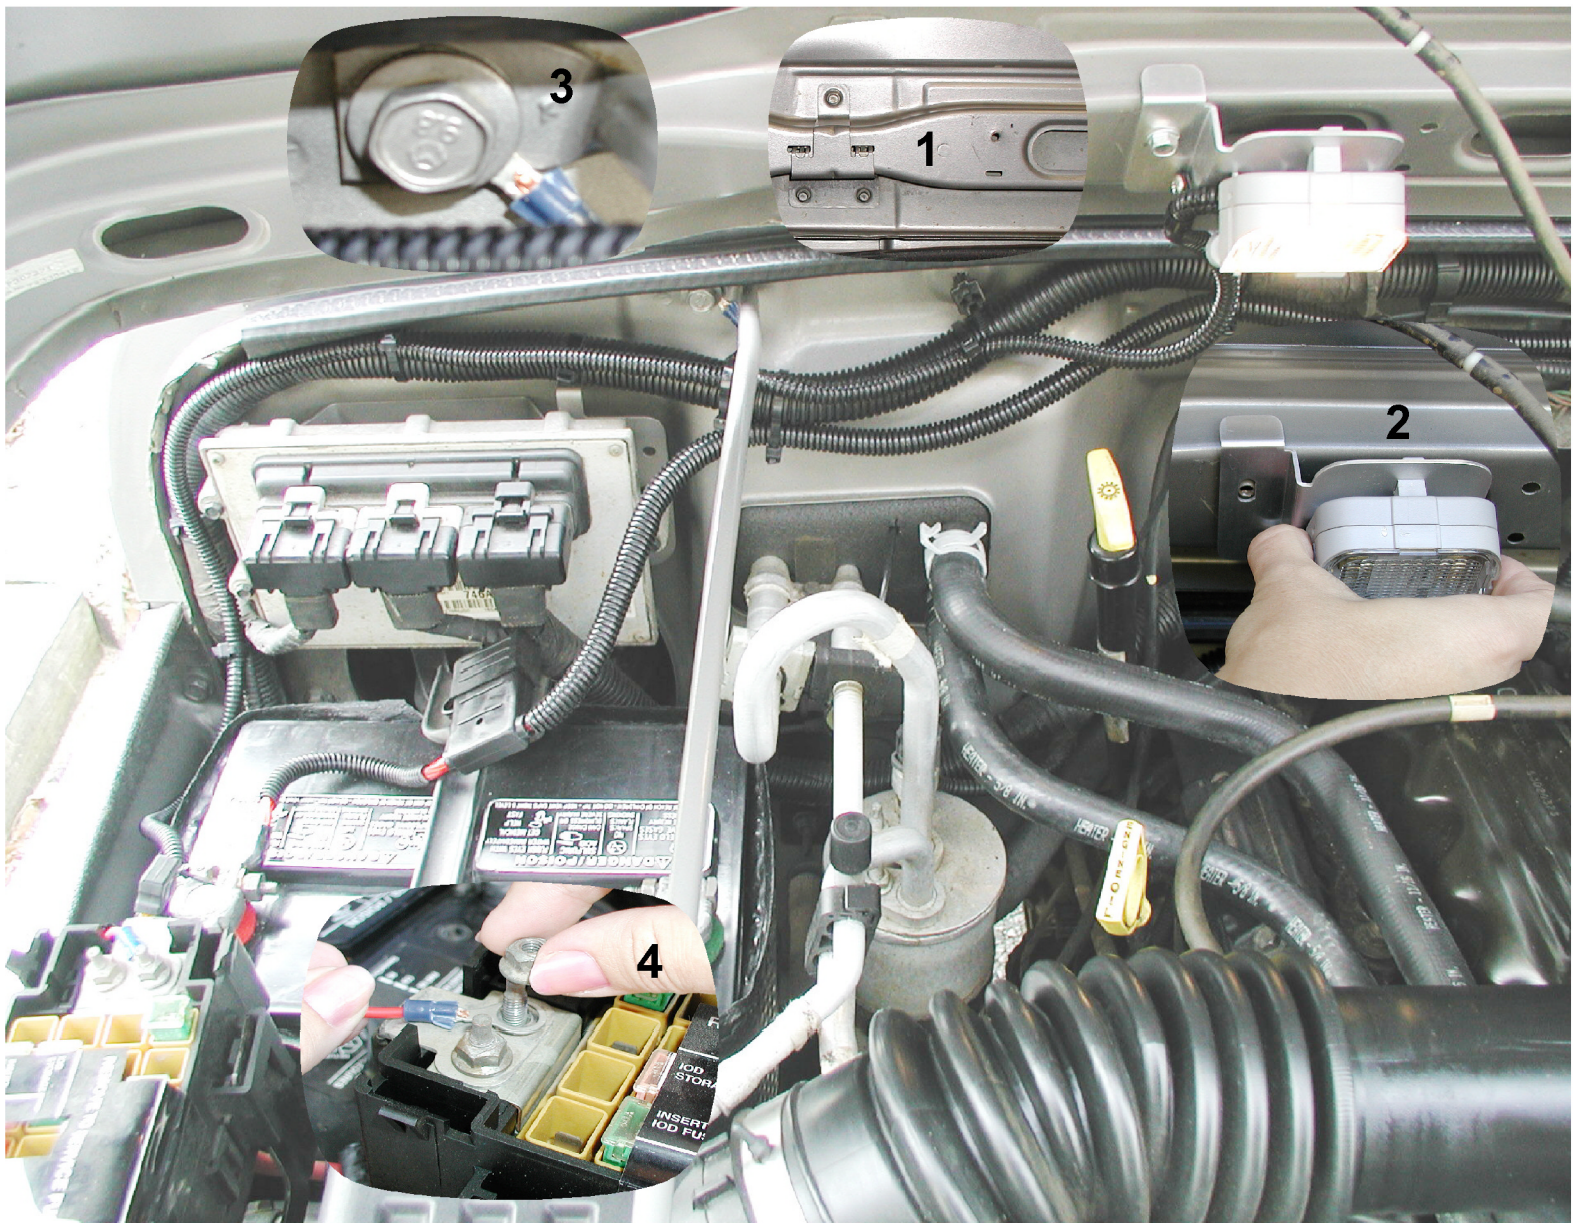

**Questions or Comments ? call CFE PRODUCTS
@ 610 358 1886 / ASK FOR BOB**