


INSTALLATION : CAUTION ! ALWAYS DISCONNECT THE NEGATIVE BATTERY TERMINAL BEFORE DOING ANY ELECTRICAL WORK ON YOUR VEHICLE.

CFE PRODUCTS

MODEL #CJ -AUX IN ADAPTOR JEEP CJ & WRANGLER 1978 to 1995

1. MOUNT THE ADAPTER BOX UNDER THE DASH USING LONG TIE STRAP SUPPLIED IN KIT.
2. INSTALL THE SWITCH PLATE UNDER THE DASH USING THE SELF TAPPING SCREWS SUPPLIED.
3. RUN RCA CABLES FROM THE ADAPTER TO SWITCH PLATE .
4. PLUG THE RED WIRE FROM THE ADAPTER INTO ONE SIDE OF THE SWITCH. ATTACH THE SECOND RED WIRE TO A 12 VOLT SWITCHED IGNITION SOURCE. [A GOOD SUGGESTION WOULD BE THE SWITCHED 12 VOLT SOURCE THAT RUN TO THE RADIO, USUALLY RED.] ATTACH THE OTHER END TO THE SWITCH.
5. ATTACH THE BLACK CABLE TO GROUND.
6. UNPLUG THE RADIO ANTENNA CABLE FROM THE BACK OF THE RADIO. PLUG THE MALE ANTENNA CABLE FROM THE RADIO INTO THE FEMALE PLUG ON THE ADAPTER. PLUG THE MALE PLUG FROM THE ADAPTER INTO THE RADIO.
7. THE ADAPTER IS PRESET TO 88.5 MZ WHEN SHIPPED. THERE IS NO NEED TO CHANGE THE ADAPTER FREQUENCY UNLESS YOU ARE GETTING INTERFERENCE. [SEE CHART ON BACK OF ADAPTER FOR ADDITIONAL FREQUENCY SETTINGS]
8. SET THE NUMBER ONE PRESET ON YOUR FM RADIO TO THE FREQ THAT THE ADAPTER IS SET TO. 88.5 OR WHATEVER YOU HAVE SET THE ADAPTER TO.
9. YOU ARE READY TO PLUG IN YOUR MUSIC DEVICE AND TEST THE SYSTEM FOR PROPER OPERATION.
10. WHEN YOU WANT TO PLAY YOUR MUSIC DEVICE, ATTACH A CABLE FROM THE HEADPHONE JACK TO THE SWITCHPLATE JACK , PUSH THE POWER SWITCH SO THE RED SIDE SHOWS AND SET YOUR FM RADIO TO EITHER 88.5 OR 88.9 , DEPENDING ON WHERE THE SWITCH IS SET ON THE MODULATOR. YOU WILL NEED TO SET THE VOLUME CONTROL ON YOUR MUSIC DEVICE ABOUT 3/4 OF THE WAY UP.
11. TO LISTEN TO REGULAR FM AGAIN THE SWITCH DOES NOT NEED TO BE TURNED OFF, UNLESS YOU ARE GETTING INTERFERENCE ON FM. [OFF IS NO RED SHOWING]

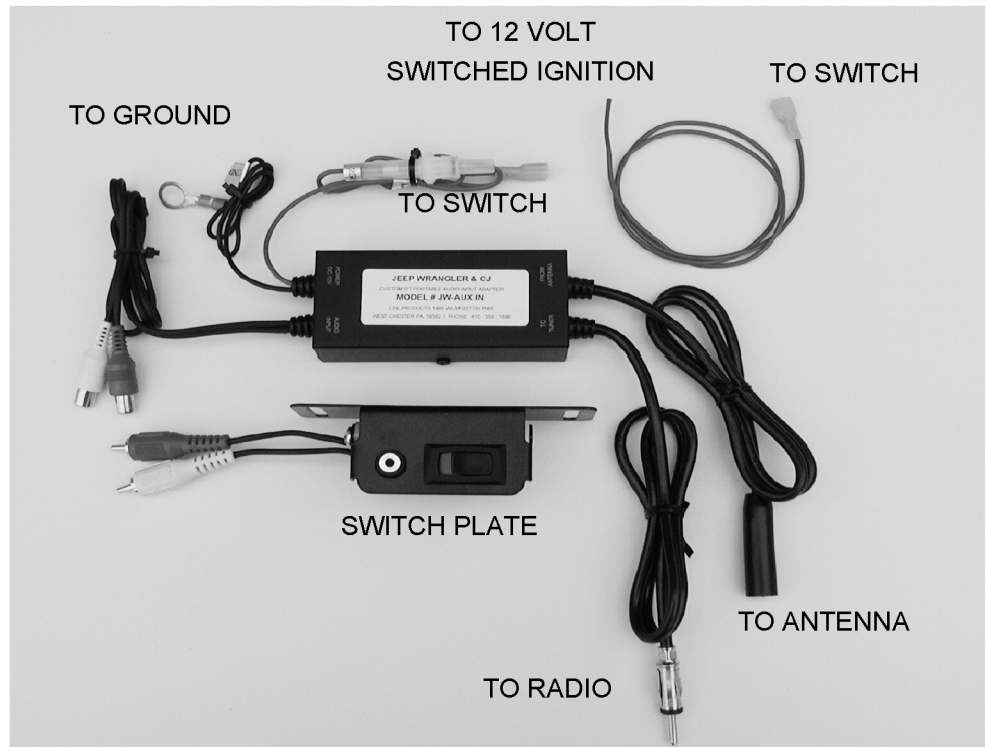

**Questions or Comments ? call CFE PRODUCTS @ 610 358 1886
ASK FOR BOB**