


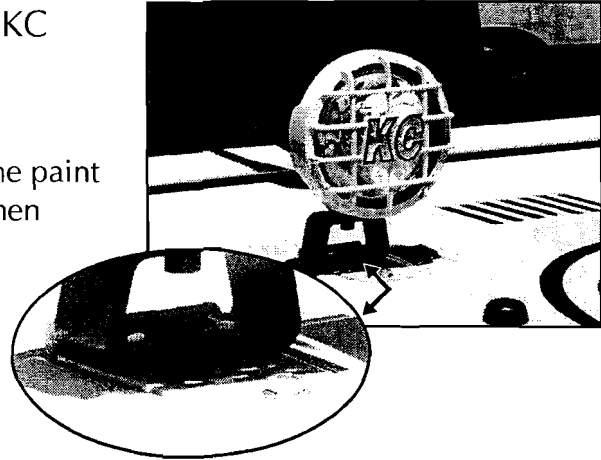

## *Installation Instructions for KC 7304 Hinge Light Brackets Fits 1997 - 2006 Jeep Wrangler*

Follow these simple instructions to mount your new KC HiLiTES Jeep hood hinge light brackets.

1. Leave hood closed while installing the brackets. Cut the paint around the existing hinge bolts to prevent chipping when removing.
2. On the hood (forward) side of the hinge, remove the two bolts closest to the hinge pivot point.
3. Position bracket over the two holes and install the new 5/16-18 x 1 hex head bolts and washers included.
4. Repeat the procedure for the other side and tighten securely.
5. Your done!! Now mount the KC lights of your choice.



**23 Year Warranty**

See details on our website at  
[www.kchilites.com](http://www.kchilites.com)

IF YOU HAVE ANY PROBLEMS OR QUESTIONS, PLEASE CALL  
CUSTOMER SERVICE AT 800-528-0950