CFE PRODUCTS

CUSTOM TWEETER KIT
MODEL # JW-TWEET
97 TO 2006 JEEP WRANGLER

INSTALLATION INSTRUCTIONS

- 1. Remove the Large Torques Screws from both sides of the Dash as shown in picture #1.
- On the Driver's side, remove the Screws from the Panel under the steering wheel and remove the Panel Cover as shown in picture #2. Remove Glove Box from passenger side.
- 3. Remove both Speaker Covers by removing the Screws as shown in picture #3.
- 4. Disconnect Speakers from Plugs and install Quick Clips (see note below) as shown in picture #4. You may have to peel back some of the wire wrap to get to the wires.
- 5. Drop Tweeter Leads down behind the Dash and attach to the Crossover Leads as shown in picture # 5 & #6.
- 6. Plug the Crossovers into the Quick Clips as shown in picture #7. (See the Special Instructions on Page 2 for the Wire Hook Up.)
- 7. Strap Crossovers up under the Dash as shown in picture #8.
- 8. Mount the Brackets to the Dash using the holes from the
- screws removed in step 1 as shown in pictures #9 & #10.

 9. Neaten up the wires with the supplied Tie Straps.
- 10. Re-Install the Dash Panels.


QUICK CLIP INSTALLATION




- 1. Do Not Strip Wire
- 2. Place Wire in Open Channel
- 3. Fold Connector Body until Element contacts the Wire.
- 4. Crimp closed with slip joint pliers.





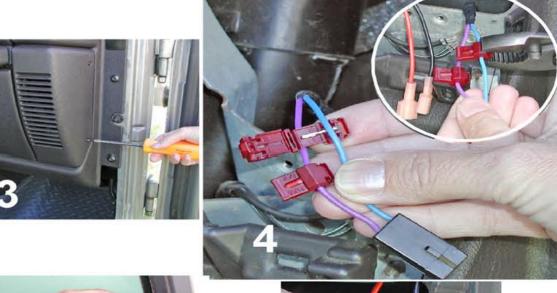

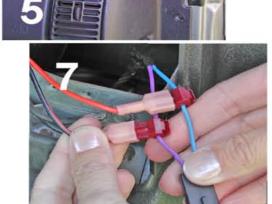









ANY QUESTIONS OR COMMENTS CALL BOB 610-358-1886 CFE PRODUCTS 1485 WILMINGTON PIKE WEST CHESTER PA. 19382

PAGE 1

RED WIRE TO THE

CLIP THAT GOES


TO THIS WIRE ON

SPECIAL NOTE

AFTER REMOVING THE FRONT SPEAKERS FROM YOUR DASH, IDENTIFY
WHICH SPEAKER BELOW LOOKS LIKE YOURS.
PLUG TWEETER WIRES FROM CROSSOVER INTO QUICK CLIPS AS SHOWN

BELOW

RED WIRE TO THE CLIP THAT GOES TO THIS WIRE ON PLUG BLACK WIRE TO THE CLIP THAT GOES TO THIS WIRE ON PLUG

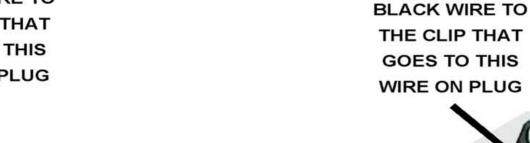




IT IS VERY IMPORTANT TO HOOK UP WIRES AS SHOWN FOR PROPER SOUND QUALITY



1997 TO 2006 4 speaker system

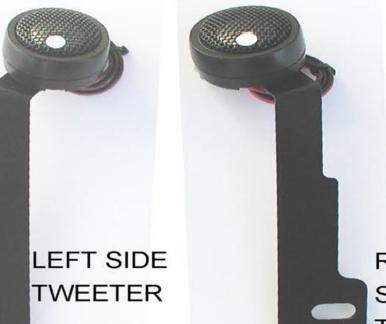

2001 TO 2006
PREMIUM SOUND
SYSTEM WITH
CONSOLE SUB

RIGHT SIDE TWEETER