



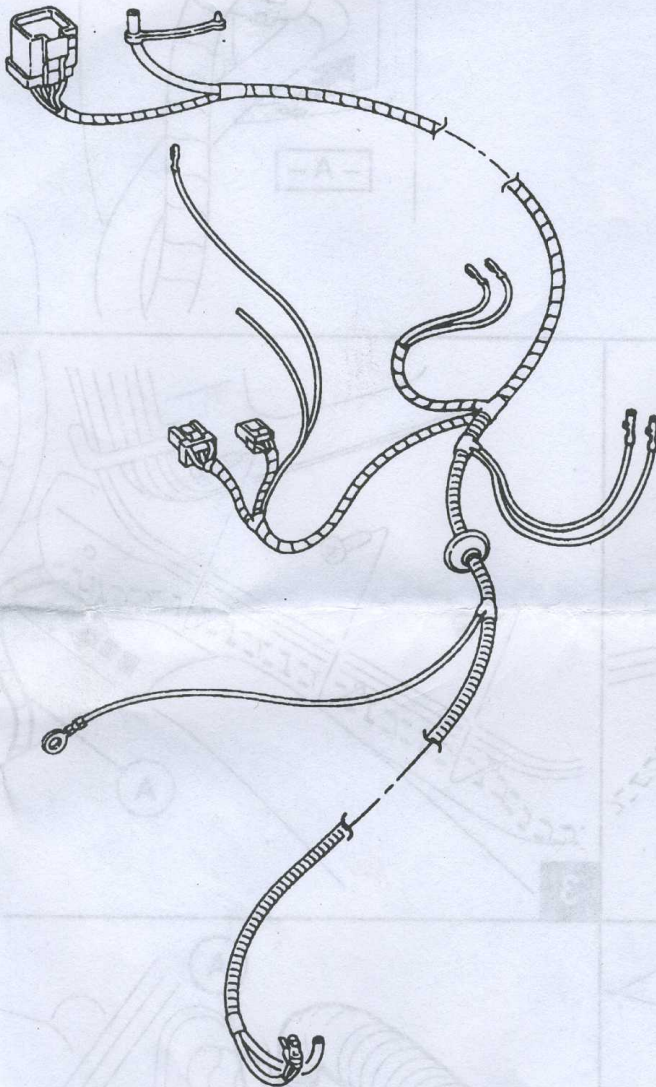


JEEP WRANGLER

Hardtop Wiring



B 12x

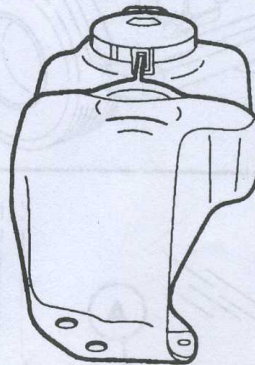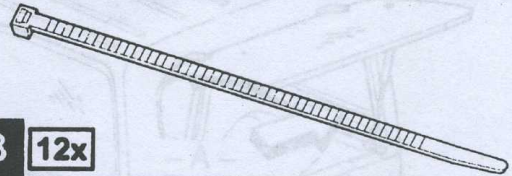

D



E


C




F



G

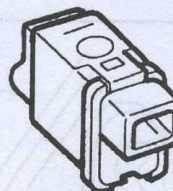


H

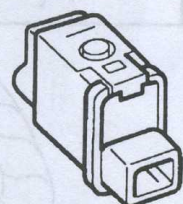




I


A





10mm

15mm

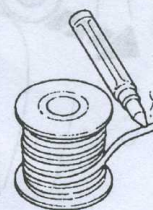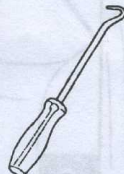


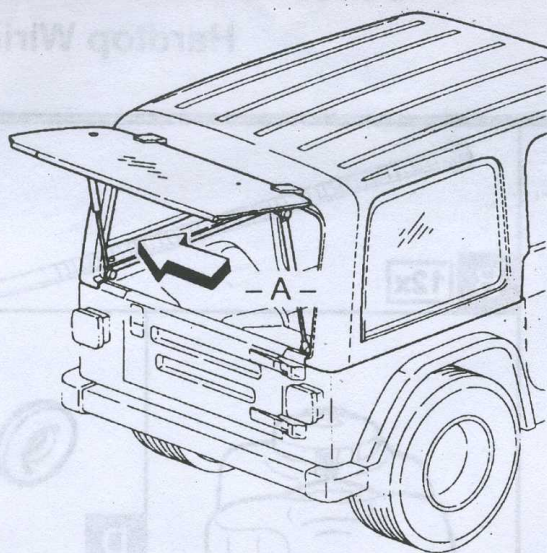


1

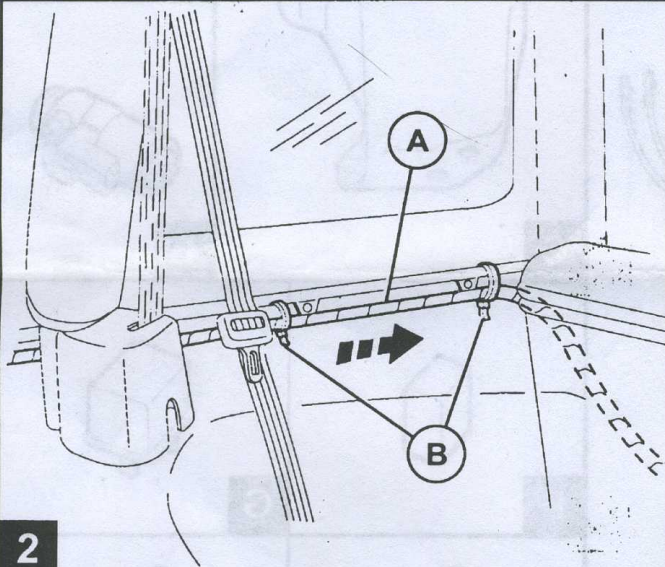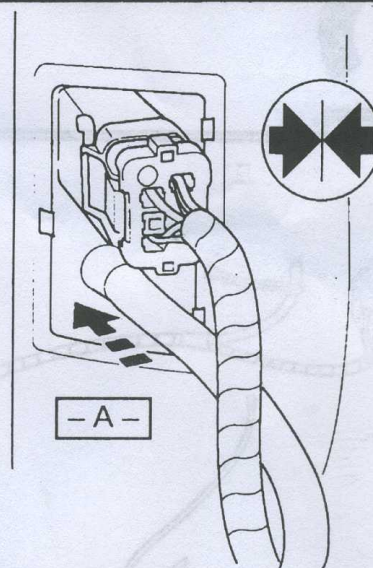


2

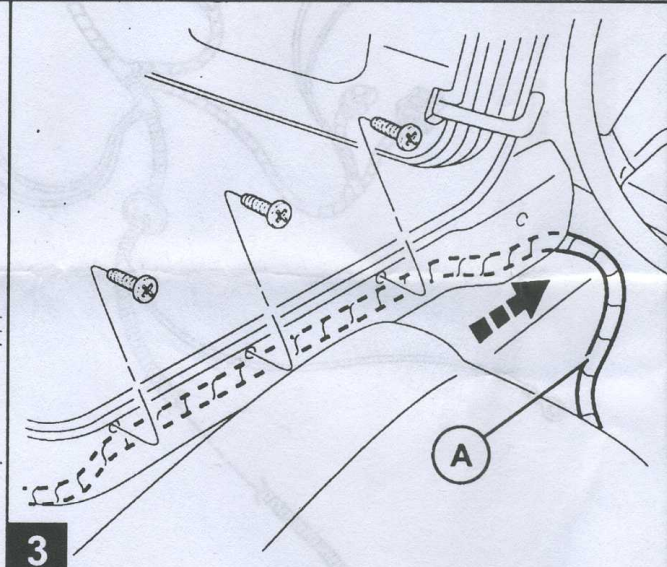







3

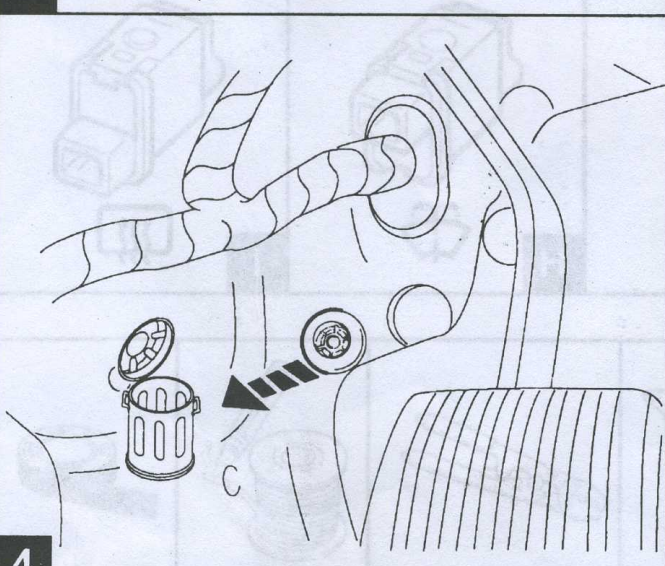


4

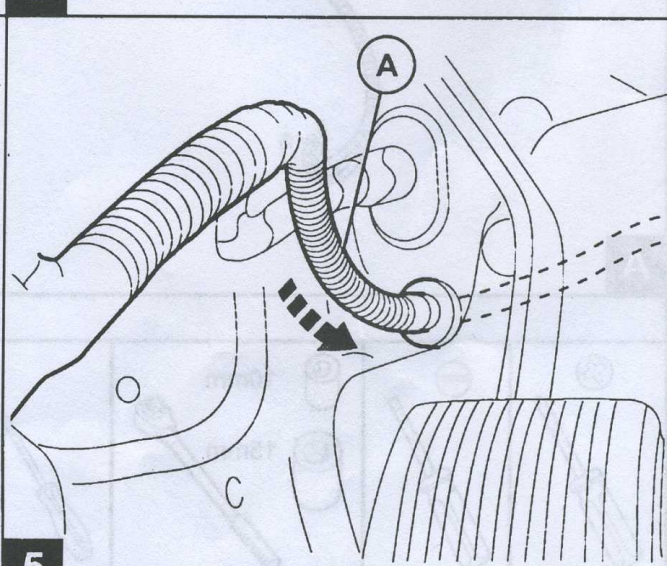


5

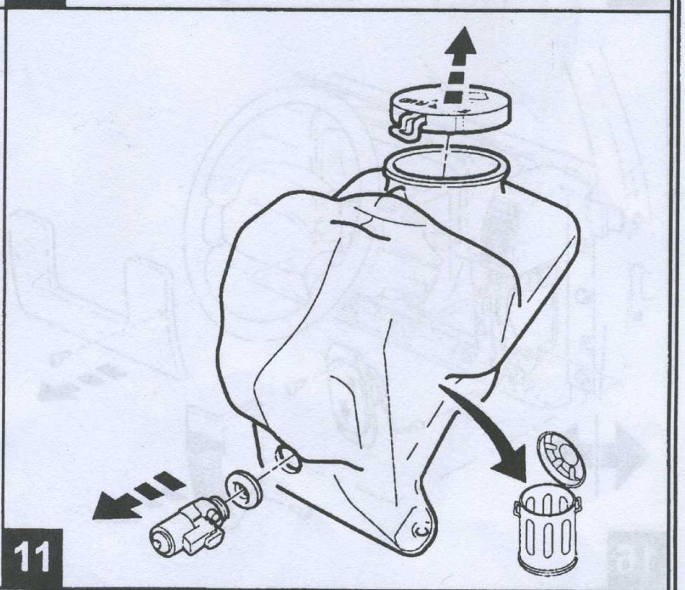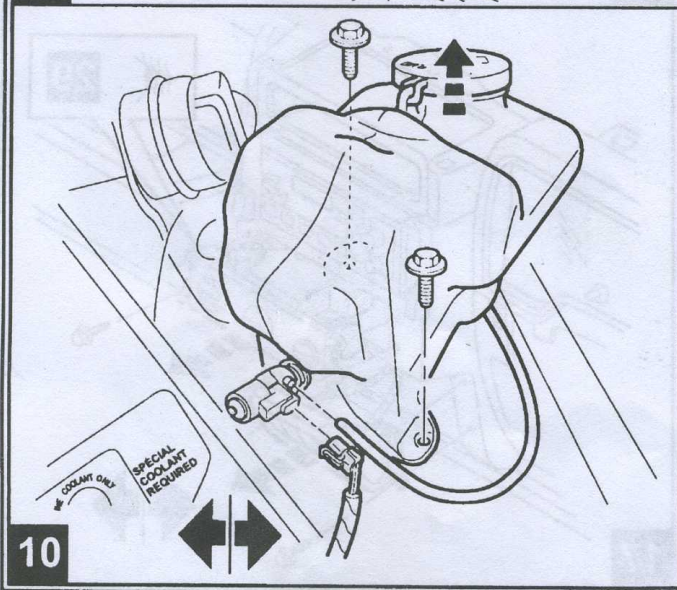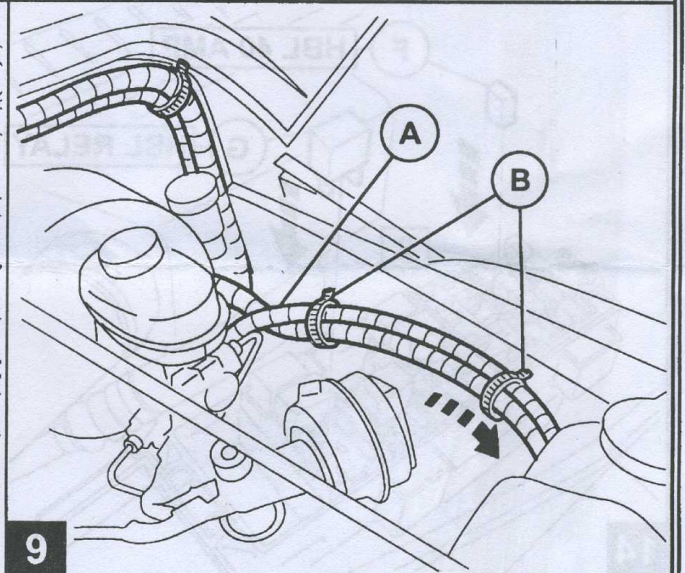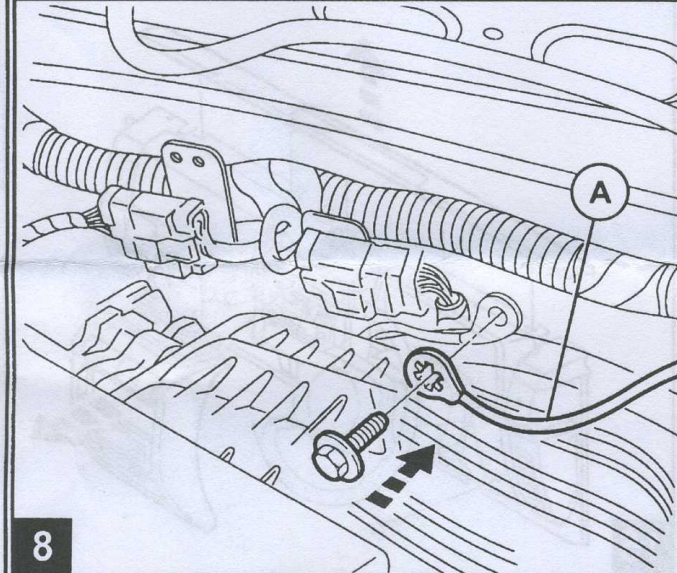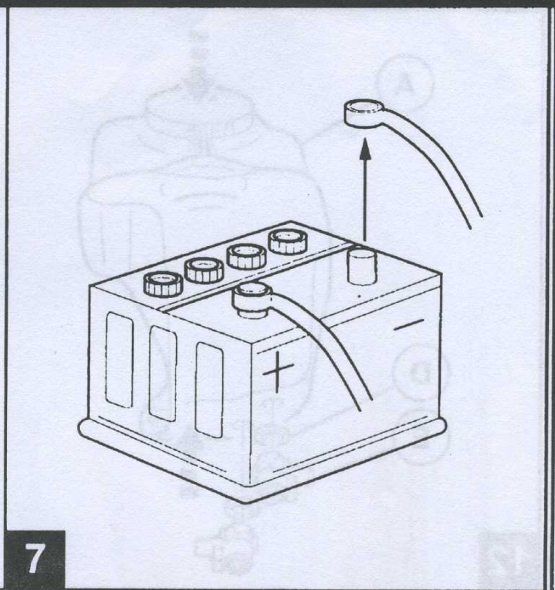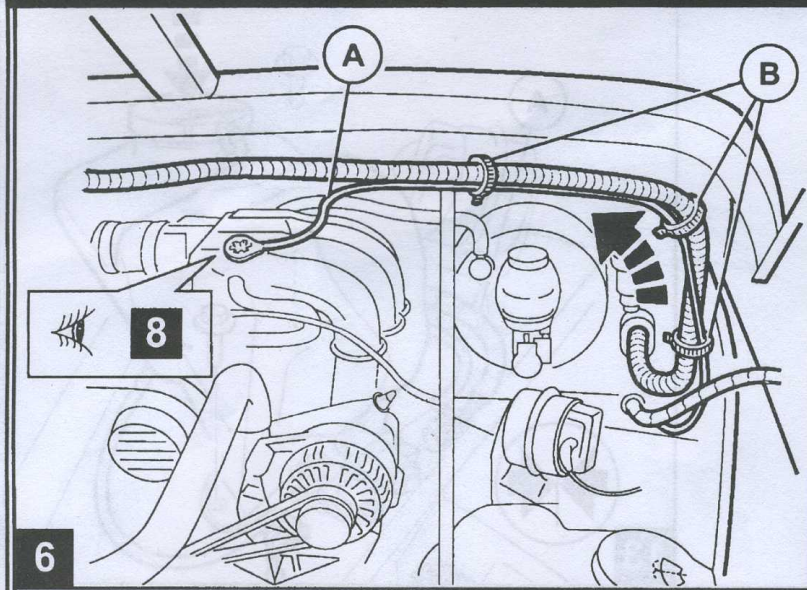


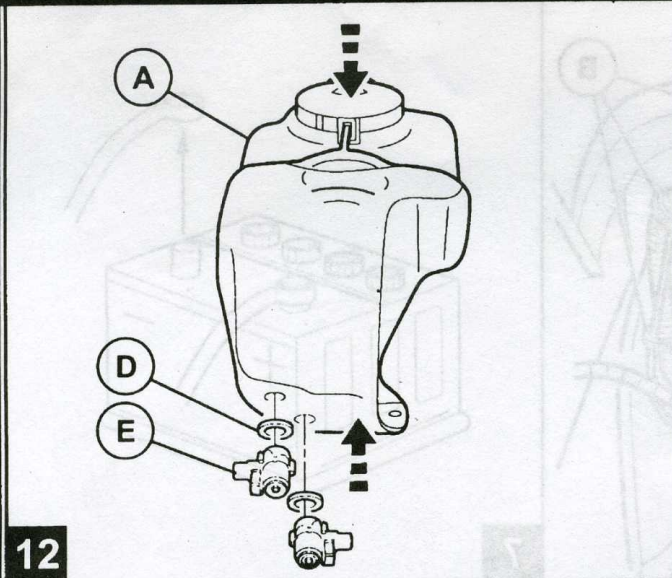


12

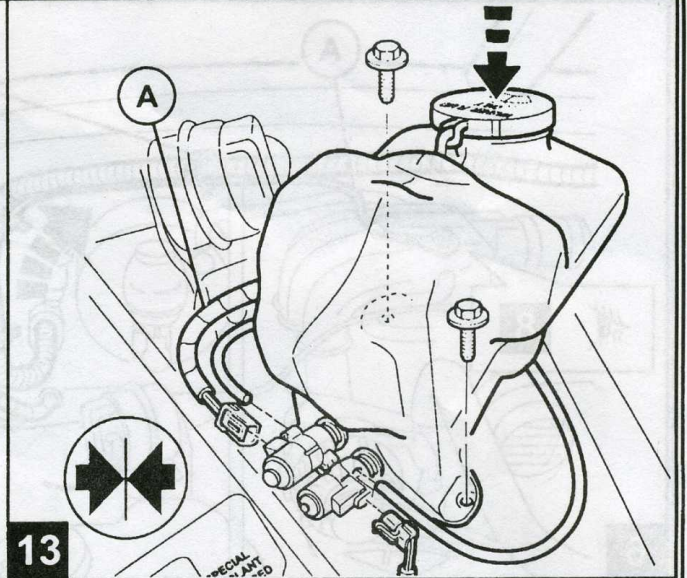


13

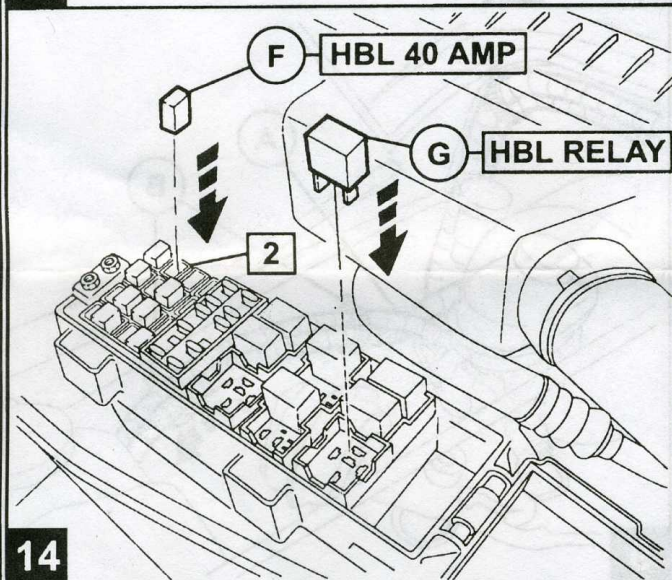


14

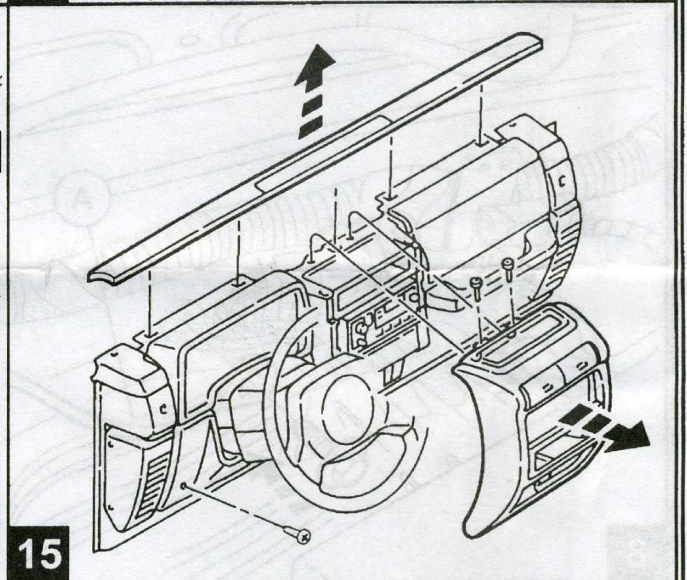


15

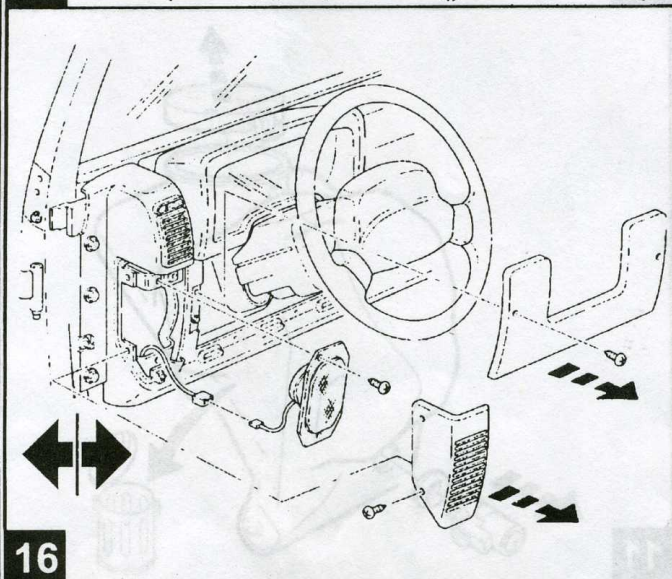


16

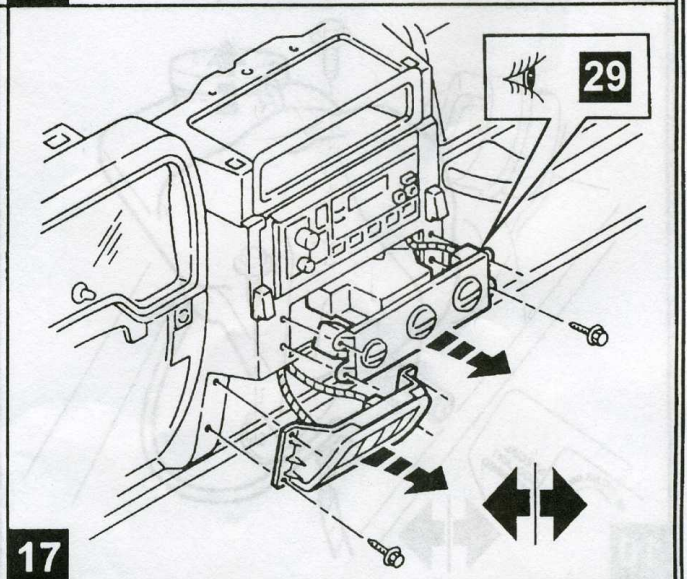


17

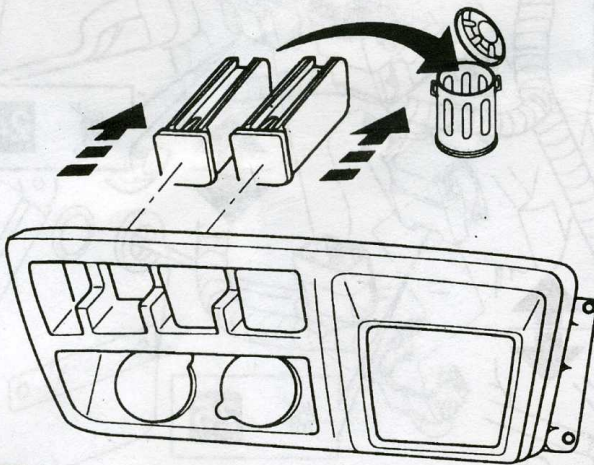


18

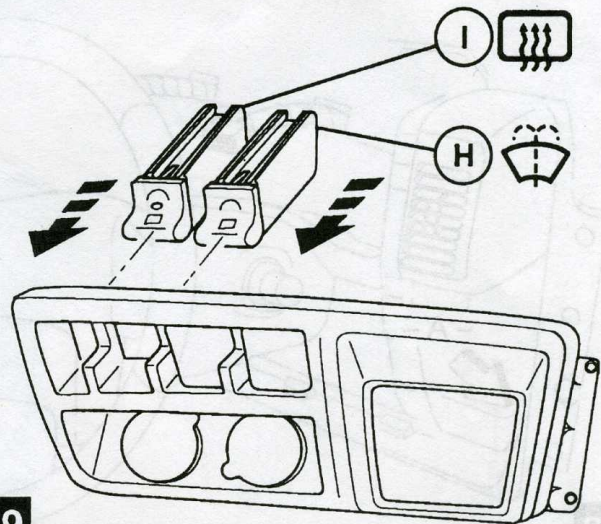


19

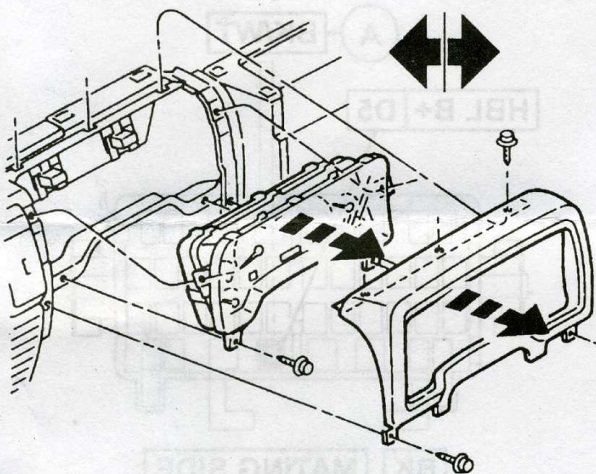


20

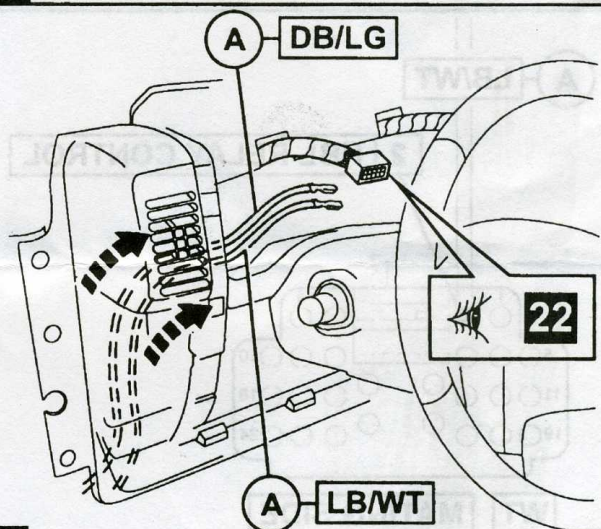


21

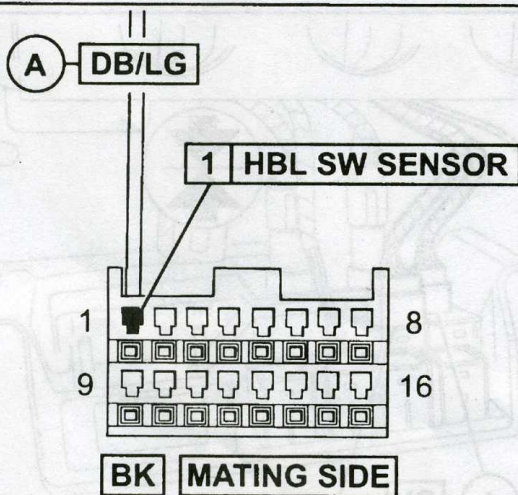


22

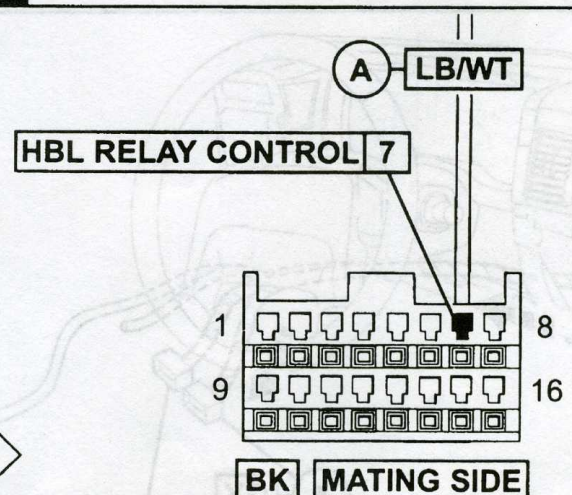

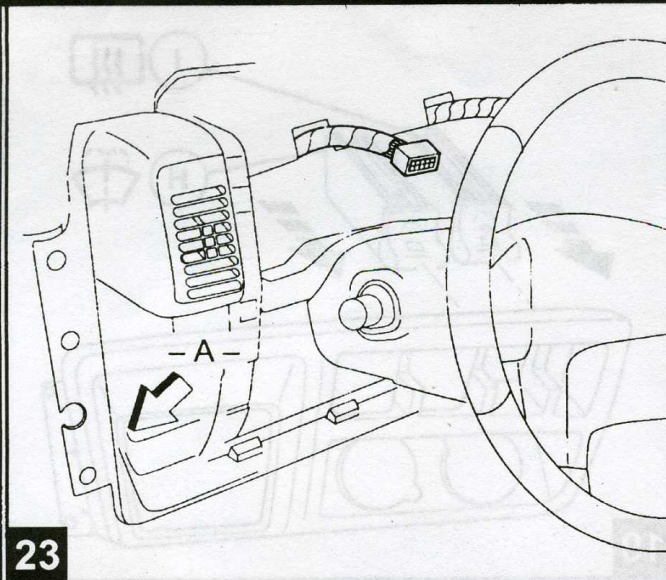


23

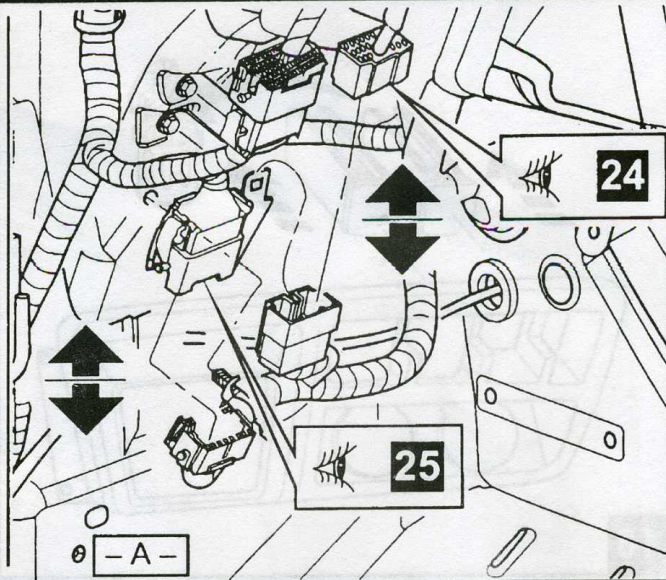


24

25


-A-

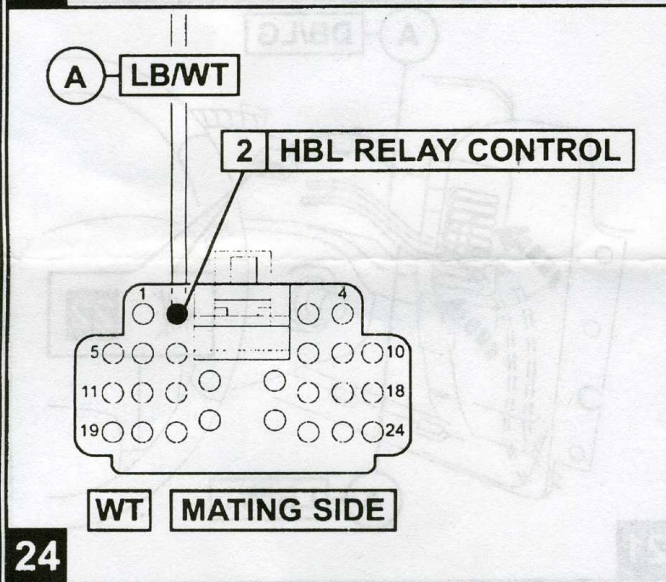


24

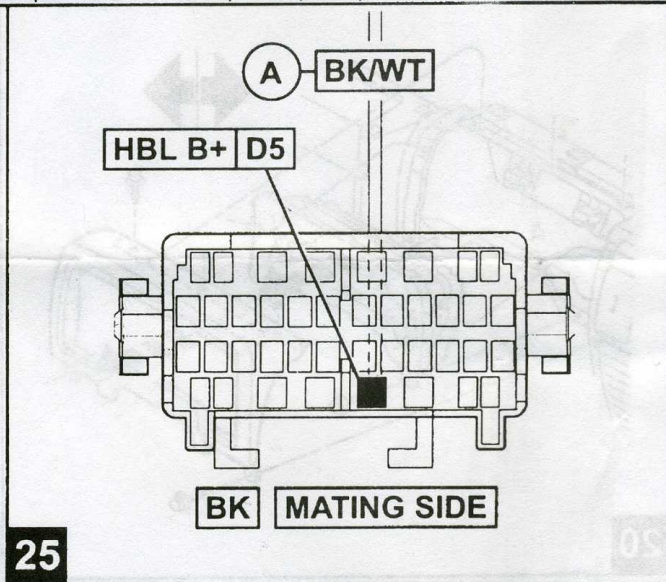

25

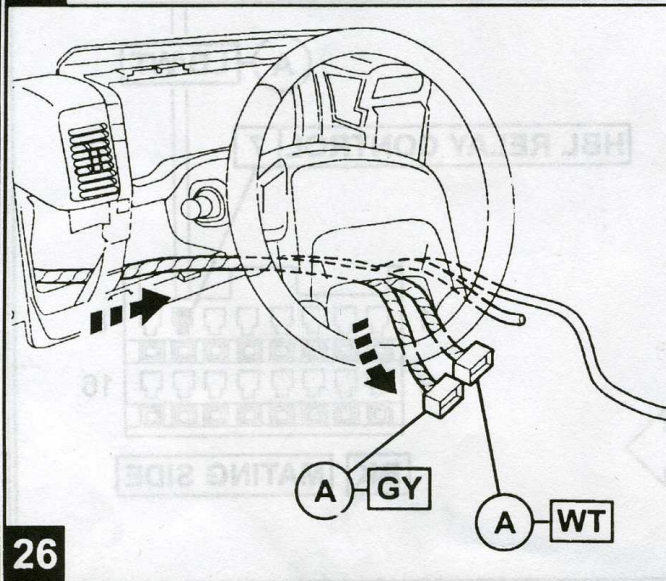

26

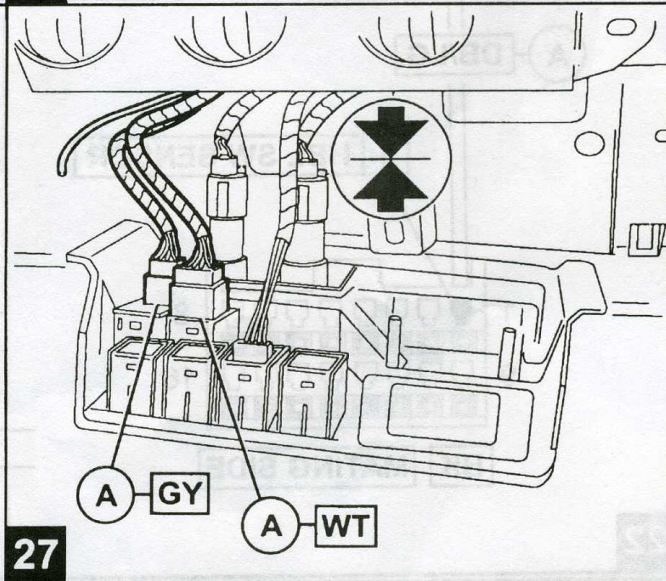

27

