



# Installation Instructions


## HighRock 4x4™





### Off Road Front Bumper Grill Guard


Vehicle Application: 1997-2006 Jeep® Wrangler and Wrangler Unlimited

•HighRock 4x4™ Tubular Grill Guard  
 Part Number: 42906 / 44906




[www.Bestop.com](http://www.Bestop.com) - We're here to help! Visit our web site and click on "Ask a Question". Click here for more [Jeep® Accessories by Bestop](#).

INSTALLATION TIME	SKILL LEVEL
 <b>1-1/2 Hours</b>	 <b>3 - Moderately Difficult</b>

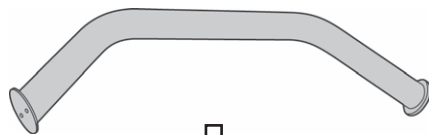TOOLS			
 Socket 15mm, 18mm, 3/8" and 1/2"	 Ratchet	 Wrench 18mm and 3/8"	 Safety Glasses



□  
 Tubular Grill Guard,  
 Part Number 414.25 (Gloss Finish),  
 Part Number 497.49 (Matte Finish),  
 Qty - 1

Hardware Kit Part # 498.36			
 Hex Bolt, Part Number 414.26, Qty - 4	 Washer, Part Number 414.27, Qty - 4	 Lock Washer, Part Number 414.28, Qty - 4	

## 1 Install 42906 / 44906 HighRock 4x4™ Tubular Grill Guard

Place the Tubular Grill Guard on the Front Bumper so that the holes in the guard line up with the holes in the angled face of the bumper. Use two (2) Hex bolts, two (2) Lock washers and two (2) Flat washers to secure each side of the Tubular Grill Guard.

**NOTE:** If installing grill guard to a 42930 or 44930 bumper, place spacers provided with bumper in between the grill guard and bumper.

