

INSTALLATION INSTRUCTIONS

Jeep Wrangler
(1997-2006)



NOTE: READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON PHONE MOUNT.

All phone mount instructions are written from the drivers seat position looking forward at the vehicle dash. We advise caution whenever your removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break. **Logo and part number will be right side up and readable when installed.**

TOOLS NEEDED: Dash Trim Tool, (Part #SIT-104), #2 Phillips Screwdriver, 5/64" drill bit and hand drill, marking pen.


PARTS INCLUDED: Three (3) #10x5/8".

LOCATION OF MOUNT: To the right of the radio.



Step 1.

Start by opening the ashtray and depressing the lever that slides the ashtray out. Set the ashtray aside. Locate and remove the Phillips screw that is inside the ashtray cavity. Set the screw aside. Locate and remove a long trim panel that runs along the top of the dash. Insert the Dash Trim tool underneath the right end of the panel and carefully pry upward. Do this all the way over to the left side until all four (4) clips are released. Set the panel aside.

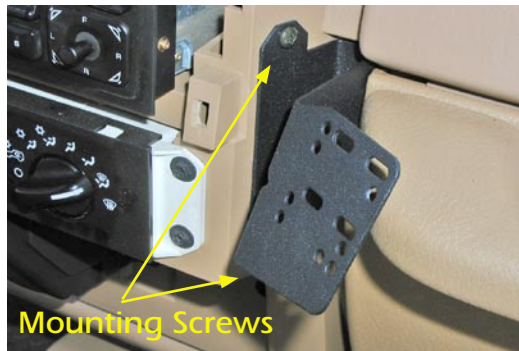

Step 2.

On the top of the dash trim bezel, locate and remove two screws that are now exposed. Set these screws aside. Grasp the bottom of the trim bezel and carefully pull toward you to release the two bottom clips. Continue work the bezel up releasing two more clips on the left and right sides of the radio. Set the bezel aside.

Step 3.

Locate the crevice that is to the left of the passenger grab bar. Place the mount at the top of the crevice. With a marking pen, mark three spots for drilling pilot holes using the holes in the CBM as a guide. Set the mount aside. Use the hand drill to carefully drill three pilot holes with the 5/64" drill bit. Place the CBM back into place and insert the three provided screws and tighten with the #2 Phillips screwdriver.



Carefully reinstall the dash in reverse order securing clips and screws. Install any **Bracketron** phone holder or Amps compatible device to your **Bezel Mount**. Your installation is complete.

© Bracketron Inc, 2006 All rights reserved.

The information in this document is subject to change without notice. Bracketron Inc. assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Literature already in circulation may not be current. Please contact the sales department for additional information.

Bracketron Inc will not be responsible or liable for damage to vehicles in the installation and or removal of this **Bracketron Inc** mount.

Bracketron Inc will not be liable for personal injuries or damage to property resulting from a motor vehicle accident and or improper installation of this **Bracketron Inc** mount.

Bracketron Inc 9607 Humboldt Ave S, Bloomington, MN 55431, Ph: 952-746-7775 Fax: 1-800-660-1784 Toll Free: 1-866-237-4443

Web Address: www.bracketron.com