


WIPER MOTOR KIT INSTALLATION INSTRUCTIONS

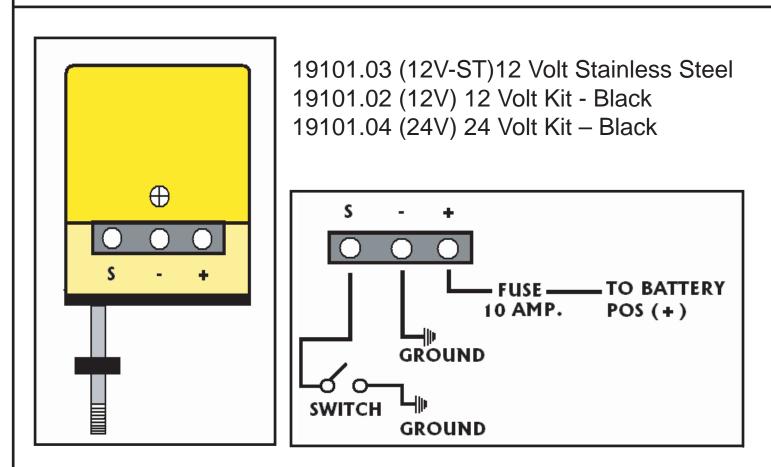

Installation Notes:

The (S) terminal should be connected to one side of the control switch. The other lead wire from the switch will need to be grounded.

The (-) terminal should be connected to a good ground on the vehicle chassis or to the battery's negative terminal.

The (+) terminal should be connected to the original fused wiper motor wire or fused battery positive wire. Use a 10 amp fuse if a new wire assemble is to be used.