
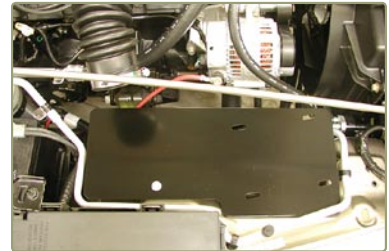


KILBY ENTERPRISES

Kit Contents:

- Fender Shelf
- Welder Tray
- (10) 1/4-20 x 7/8 Bolt
- (18) 1/4" Flat Washers
- (8) 1/4-20 Nuts

1. Remove factory air box from the passenger side fender by removing three nuts accessible from the underside of the fender.
2. Install back of welder box to the welder bracket by using 3 bolts, 6 washers and 3 nuts. *The head of the bolt should be inside of the welder box when mounted* Make sure the welder box is centered on the bracket and tighten.
3. Install welder bracket to fender tray by facing the slope towards you, not the engine. Use 4 bolts, 8 washers and 4 nuts to mount the bracket. Depending on which regulator you're using with your welder, you may have to re-arrange the regulator to allow proper fit.
4. Install the tray assembly to the fender using the factory bolt holes for the air box. Use 3 bolts, 4 washers and 1 nut to mount the tray. Test fit to make sure the welder clears the PDC and core support rods and adjust as necessary, then tighten bolts.

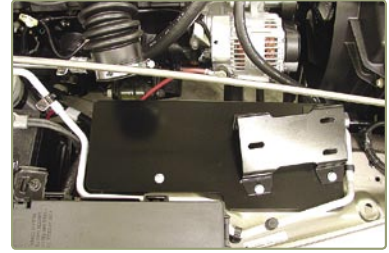

Thanks for buying a Kilby Enterprises product!

