



INSTALLATION INSTRUCTIONS

PART No.

70005

Door Hinge Liners for 1976 to 2006
Jeep® Wrangler TJ, YJ and CJ



VIDEO AVAILABLE



REQUIRED TOOLS

HAMMER
SANDPAPER
SOCKET SET
FLATHEAD SCREWDRIVER

KIT CONTAINS


HINGE LINERS
OEM DOOR BUSHING REMOVAL TOOL

QTY

4
1

1) Remove Doors

On the passenger side of the Jeep, remove the upper and lower door hinge nuts.

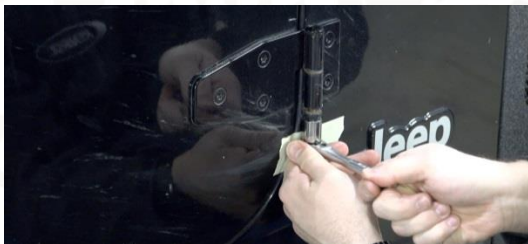

Roll down the window, grasp the door firmly and lift straight up. You may need to work the door back and forth as you lift.



INSTALLATION INSTRUCTIONS

PART No.

70005

**Door Hinge Liners for 1976 to 2006
Jeep® Wrangler TJ, YJ and CJ**

2) Remove OEM Door Bushings


Use the included Door Bushing Removal Tool and a hammer to carefully tap out your OEM door bushings. Use the tool on the bottom of the hinge as shown here.



NOTE: Jeeps equipped with hinges with a machined “step” inside the hinge (1994 to 1999) will require a punch or flathead screwdriver to remove the OEM bushing.

You may want to use a piece of cardboard or a shop rag to protect the side of your Jeep from errant hammer swings. If the OEM door bushings are stubborn, you may want to soak them in a penetrating lubricant.

NOTE: Installing hinge liners on 1994 to 1999 models will require trimming. Line up the hinge liner with the included tool as show in the picture below, and cut at the top line using a utility knife.

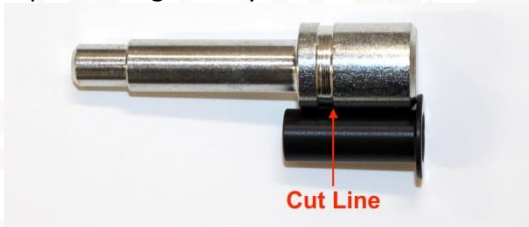

3) Install Kentrol Door Hinge Liners

If necessary, lightly sand the inside of the hinge until it is smooth. Slide the hinge liners into the hinges. Do not use a hammer, as it may break the liners. If necessary, use a small amount of grease.



4) Reinstall Your Door

Slide your door back into place. Reinstall your OEM door nuts.

5) Repeat this process on the opposite side of your Jeep, and you're done! Enjoy your new Kentrol Door Hinge Liners!