

**Jeep Wrangler JK
2" Poly Value Lift
Installation Instructions**

Required Tools List:

- Standard / Metric Wrenches and Sockets
- Floor Jack
- Jack Stands
- Assorted Drill Bits



Before beginning the installation, read these instructions and the enclosed driver's WARNING NOTICE thoroughly and completely. Also affix the WARNING decal in passenger compartment in clear view of all occupants. If any of these items are missing from this instruction packet, do not proceed with installation, but call SKYJACKER[®] to obtain needed items. If you have any questions or reservations about installing this lift kit, call SKYJACKER[®] at 318-388-0816 for Technical Assistance or Customer Service departments.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is un level (side-to-side) from the factory, but usually not noticed until a lift kit has been installed which makes the difference more visible. Using a measuring tape, measure the front and rear (both sides) from the ground up to the center of the fender opening above the axle. Record below for future reference.

Driver Side Front: _____

Passenger Side Front: _____

Driver Side Rear: _____

Passenger Side Rear: _____

IMPORTANT NOTES:

- Please refer to Parts List to insure that all parts and hardware are received prior to disassembly of vehicle. If any parts are found to be missing, contact your dealer as soon as possible.
- After installation of Suspension Lift, A qualified alignment facility is required to re-align the vehicle to factory settings.

Kit Box Breakdown:

JK200:

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
JK2FP-S	JK 2" FRONT POLY SPACER	2
JK2RP-S	JK 2" REAR POLY SPACER	2
HB-JK20	HDWR BAG:JK20 POLY VALUE KT	1
JK25RBS-S	JK 2.5" REAR BUMP STOP BRKT	2

Hardware Bag Breakdown:

HB-JK20

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
10MMX70BHB	10MMX70MM BUTTON HEAD 12.9	2
38SAEW	3/8 SAE WASHER	2
10MMN	10 MM N/I LOCKNUT	2
516X1FTB	5/16 X 1 FINE THRD BOLT	4
516SAEW	5/16 SAE WASHER	8
516FTN	5/16" FINE THRD N/I LOCKNUT	4
BPS20-B	BUMP STOP SPACER BLACK, 2"	2

Installation:

1. Park the vehicle on flat, level ground and set emergency brake.
2. Raise the front of the vehicle and support frame rails using jack stands.
3. Disconnect the front sway bar end links using a 18mm socket. Disconnect front track bar using a 21mm socket. (See Photo #1)
4. If installing Skyjacker Steering Stabilizer Part# 7003, Remove factory steering stabilizer using 18mm socket. (See Photo #2)
5. Disconnect front shocks using a 18mm socket. Remove front tires/wheels and remove front coils. (See Photo #3) Remove front Shocks.
6. Locate new Skyjacker front bump stop. Place bump stop on the center of the bump stop pad located on the front axle. Mark and drill using a 25/64" drill bit. (See Photo #4).
7. Place bump stop in coil spring, and install coil spring. Attach bump stop to axle using the 10 x70 mm button head bolts with one washer under the 10mm nut. (See Photo #5)
8. Place the new front spacers (MO3758) on top of the OEM spring isolator. Let the weight of the frame down on to the new coils. Re-Attach front drive shaft, end links, track bar, etc.
9. If installing Skyjacker Steering Stabilizer Part # 7003, install at this time. (See Photo Below).

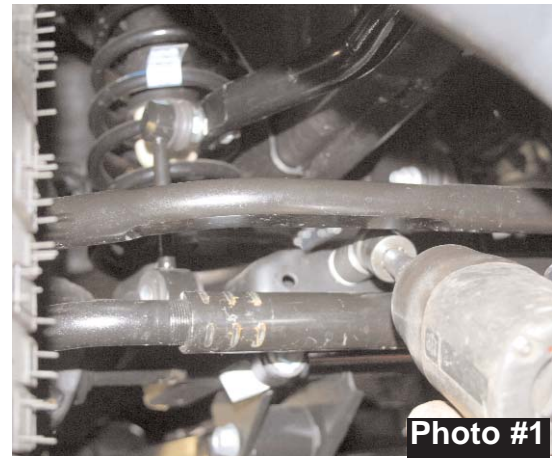


Photo #1

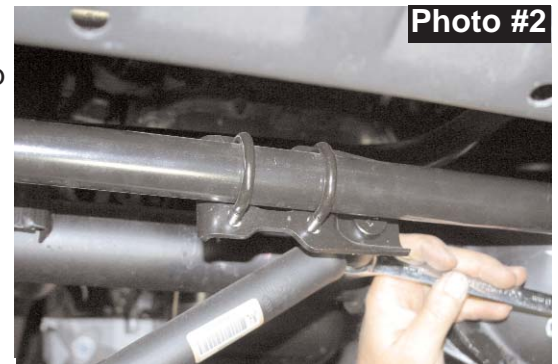


Photo #2



10. Install new Front Skyjacker shocks using hardware supplied. Install tires/wheels.

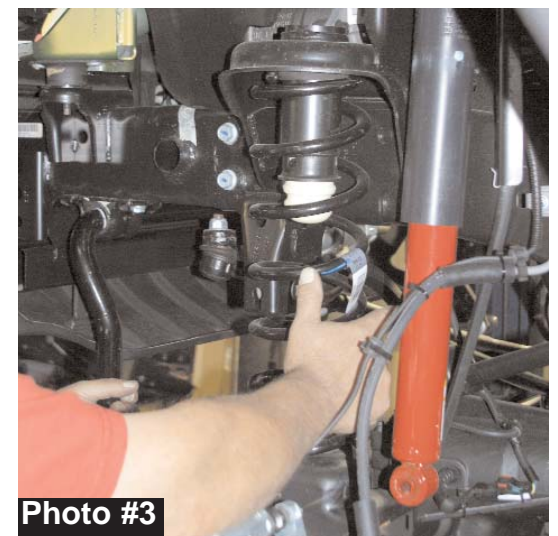


Photo #3



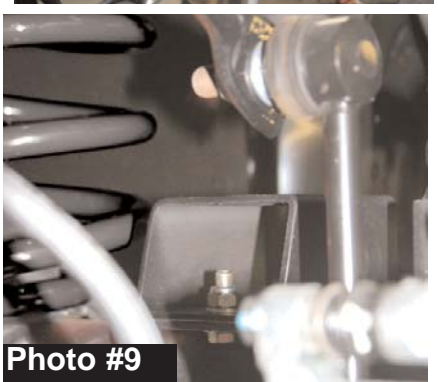


Photo #4



Photo #5

11. Raise rear end and properly support frame rails using jack stands. Remove rear shocks using 16mm socket. (See Photo #6)
12. Disconnect rear track bar bracket from the axle using 21mm socket. (See Photo #7). Disconnect rear sway bar end links using 18mm socket.
13. Disconnect ABS line from frame and disconnect brake line from frame. (See Photo #8) Lower axle down and remove factory rear coils.
14. Install new poly spacer (MO3761) on top of the OEM coil isolator.
15. Attach new rear bump stops to the factory location on the axle using the 5/16 x 1" fine thread bolts, washers and nuts supplied. (See Photo #9) Be sure to install the bump stop so that the angled end is towards the rear.
16. Let weight on coil springs and re-attach sway bar end links, brake line and ABS lines.
17. Install new Skyjacker rear shocks.
18. Install tires/wheels and lower vehicle to the ground.

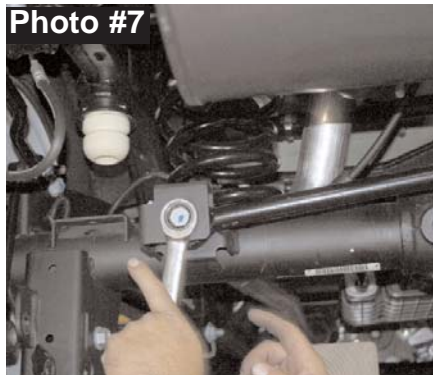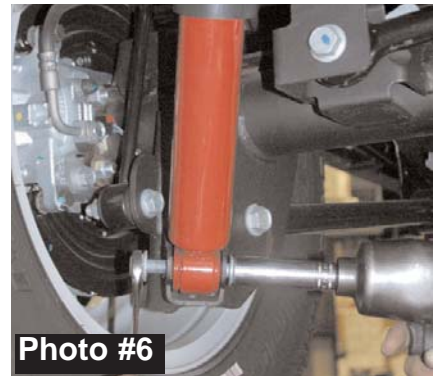

FINAL NOTES:

- * After installation is complete, double check that all nuts and bolts are tight.
- * Check to ensure there is adequate clearance between All rotating, mobile and fixed members. Check clearance between inner side wall of tires.
- * Ensure there is adequate clearance between exhaust and brake lines, fuel lines, fuel tank, floor board, and wiring harnesses. Check steering gear for interference and proper working order. Inspect brake lines for damage and adequate clearance. Test brake system.
- * With the vehicle on the floor, cycle steering lock to lock and inspect steering, suspension, drive line and brake line systems for proper operation, tightness and adequate clearance.
- * Have headlights readjusted to proper settings.
- * Front end realignment is necessary so have a qualified alignment center realign front end to factory specifications.

Seat Belts Save Lives, Please Wear Your Seat Belt!

18. Attach new rear bump stops to the factory location on the axle using the 5/16 x 1" fine thread bolts, washers and nuts supplied. (See Photo #14) Be sure to install the bump stop so that the angled end is towards the rear.
19. Let weight on coil springs and re-attach sway bar end links, brake line and ABS lines. Attach factory track bar to the new bracket in the lower mounting hole in the new bracket. Upper hole is used on 4" kits. Attach using the 9/16 x 3" fine thread bolt, washer and nut. Washer will be used under the nut.
20. Install new Skyjacker rear shocks. (See Photo #15)
21. Install tires/wheels and lower vehicle to the ground.

FINAL NOTES:

- * After installation is complete, double check that all nuts and bolts are tight.
- * Check to ensure there is adequate clearance between All rotating, mobile and fixed members. Check clearance between inner side wall of tires.
- * Ensure there is adequate clearance between exhaust and brake lines, fuel lines, fuel tank, floor board, and wiring harnesses. Check steering gear for interference and proper working order. Inspect brake lines for damage and adequate clearance. Test brake system.
- * With the vehicle on the floor, cycle steering lock to lock and inspect steering, suspension, drive line and brake line systems for proper operation, tightness and adequate clearance.
- * Have headlights readjusted to proper settings.
- * Front end realignment is necessary so have a qualified alignment center realign front end to factory specifications.

Seat Belts Save Lives, Please Wear Your Seat Belt!