

# INSTALLATION INSTRUCTIONS JK BACK DOOR ARMREST

2007

1907 Woodland Ave.  
Coffeyville, KS 67337  
Phone: (620) 251-9100  
Fax: (620) 251-2622



1. Remove the (2) screw caps / screws in the existing door pull. Installation of armrest is identical for early 2007 door panels as shown in Fig. 2.
2. Insert the longer of the two sleeves (D) in the mounting hole closest to the rear of the vehicle. Place the shorter of the two sleeves (E) in the mounting hole closest to the front of the vehicle. Attach the armrest bracket (A) to the door, using (2) of the #9 x 3" tapscrews (C) supplied. Push the screws through the sleeves previously inserted into the door panel and tighten.
3. Mount the polyurethane cushion (B) to the armrest bracket, using (2) of the #10-24 x 1/2" button allen head screws (F) supplied, adjusting the fore and aft position to suit your comfort.

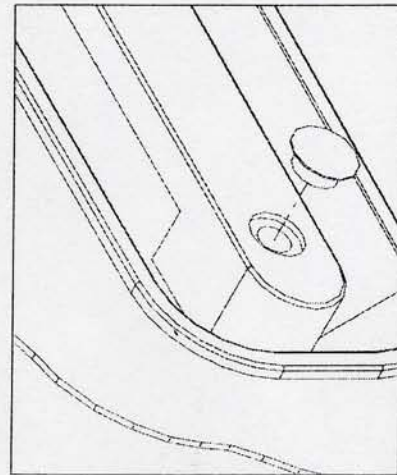
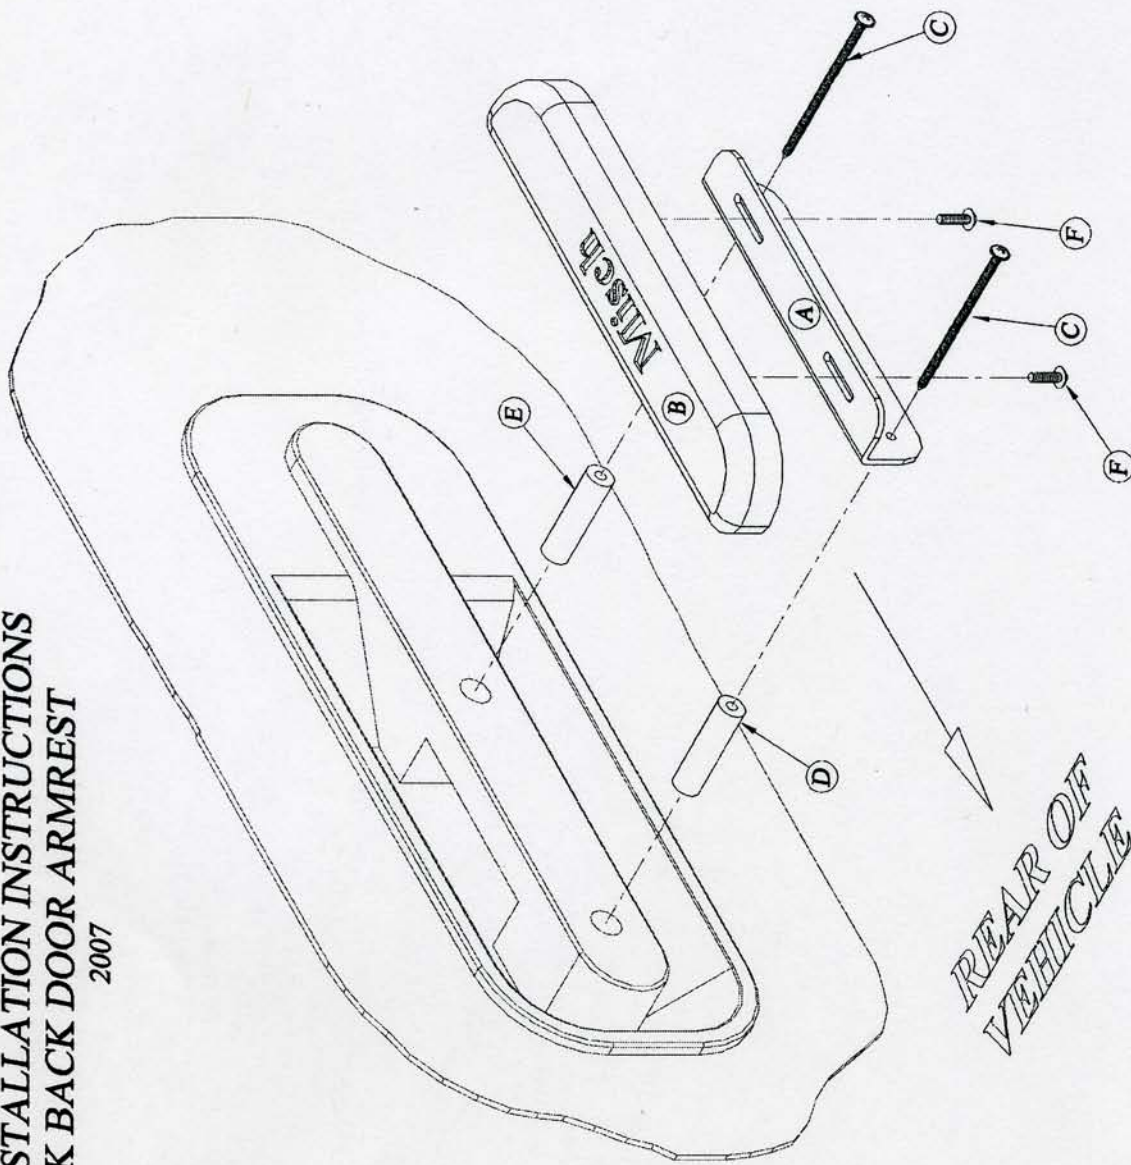


FIG. 2 EARLY 2007 JK MODEL DOOR PANEL

FIG. 1 JK MODEL BACK DOOR ARMREST