



Installation Instructions

**FITS: Jeep Wrangler JL 2 Door
2018 - onward**

**Gen2 R5 Rock Sliders
Part#: 81-20603**

TOOLS NEEDED

Ratchet	18mm Socket	Impact Wrench
---------	-------------	---------------

COMPONENTS & HARDWARE

#	QTY		#	QTY	
A	2	Rock Slider	B	2	M12x130mm Bolt
C	2	M12 Flat Washer	D	2	Mounting Spacer

Rock Slider shown on 2 door Jeep Sport



A



B



C



D



Thank you for purchasing our Rock Slider. Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. For Technical assistance call 866-988-8348

IMPORTANT NOTICE and DISCLAIMER:



Modification of your vehicle may create a dangerous condition which could cause property damage to personal property or serious bodily injury. The buyer hereby expressly assumes all risks associated with any such modifications.


The Manufacturer of this product will not accept responsibility for personal injury or property damage arising from the failure of any parts manufactured or sold by Paramount Automotive or any of its agents.

California Proposition 65 Warning!

This product may contain one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Preparing Vehicle for Installation

If your vehicle comes equipped with factory running boards crawl under the Jeep, unbolt and remove factory running board. Set factory running board and factory hardware aside in a protected area. Repeat step for the other side.

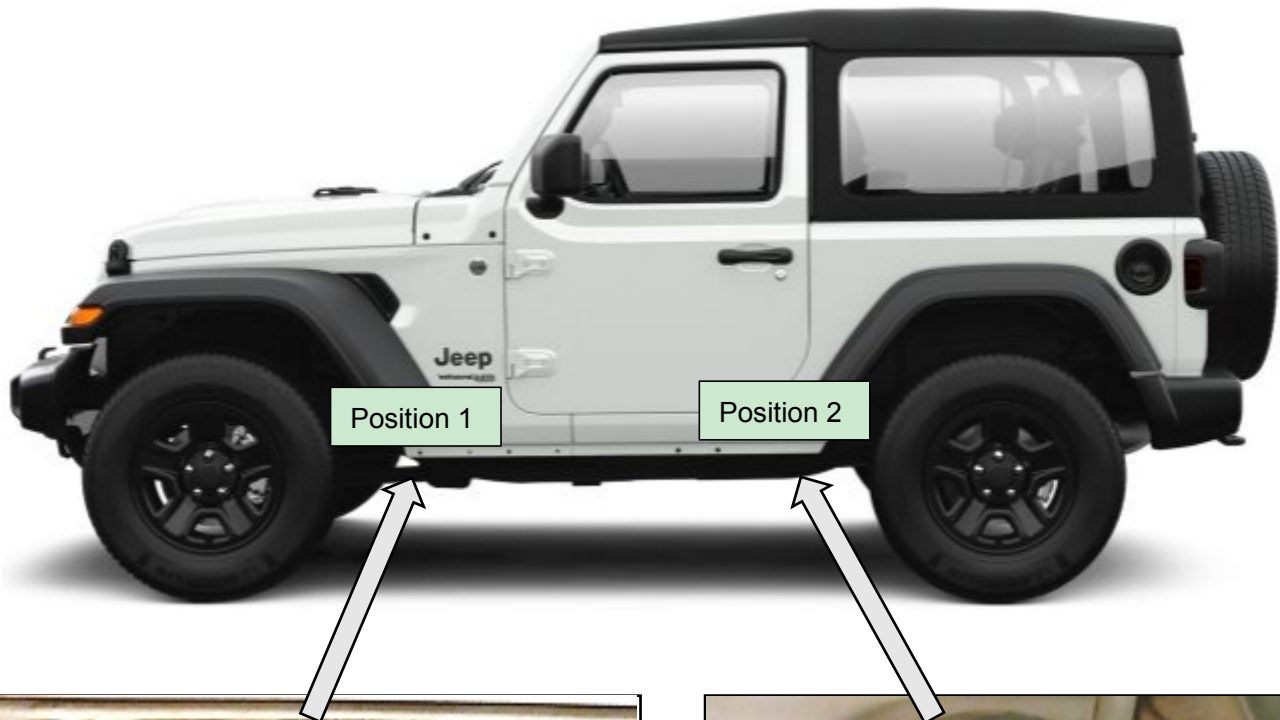

Step 1.
Working under the vehicle at position 1, remove the factory body mount bolt using an 18mm socket. With bolt removed a factory isolator may drop down. Push the factory isolator back up into position. Discard factory mounting bolt (Note: Factory bolts are on tight and secured with red Loctite. Proceed slowly with even pressure to break Loctite seal and remove the bolt).



Step 2.
Proceed to position 2 and remove the body mount bolt using the same 18mm socket. Set bolt with captured washer aside for later use.

Installing Rock Slider



Step 1.

Position your new Gen2 R5 Rock Slider on a padded tarp on the driver side of the vehicle as shown above. Locate supplied front mount spacer. Place it in the mounting cup in the front of the rock slider as shown above.

Installers Tip:

Place supplied M12x130mm mounting bolt with supplied M12 washers in a convenient place at front of rock slider.

Place factory bolt in a convenient place at rear of rock slider.



Step 2

Slide a supplied M12 washer onto the M12x130mm mounting bolt. Crawl under the Jeep and with the help of an assistant lift rock slider into position lining up the holes in the rock slider with the mounting holes in the Jeep. With your assistant holding the rock slider in place install the M12x130mm mounting bolt through the hole in the rock slider and into the vehicle mounting hole. Tighten down using an 18 mm socket. Do Not fully tighten at this time.



Step 3

Proceed to the rear of the rock slider. Install the factory mounting bolt through the hole in the rock slider and into the vehicle mounting hole.

Tighten using an 18mm socket.

With both mounting bolts installed proceed to fully tighten the bolts.

Repeat all steps outlined above for the other side of the vehicle.

Installation Finished.

PRODUCT CARE

1. Periodically check the product to ensure all fasteners are tight and components are intact.
2. Regular washing and waxing is recommended to protect the finish of the product.

CHECK OUT THESE OTHER QUALITY PRODUCTS FROM PARAMOUNT AUTOMOTIVE



Trail doors with mirrors: 81-20900.
2018-Onward Jeep Wrangler/Gladiator



Plastic Fender liners Front: 81-21202
2018-Onward Jeep Wrangler/Gladiator



Plastic Fender Liners Rear: 81-21203
2018-Onward Jeep Wrangler/Gladiator



Guardian Stamped Front Bumper Mid Width: 81-20301
2007-Onward Jeep Wrangler/ 2019-Onward Jeep Gladiator



Guardian Stamped Front Bumper Full Width: 81-20302
2007-Onward Jeep Wrangler/ 2019-Onward Jeep Gladiator

WARRANTY



For more information please visit our website. www.paramount-automotive.com