

CFE PRODUCTS



Custom FLAG mounting bracket

MODEL # JK FLGM R

JK Jeep Wrangler / 2007 & UP

INSTALLATION

1. REMOVE SPARE TIRE.
2. REMOVE THE TWO RIGHT SIDE UPPER BOLTS THAT HOLD ON THE SPARE TIRE MOUNT, FIG # 2.
3. INSTALL FLAG MOUNT AS SHOWN IN FIG # 2 IF YOU HAVE THE FACTORY SPARE TIRE CARRIER, USE THE TWO STAINLESS STEEL SHIMS AND LONGER BOLTS SUPPLIED. IF YOU DO NOT HAVE THE FACTORY SPARE TIRE CARRIER, USE THE TWO NYLON SHIMS, SEE FIG # 1.

FIG # 1


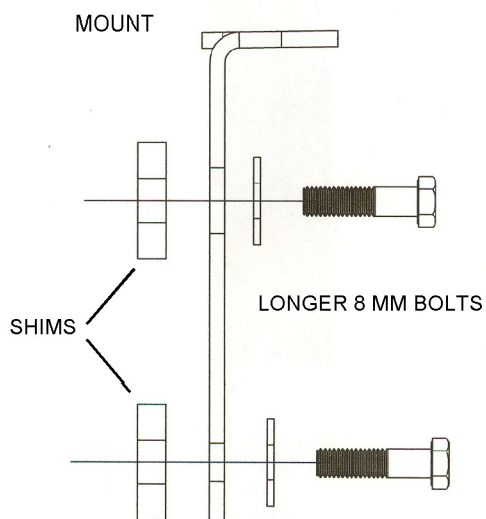


FIG # 2

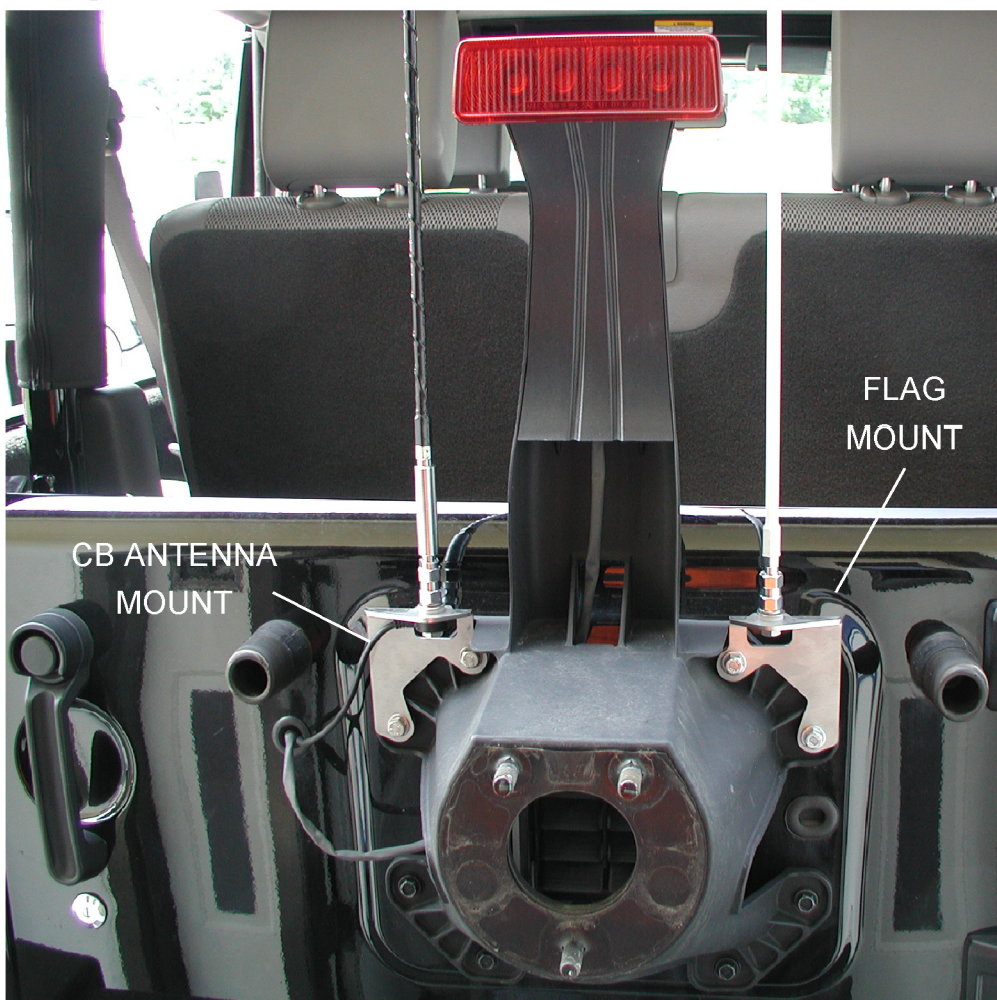

Questions or Comments ? call CFE PRODUCTS @ 610 358 1886 / ASK FOR BOB