


WIRING TIPS:

- If High/Low Beam does not come on, flip the connector around 180°
- Check the factory fuses if the lights are not turning on when connected.
- Sidemarker Connector is not used.
- Only use Black Resistors if Needed.*


TYPE A: OEM HALOGEN LIGHT NO LED DRL

<HEADLIGHTS

TRUCK WIRING>

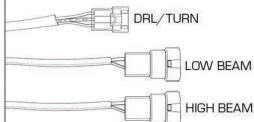



DIRECT CONNECTION,
NO WIRING
ADAPTER NEEDED.

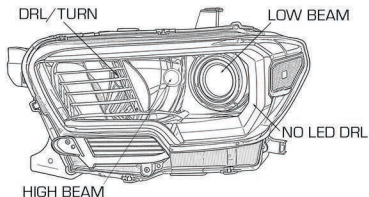

TYPE B: OEM HALOGEN LIGHT WITH LED DRL

<HEADLIGHTS

TRUCK WIRING>

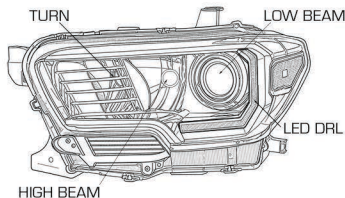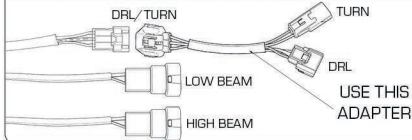

TYPE C: OEM LED HEADLIGHT

<HEADLIGHTS

TRUCK WIRING>

