



Installation Instructions

FITS:
 16-21 Toyota Tacoma
 20-21 Jeep Gladiator JT


Bed Cargo Rack
Part#: 91-60200

TOOLS NEEDED

Ratchet	Socket	Allen Wrench	Torque	Basic Hand Tool
---------	--------	--------------	--------	-----------------

COMPONENTS & HARDWARE

#	QTY		#	QTY	
A	1	Center Cargo Rack	B	2	Side Cargo Rack
C	4	Nut Plate	D	4	Bed Rail Bracket
E	2	Tube Spacer	F	2	Wing Nuts
G	1	Handle Keeper Isolator	H	6	M8x20mm Button Head Bolt
I	4	M8x30mm Button Head Bolt	J	4	M8x30mm Carriage Bolt
K	10	M8 Hex Nut	L	16	M8 Flat Washer
M	10	M8 Split Washer	N	2	M10x90mm Carriage Bolt
O	2	M10 Flat Washer	P	2	M10 Split Washer

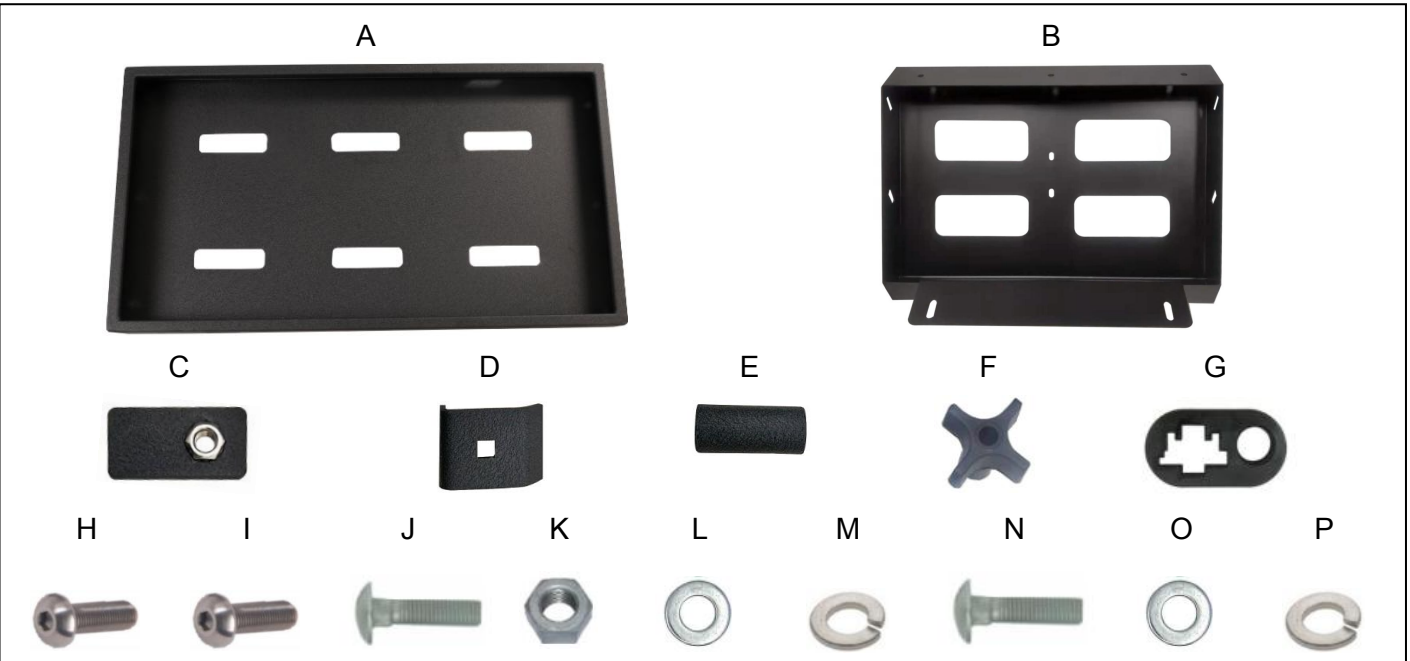

Thank you for purchasing our cargo rack. Please take a few minutes to read and thoroughly familiarize yourself with the installation procedures in this manual. Following the steps as outlined will save you time and help reduce mistakes. Once the instructions are reviewed, if you feel that you are not capable of safely installing the parts seek the help of a qualified installation expert to help you complete the job. For Technical assistance call 866-988-8348

IMPORTANT NOTICE and DISCLAIMER:



Modification of your vehicle may create a dangerous condition which could cause property damage to personal property or serious bodily injury. The buyer hereby expressly assumes all risks associated with any such modifications.

The Manufacturer of this product will not accept responsibility for personal injury or property damage arising from the failure of any parts manufactured or sold by Paramount Automotive or any of its agents.

California Proposition 65 Warning!

This product may contain one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

With factory bed rail system

Installing Side Cargo Rack



Step1.
Pop off the end cap from truck here.



Step2:
Slide 2 nut plate in the rail. Don't have to position it in the exact location just yet.

Installing Cargo Rack



Step1.
Using a blanket on a table or the ground. Assemble the Cargo Rack together using the supplied M8x20mm button head bolt, flat washers, split washer and M8 nuts.



Step 2.
Place the Cargo Rack on the proper position. Install two Side Cargo Rack onto the nut plate just installed using the supplied M8x30mm Allen head bolt and M8 flat washer.

NOTE: Install the cargo rack so the logo is facing towards the end of truck.

Installation Finished

Without factory bed rail system

Assembling Cargo Rack



Step1.
Using a blanket on a table or the ground. Assemble the Cargo Rack together using the supplied M8x20mm button head bolt, flat washers, split washer and M8 nuts.



Step2.
Install the assembled cargo rack onto the factory bed frame.
Install the cargo rack so the logo is facing towards the end of truck.



Step 3.
Once positioned where you want the rack. Install the four Bed Rail Bracket using the supplied M8x30mm carriage bolt, washer and nut to the back side of the bed rack and truck bed frame. NOTE: The 30 degree angle will be upwards and placed correctly it will clamp over the factory bed frame sheet metal.



Periodically check all bolts for proper torque.

Installation Finished