

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

BILLET ALUMINUM INTERIOR AIR VENT

Time To Install: Approx. 20 Minutes



Twist the Vent Ring clockwise and pull out the entire Vent Assembly.



Using your finger, remove the Vent Ring by lifting the four clips.



Pull the Vent Ring off.



Pull the Vent out of the housing.



By squeezing the top and bottom of the plastic surround, you can pull out the factory Vent.



Insert your new Vent and align with the holes.



Place the Vent back into the housing.



Align and clip all four tabs of the Vent Ring.



Insert the entire Vent Assembly back into the opening and twist counterclockwise into the locked position. Repeat for the other vents and you're finished.

Continued on backside...

BILLET ALUMINUM INTERIOR AIR VENT SURROUND

Time To Install: Approx. 10 Minutes



Extremely Important: Clean the area where the trim is to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note: Do not** use the 3M Tape Primer as a cleaner.



Prime only the plastic area where the Vent Surround is to be installed. After the areas are completely cleaned and dry, you must then coat these plastic areas with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the Vent Surround is to be installed with the Primer 94 and wait 5 minutes before installing the Vent Surround.



Position and Adhere the Surround. Before removing any heavy duty 3M Tape backing from the Vent Surround, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of one of the Vent Surrounds. Carefully place the Vent Surround in position. Push and hold firmly for a few seconds. Repeat for the other vents and you're finished.

BILLET ALUMINUM MARKER LIGHT SURROUND

Time To Install: Approx. 10 Minutes




Extremely Important: Clean the area where the trim is to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note: Do not** use the 3M Tape Primer as a cleaner.



Very important: Only put the primer on the very outside edge of the lens. The primer should only go where the adhesive is going to touch it and nowhere else.

Prime only the plastic area where the Marker Light Surround is to be installed. Very important: Only put the primer on the very outside edge of the lens. The primer should only go where the adhesive is going to touch it and nowhere else. After the areas are completely cleaned and dry, you must then coat these plastic areas with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the Marker Light Surround is to be installed with the Primer 94 and wait 5 minutes before installing the Marker Light Surround.

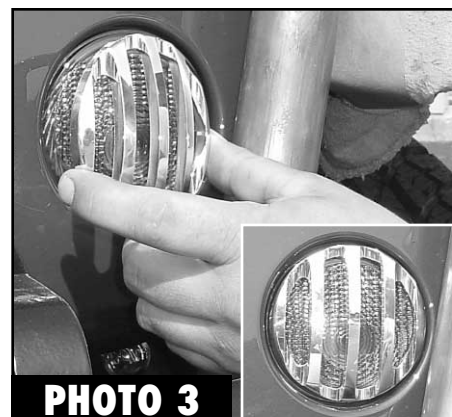

Position and Adhere the Surround. Before removing any heavy duty 3M Tape backing from the Marker Light Surround, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of one of the Marker Light Surrounds. Carefully place the Marker Light Surround in position. Push and hold firmly for a few seconds. Repeat for the other Marker Lights and you're finished.

RealWheels Cover Company, Inc. • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180