



3651 N Highway 89 • Chino Valley, AZ 86323
(928) 636-7080 • www.p-a-g.net

**JEEP WRANGLER JK 2 DOOR
JEEP WRANGLER JK 4 DOOR
ROCKER PANEL W/BAR
INSTALLATION INSTRUCTIONS
2 DOOR MODELS**

'07-'10 KIT# 84207

4 DOOR MODELS

'07-'10 KIT# 84307

⚠ WARNING

Before you install this kit, read and understand all instructions, warnings, cautions, and notes in this instruction sheet and in the vehicle owner's manual.

⚠ CAUTION

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle. We strongly recommend that a certified mechanic familiar with the installation of similar components install this kit.

⚠ WARNING

Many states and municipalities have laws restricting bumper heights and vehicle lifts. Consult state and local laws to determine if the changes you intend to make to the vehicle comply with the law.

⚠ WARNING

Always wear eye protection when operating power tools.

⚠ WARNING

Before you install this kit, block the vehicle tires to prevent the vehicle from rolling.

NOTE

Performance Automotive Group recommends using the Loctite® supplied in the kit on the threads of all kit nuts and bolts unless specified otherwise in these instructions.

Before Starting Installation

NOTE

Kit parts are prefaced by the word *kit* and appear in **bold** print.

1. Carefully read all warnings and instructions completely before beginning.
2. Verify all parts have been received in this kit by checking the parts list at the end of this document.

NOTE

If parts are missing from kit, please be prepared to provide the following information:

1. **Name** of purchase location
2. **Bar Code** on side of box
3. **Date** above bar code
4. **Date** inside box cover
5. **Inspector #** from inside box cover

3. **Only install this kit on the vehicle for which it is specified.** If anytime during the installation you encounter something different from what is outlined in the instructions, call technical support at (928) 636-7080.

4. Special tools needed:


- a. Die grinder or similar tool capable of cutting metal.
- b. Drill and 3/8 drill bit.

5. Park vehicle on a clean, dry, flat, level surface and block tires so vehicle cannot roll in either direction.


Body

1. Prepare to Install Rocker Panel


- a. Remove two bolts from body seam.

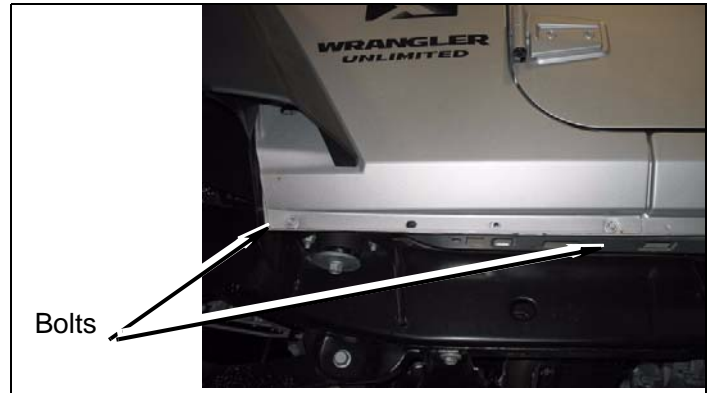

- b. Cut off two weld nuts on back of body seam.

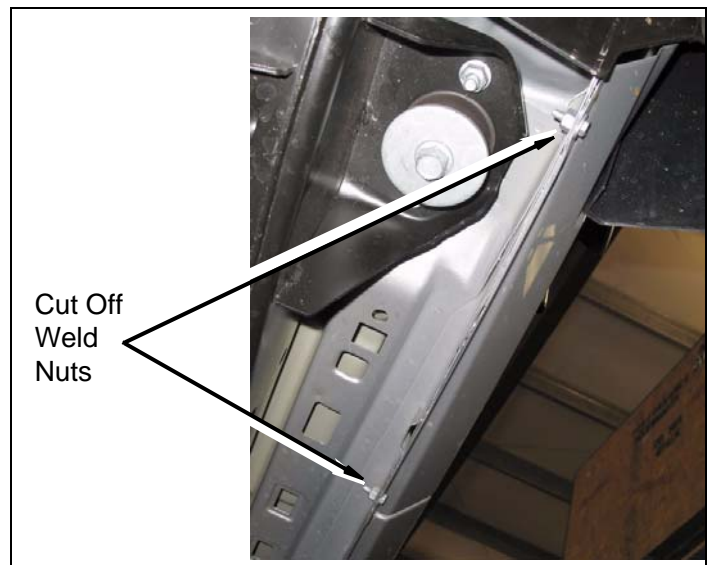


- c. **2 Door Model:** Position driver side kit **rocker panel** on vehicle. Mark and center punch last mounting hole on body seam using rocker panel as template.

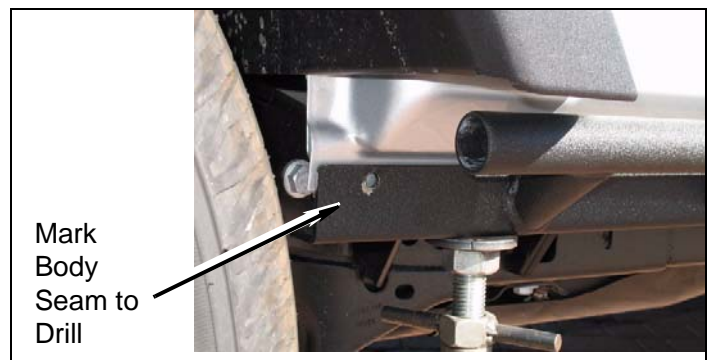


- d. Remove kit **rocker panel** from vehicle.

- e.

- f. **4 Door Model:** Position driver side kit **rocker panel** assembly on vehicle. Mark and center punch two mounting holes on body seam using rocker panel as template.

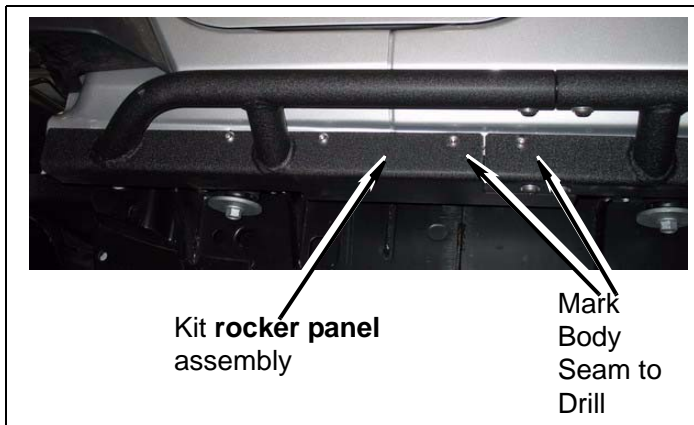


- g. Remove kit **rocker panel** from vehicle.
- h. **2 Door Model:** Drill marked hole using 3/8" drill. Enlarge remaining six holes to 3/8".

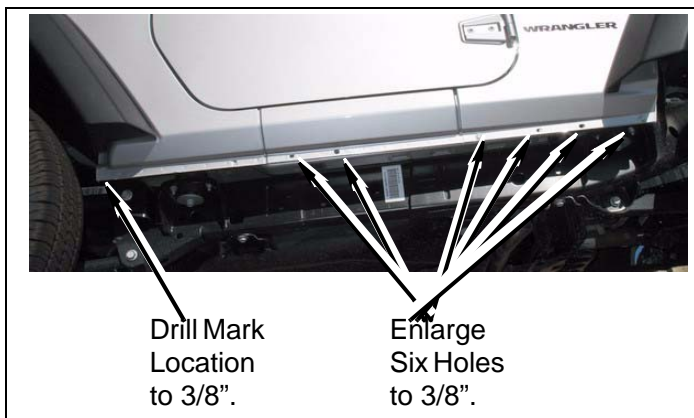



- i. **4 Door Model:** Drill two marked holes using 3/8" drill. Enlarge 8 holes on body seam to 3/8"
- j. **2 Door Model:** Install seven kit **u-nuts** on body seam.

- k. **4 Door Mode:** Install ten kit **u-nuts** on body seam.

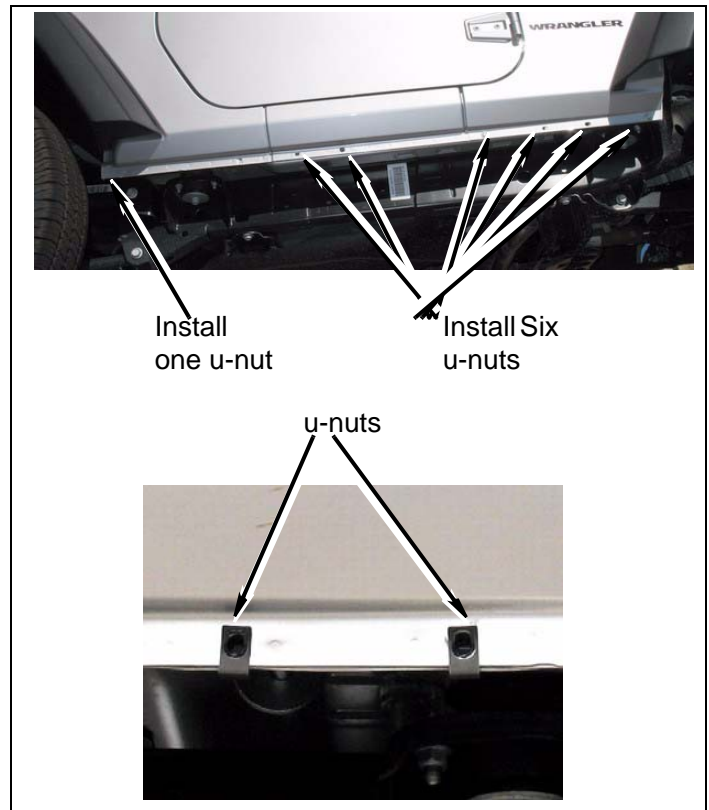


- I. 2 and 4 Door Models:** Install kit **bolt** (3/8" x 2.0" carriage), and kit **hanger** in two locations as shown.

- m. 4 Door Model:** Install kit **bolt** (3/8" x 2.0" carriage), kit **washer** (2" OD x 1/2" ID), kit **nut** (3/8" flange) and kit **hanger** in rear body opening.

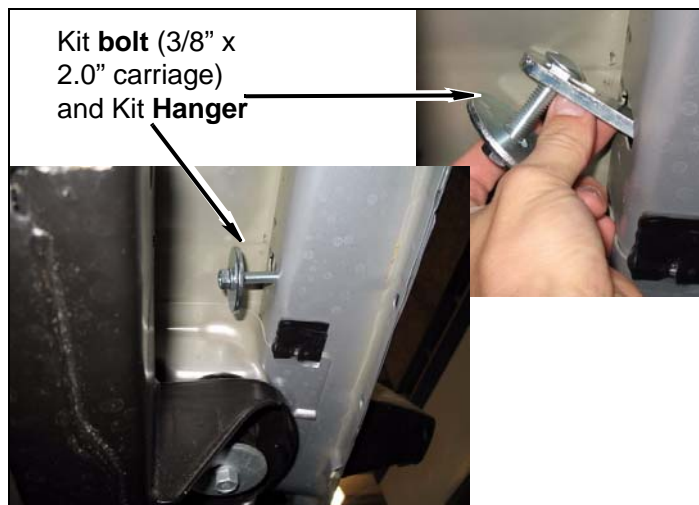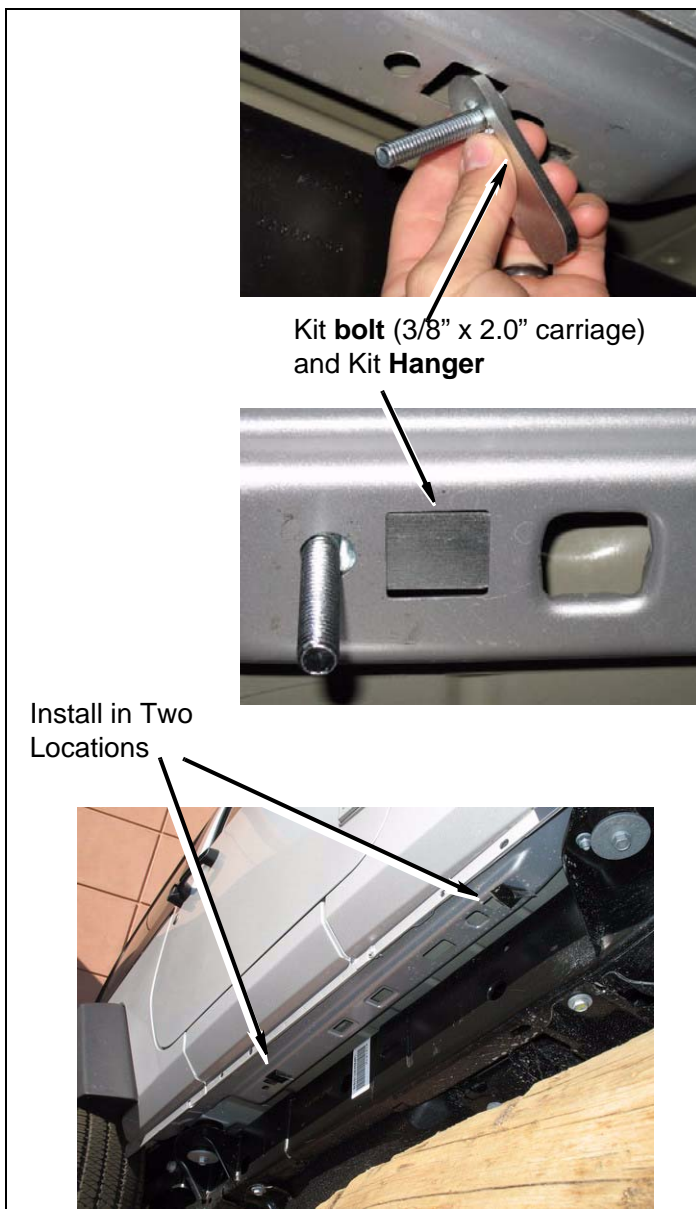


2. Install Rocker Panel


- a.** Install kit **rocker panel** on vehicle making sure kit **bolts** (3/8" x 2.0" carriage) align with holes in kit **rocker panel**.
- b. 2 Door Model:** Install seven kit **bolts** (5/16" x 1" button head)
- c. 4 Door Model:** Install ten kit **bolts** (5/16" x 1" button head).

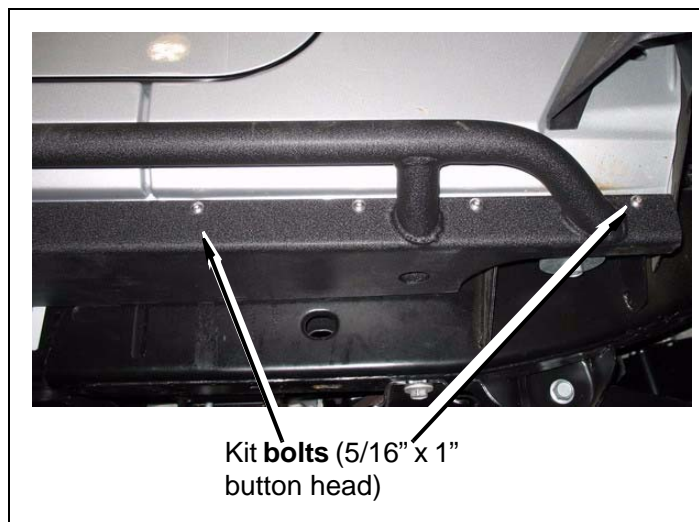

- d. **2 and 4 Door Models:** Install two kit **nuts** (3/8" flange) on two kit **bolts** (3/8" x 2.0" carriage) on lower side of kit **rocker panel**.

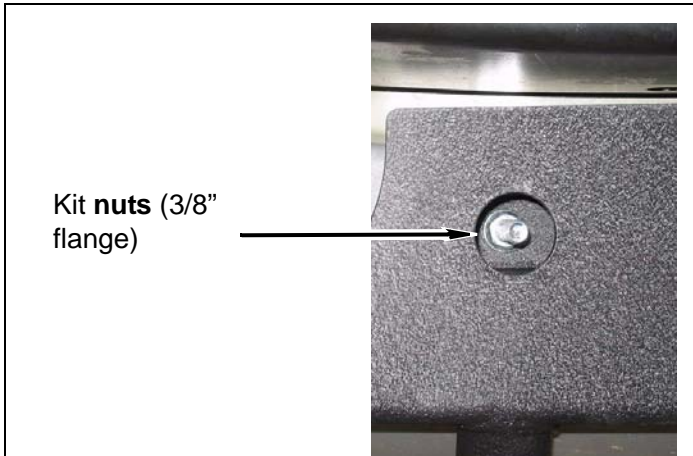

- e. **4 Door Model:** Tighten kit **nut** (3/8" flange) on kit **bolt** (3/8" x 2.0" carriage) on side of kit **rocker panel**.

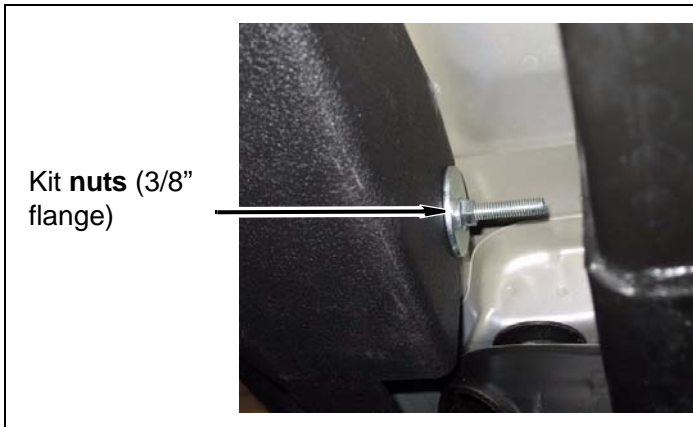

- f. Repeat above steps on passenger side.

Kit Parts List

Qty. Description

KIT # 84207 (2 Door)

1	Panel (rocker protection, driver)
1	Panel (rocker protection, passenger)
1	<u>84207BAG (Hardware bag kit)</u>
14	U-Nut (5/16")
14	Bolt (5/16 x 1" stainless button head)
4	Hanger (3" oval, slotted)
4	Bolt (3/8" x 2" carriage)
4	Nut (3/8" flange)

KIT # 84307 (4 Door)

1	Panel (rocker protection, driver)
1	Panel (rocker protection, passenger)
1	<u>84307BAG (Hardware bag kit)</u>
6	Hanger (3" oval, slotted)
2	Washer (2" OD x 1/2" ID)
20	Bolt (5/16 x 1" stainless button head)
6	Bolt (3/8" x 2" carriage)
6	Nut (3/8" flange)
20	U-Nut (5/16")
4	Washer (5/16" USS)