



UNIVERSAL FAIRLEAD



AEV30408AA
Last Updated: 06/17/20

INSTALLATION GUIDE




PLEASE READ BEFORE YOU START

To guarantee a quality installation, we recommend reading these instructions thoroughly before beginning any work. These instructions assume a certain amount of mechanical ability and are not written nor intended for someone not familiar with auto repair.

INCLUDED PARTS	QTY	REQUIRED TOOLS
AEV Universal Hawse Fairlead	1	Basic Hand Tools
AEV Molded Logo	1	
Hardware Pack	1	

IMPORTANT NOTICE


THIS FAIRLEAD ONLY WORKS WITH A WINCH IN THE **FOOT DOWN** CONFIGURATION

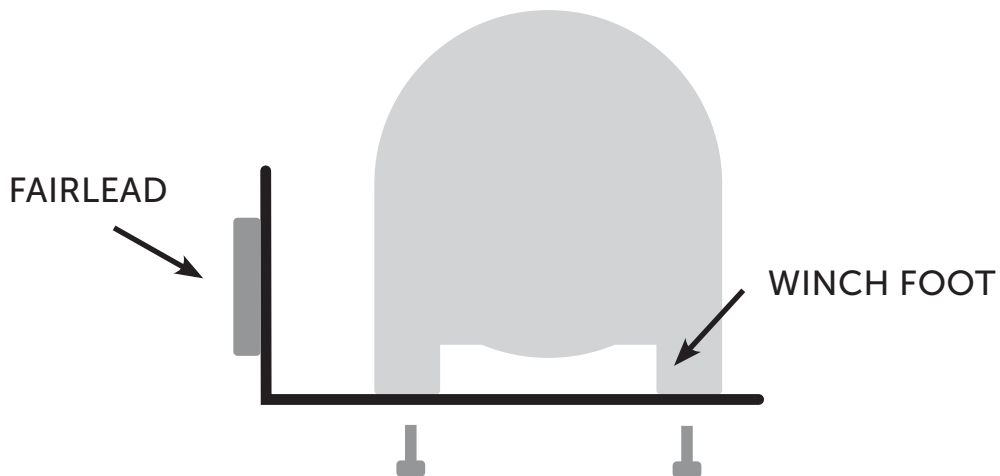



PREPARATION


1. Using supplied alcohol pad prep and clean fairlead.
2. Install logo into fairlead and firmly press down for 10 seconds.

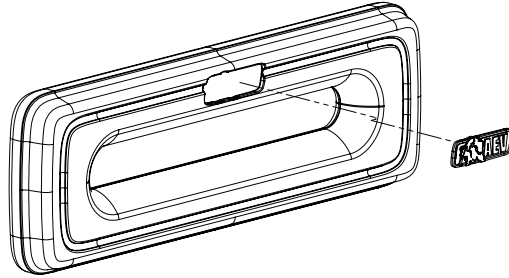

3. Remove winch hook from rope.
4. Remove existing fairlead.

INSTALLATION

1. Feed winch rope through AEV Fairlead.
2. Use supplied M12 bolts from the backside and torque to 43 ft-lbs.

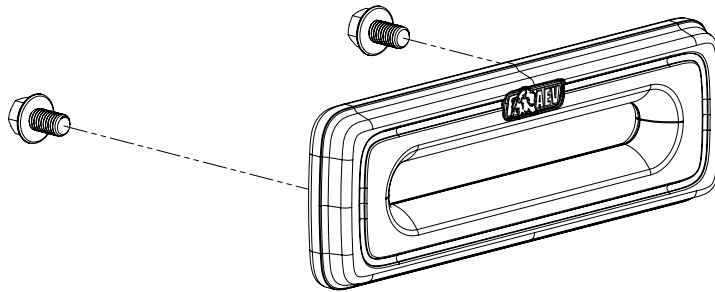

3. Reinstall winch hook. AEV recommends using the AEV Winch Hook Isolator (AEV80808014AA) to protect the fairlead.