



MOUNTAIN OFF ROAD ENTERPRISES, LLC.
P.O. BOX 690 DELTA COLORADO 81416
(877)JEEP-A2Z or (877)533-7229
(888)698-5337 FAX
E-mail: info@mountainoffroad.com
www.mountainoffroad.com

INSTALLATION INSTRUCTIONS for ARB18 dual compressor bracket

HARDWARE KIT:
1- JEEP MOUNTING BRACKET
1- COMPRESSOR MOUNTING BRACKET
12- 6MMX16 BOLTS
12- 6MM FLAT WASHERS
12- 6MM LOCK WASHERS
1- 6MM STEP NUT



Please read and understand all instructions before beginning the installation of the ARB18 Compressor bracket. Please read the terms and policies on the back of these instructions.

The **ARB18** dual compressor bracket is designed to fit the following Jeep® vehicles: 2018 and newer JL Unlimited (4 door) Wranglers.

- STEP 1:** Mount the ARB CKMTA12 dual compressor to the compressor mounting bracket using 8- 6mm bolts with flat washers and lock washers. (see figure1).
- STEP 2:** Install ARB switch into rectangular hole on top of compressor bracket.
- STEP 3:** Locate the oval shaped hole under the rear seat in front of the crossmember and remove the rubber plug. Insert wiring harness up through the hole. (see figure 2).
- STEP 4:** Route the wiring harness under the carpet underneath the rear drivers side rear seat. Run wiring harness through hole in seat bracket. (see figure 3)
- STEP 5:** Locate and remove the two torx head roof bolts behind the rear driver side seat. Pull the carpet loose from the carpet retaining clip. (see figure 4) Remove plastic retaining clip from the threaded stud. (See figure 5)
- STEP 6:** Reposition the carpet back over the threaded stud. Side the jeep mounting bracket between the hardtop and jeep body and over the threaded stud. Reinstall the two torx bolts and replace the plastic carpet retaining clip with the 6MM step nut. Some people may prefer to cut a small slit in the carpet to route the wires through. If you want to do this, the white X marks the approximate location of the hole. Some people may prefer to route the wires up and over the carpet between the carpet and the sheet metal, the white arrow shows the approximate location. (see figure 6)



STEP 7: Attach wiring harness to ARB switch. Route wires through or over carpeting and install compressor mounting bracket to jeep mounting bracket using 6MM bolts with flat and lock washers. (See figure 7)

STEP 8: Tuck wiring under carpeting and reposition all carpeting. Make sure wiring harness will not get damaged by folding the rear seat. Cut a hole with a slit in the oval shaped rubber plug under the rear seat and reinstall around wiring harness. We recommend sealing this protrusion with silicone.

STEP 9: Following the instructions provided with your ARB compressor, extend the wiring harness to battery and fuse box. Make sure you use the appropriate gauge wire and secure all wires adequately.

STEP 10: When removing the hard top, make sure you reinstall the two torx bolts through the compressor bracket to avoid damage the bracket or compressor.

TERMS-POLICIES:

FIT and TOLERANCES: This skid plate is the result of countless hours of research, testing, fitting and refining. Jeep® frames have a wide tolerance on bolt hole centers from frame to frame. This is why M.O.R.E.™ has installed "slots" in which to mount them. In addition to the factory tolerances, most people install other then factory equipment such as suspension lift kits, bumpers, etc. M.O.R.E.™ has done the best job we can to insure that our parts fit with all of the possibilities. However, you may find it necessary to grind, elongate, bend, or force these parts to fit on your rig. Please use common sense when installing these parts and let us know how we can improve them.

DAMAGE CLAIMS: All orders are carefully packed, however, mishandling by the carrier can result in damage. The carrier has the responsibility for the shipment from the time it leaves our warehouse until it is delivered to you. All claims for lost or damaged goods should be reported to the carrier, not to **M.O.R.E.™** LLC.

RETURNS: No returns will be accepted without prior permission from **M.O.R.E.™** LLC. After you receive a Return Goods Authorization (RGA) number, merchandise must be returned prepaid and insured. A claim must be made with in 30 days from receipt of merchandise. The original invoice or a copy with the RGA number written on must accompany all returns. A 20% restocking fee will be charged on all parts returned for credit or refund unless merchandise is proven to be defective or was shipped wrong by **M.O.R.E.™** LLC. *No merchandise will be issued credit or refund if it has been installed, modified, used in any way or is in unsalable condition.*

WARRANTY: All merchandise is warranted to be free from defects in materials and workmanship prior to installation. Any alteration or improper use will void this warranty. Because all parts we sell are intended for use in heavy-duty applications it is not possible to warrantee or guarantee the performance of any items. **M.O.R.E.™** LLC. products and the products manufactured by others, which we sell may be subject to an infinite variety of conditions due to the manner in which they are used, serviced and/or installed. Purchasers and users of such products rely upon their own judgment as to the suitable use selection, service and installation of such products.

PRODUCT DISCLAIMER: Modification of your vehicle to enhance performance with parts sold by **M.O.R.E.™** LLC. may create a dangerous condition which could cause serious bodily injury, and the buyer hereby expressly assumes all risks associated with any such modifications. All parts sold by **M.O.R.E.™** LLC. are for racing or off road use only. Mountain Off Road Enterprises LLC. will not accept responsibility for personal injury or property damage arising from the failure of any parts manufactured or sold by **M.O.R.E.™** LLC.

Specifications are subject to change without notice.

Jeep®, AMC®, CJ®, YJ®, TJ®, LJ®, JK®, Wrangler®, are registered trademarks of DaimlerChrysler. **M.O.R.E.™** is not affiliated with DaimlerChrysler.

M.O.R.E.™, BombProof™, S.R.S.™, SlipLoc™, DoubleJointed™, RockProof™, are trademarks used by **Mountain Off Road Enterprises, LLC.** These instructions and the M.O.R.E.™ logo are copyright©, 1999-2018.

MORE

Mountain Off-Road Enterprises

FIGURE 2

FIGURE 1



FIGURE 3



FIGURE 4

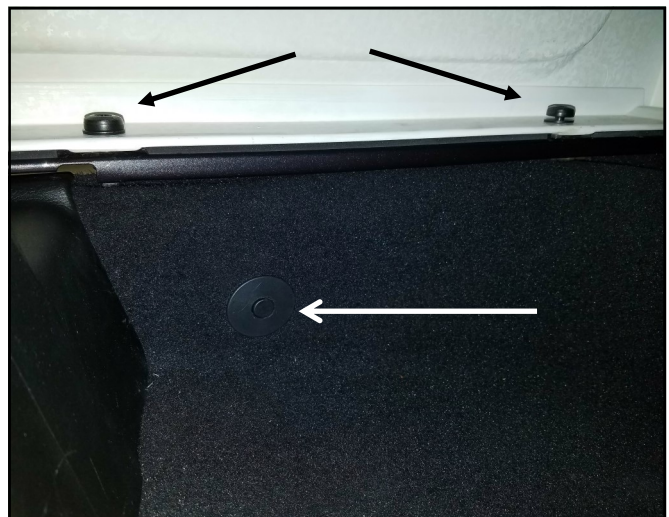


FIGURE 5



FIGURE 6

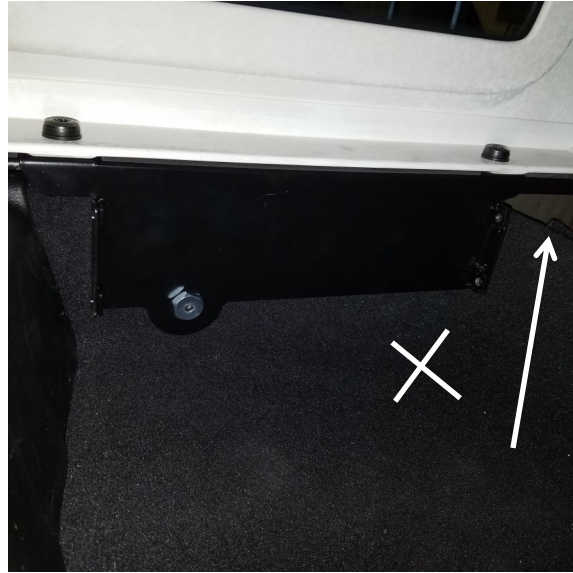


FIGURE 7

