



INSTALLATION INSTRUCTIONS

Armorlite™ Rear Cargo Mat

Vehicle Application
Jeep Wrangler JK



BEFORE INSTALLATION

- 1 Please make sure all contents are removed from your rear cargo area before installation.
- 2 Carefully clean cargo area to ensure the cargo area is clear of any dust, dirt and rocks.
- 3 Unpack and lay cargo mat flat for approximately 15 to 20 minutes or until the mat remains flat.
Note: In colder climates it is recommended to perform this step indoors as to speed up the process.

INSTALLATION

- 1 Place the cargo mat in your vehicle with the Armorlite logo facing upright.
- 2 Pull tie down rings through pre-cut flaps, if required.

CLEANING

Use a damp cloth or sponge with soap and water.


TOOL (OPTIONAL)

Not Included



Utility Knife

OPTIONAL STEPS

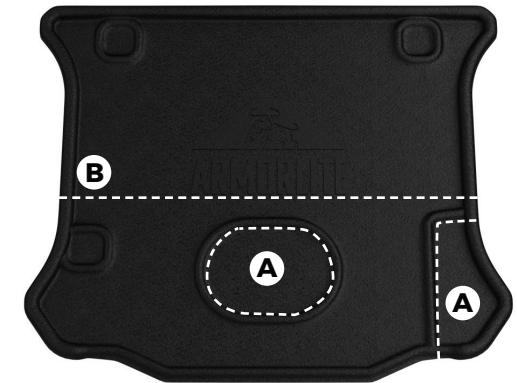

SUBWOOFER CUTOUTS (A)

Your vehicle may contain a subwoofer located either in the lower right-hand side or bottom center of the cargo area. You will find two subwoofer molded guides on the back side of the Armorlite Cargo Mat. Using a utility knife cut along the necessary cutting guides for your vehicle.

HINGE POINT (B)

On each side of the cargo mat you will find cut notches that will allow for the cargo mat to fold upward when the load floor needs to be opened. These hinges will not compromise the performance of the cargo mat, or its ability to hold water.

NEED SUPPORT?

Visit www.GoArmorlite.com/support

View Full Warranty at www.GoArmorlite.com/warranty