

**BLACK-OPS SERIES** 

**BRONCO** 


FRONT DIFFERNTIAL SKID PLATE



\*VERIFY YOU HAVE ALL THE COMPONENTS BEFORE STARTING THE INSTALLATION. REFER TO THE ENGINEERING DRAWINGS AT THE END OF THIS DOCUMENT FOR A COMPLETE PARTS LIST\*

Start by removing your stock skid plate which covers the front differential. Keep the mounting bolts because you will reuse them to mount your new LOD Front Differential Skid Plate.


Stock skid plate location

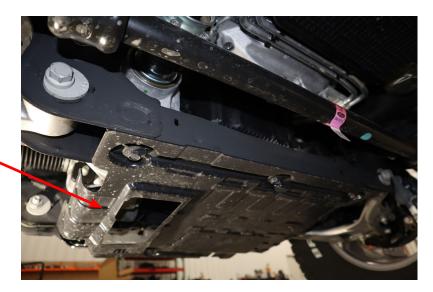


With the stock skid plate removed, you can now see the bolt locations for your new LOD skid plate on the front frame crossmember. You will also need to remove one the frame bolts that mount your front differential.

**Bolt Locations** 

Remove the larger front differential frame bolt closest to the driver side. Leave the other bolt in place.

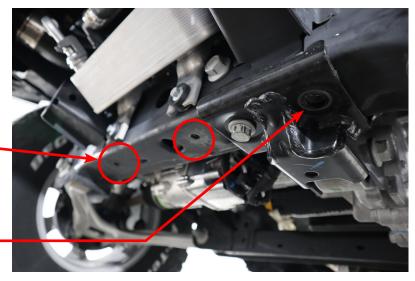

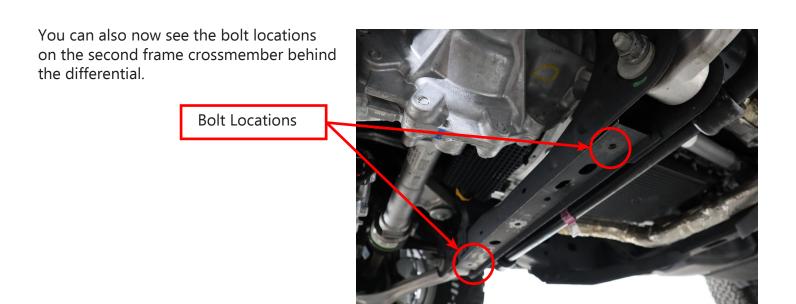

With a helper, place your new LOD Front Differential Skid plate into position over the two frame crossmembers.


Loosely install all 4 black bolts (the bolts from your stock skid plate). Also install the larger frame bolt for your front differential mount.

Once all the bolts are started, tighten all the bolts securely.




Front Differential Frame Bolt


**Bolt Locations** 

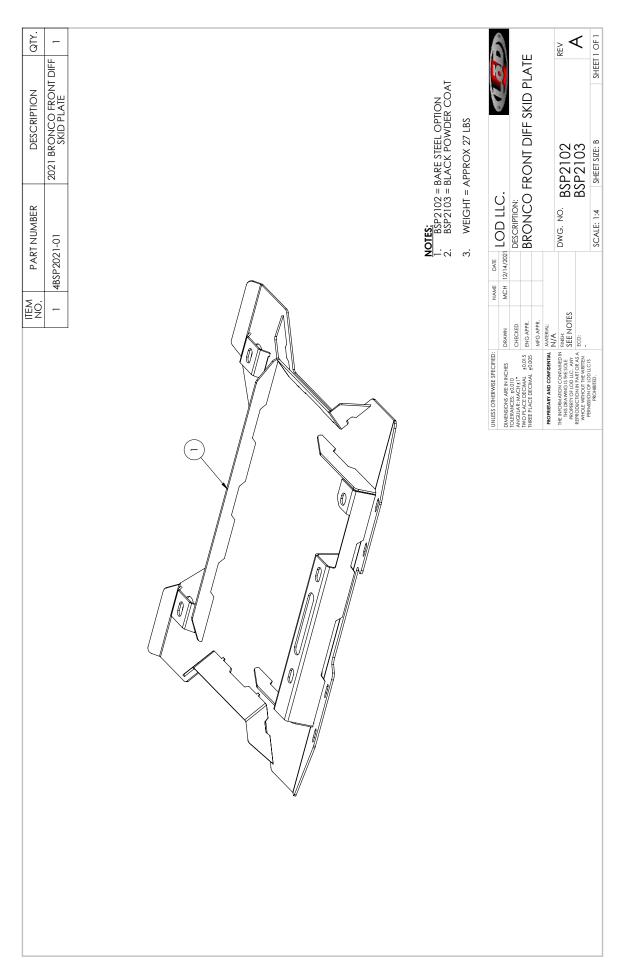



On:

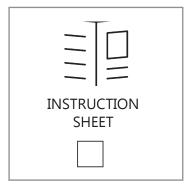

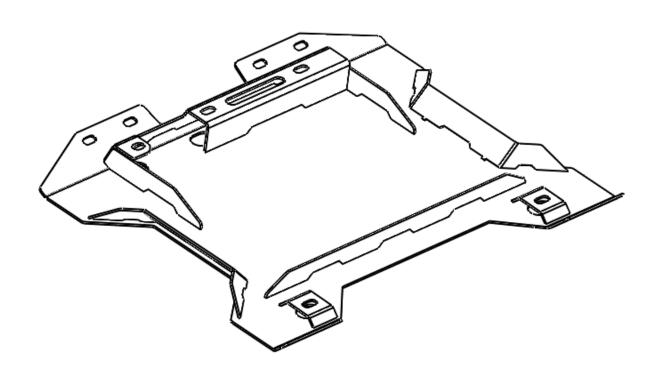

2021 BRONCO FRONTT DIFFERNTIAL
SKID PLATE
4BSP2021-01
(x1)