



CE-9033JLS JL WRANGLER & UNLIMITED / JT GLADIATOR TOW BAR MOUNTING KIT INSTALLATION INSTRUCTIONS & TECHNICAL MANUAL (STEEL BUMPER)



Fits

- All models of 2018 & up Jeep JL Wrangler & Unlimited and JT Gladiator (except Mojave edition) equipped with the steel front bumper.

Kit includes


- (1) CE-9033JLMP.....Tow Bar Mounting Plate (steel bumper only)
- (9) CE-980993A548.....M8-125 x 30mm flanged head bolt
- (2) CE-9033B.....Tow Bar Mounting Fork
- (2) CE-9033CP2.....Clevis Pin
- (2) CE-9033H.....Hairpin Clip

Required Tools

- Metric Hand Tool Set
- Standard Hand Tool Set
- Set of Torx Bits
- Torque wrench
- Blue Loctite

Torque Specs.

- 8mm Bolts.....23 ft. lbs.
- 10mm Bolts.....45 ft. lbs.

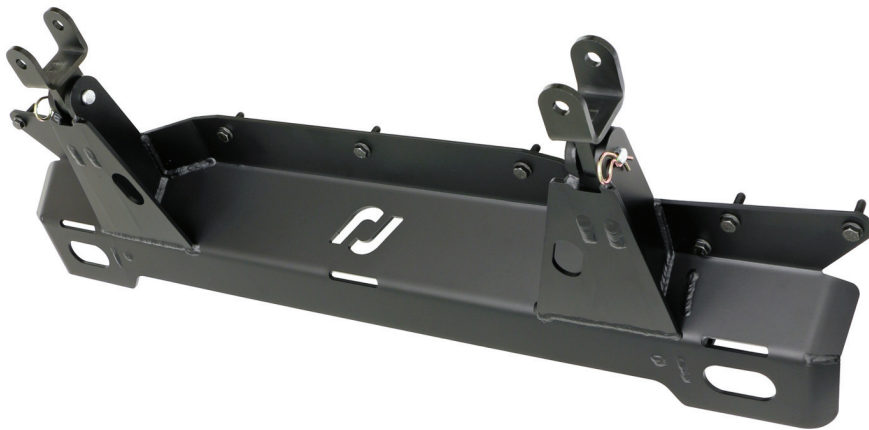

Installation Instructions

Notes: Use blue Loctite on all hardware that you install! Kit does not work on JT Gladiator Mojave edition vehicles!

Step 1

Remove the factory steel front chin panel from under the front bumper.



@RockJock4x4

/RockJock4x4

/RockJock4x4byJohnCurrie



1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580



Step 2

Remove the small brackets from the front frame horns and discard them. Retain their 10mm bolts for reuse.

Step 3

Lift the new RockJock tow bar plate into place and align the holes in the plate with the holes from the factory chin panel.



Step 4

Insert the 4 factory 10mm bolts (2 per side) from Step 2 and finger tighten them back into the holes that they came out of.

 @RockJock4x4

 /RockJock4x4

 /RockJock4x4byJohnCurrie

 **ROCK
JOCK** by JOHN CURRIE

1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580



Step 5

Use the 8mm bolts supplied in this kit in the 9 holes across the RockLock tow plate, 3 in the middle and 3 outboard on both sides. Once all of the bolts are installed, go back and tighten and torque all of the 8mm bolts and then the four 10mm bolts underneath.

Step 6

The tow bar fork brackets simply install with the supplied clevis pins and hairpin clips.



Tow Bar Instructions

- 1) The tow bar end forks included in this kit fit most common brands of tow bars (Freidl, DrawTite, Blue Ox, etc.). In most cases, you can remove the vehicle end tow bar brackets from your tow bar of choice and install the RockLock tow bar end forks onto the tow bar.
- 2) Insert the tongues of the tow bar forks into the forks on the tow bar plate, slide the clevis pins thru and insert the hairpin clips.
- 3) Strictly adhere to the instructions and recommendations in the tow bar's instruction sheet as to proper installation of safety chains or cables.



CALIFORNIA PROP 65 WARNING

WARNING: These products can expose you to chemicals including Chromium, Lead, Lead Compounds, Nickel (Metallic), Nickel Compounds, Diisonyl and Di(2-ethylhexyl) Phthalates (DEHP)(DINP) which are known to the State of California to cause cancer or birth defects or other reproductive harm. **For more information, visit www.P65warnings.ca.gov**

 @RockJock4x4

 /RockJock4x4

 /RockJock4x4byJohnCurrie



1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580

Completed Installation



 @RockJock4x4

 /RockJock4x4

 /RockJock4x4byJohnCurrie

 **ROCK
JOCK** by JOHN CURRIE

1592 Jenks Dr.
Corona, Ca. 92878
(714) 367-1580