

## MOLLE CENTER CONSOLE AND BRIDGE

07-18 JEEP WRANGLER JK  
CCJK-01



### TOOLS REQUIRED

- 3mm Allen
- 1/4" Drill Bit
- Rivnut Tool
- Safety Glasses

### SKILL LEVEL

- Novice/Intermediate
- 1 (you) to 2 persons

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.



## HARDWARE INCLUDED

- (14) M5x14mm Allen head bolts
- (14) M5 Washers
- (8) M5 x12 Nutserts



**STEP 1** | Assemble the center console on a work bench using a 3mm allen bit or wrench and the provided M5 hardware.

Use (1) washer with each allen head M5 bolt.

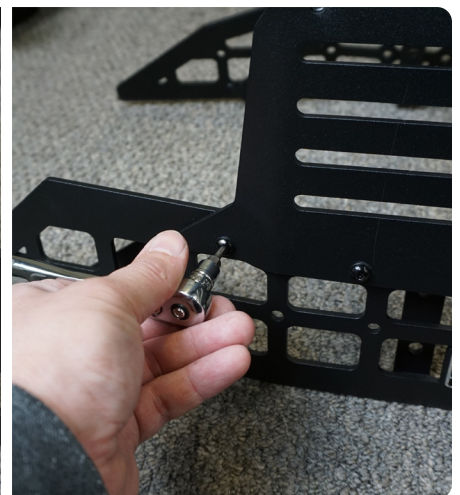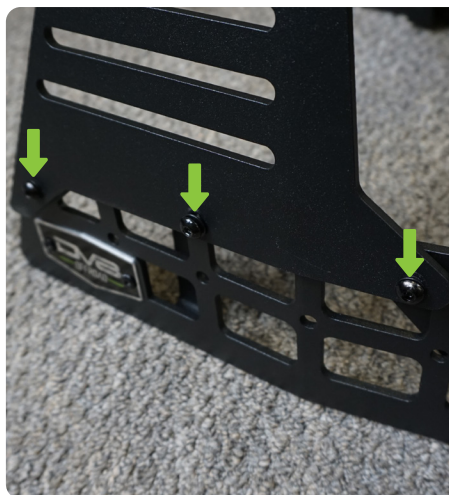

# INSTALLATION MANUAL

**STEP 2** | With the DV8 Center Console assembled, place the center console over the gear selector.



**STEP 3** | With assistance, hold the assembly in the desired mounting location and mark the (4) mounting holes on each side of the assembly.


Do not let the assembly shift while marking the mounting holes.



# INSTALLATION MANUAL

## STEP 4 | Remove the DV8 Center Console.

With a firm grip, pop the factory center console up.

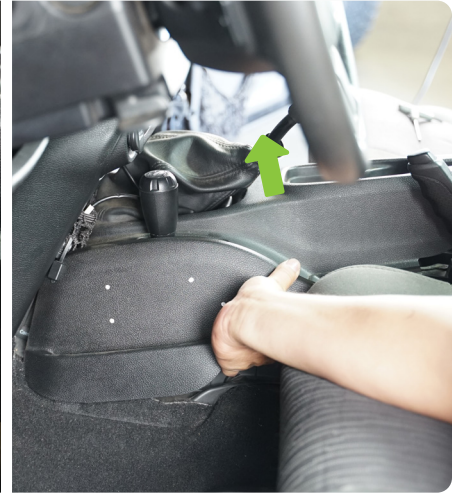

## STEP 5 | Using a 1/4" drill bit, drill (8) holes where previously marked.



# INSTALLATION MANUAL

**STEP 6** | Install the (8) provided M5 nutserts using a Hand Rivet Nut Setter.



**STEP 7** | Secure driver-side center console panel using a 3mm Allen bit or wrench and provided M5 hardware.


Use (1) washer per Allen head screw.



# INSTALLATION MANUAL

**STEP 8** | Install the assembled passenger-side panel & bridge.

Secure passenger-side panel and bridge using a 3mm Allen bit or wrench and provided M5 hardware.

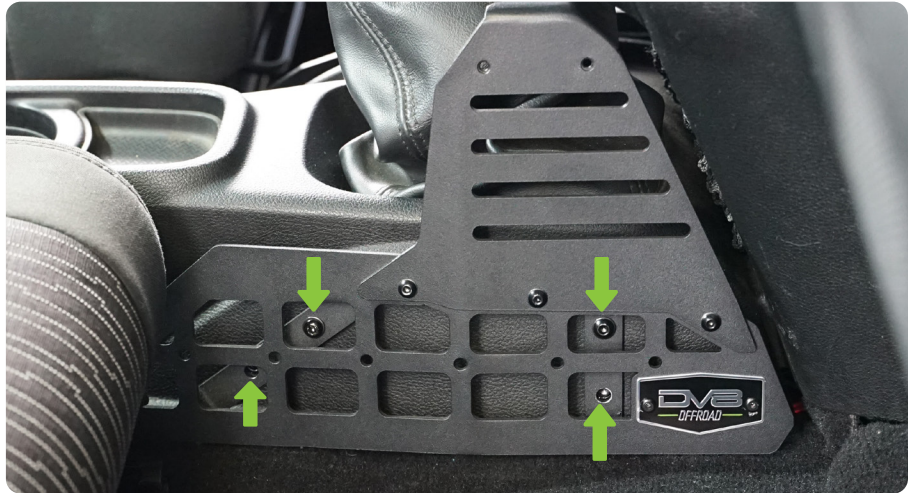

**STEP 9** | Secure the driver-side panel to the center console bridge using a 3mm Allen bit or wrench and the provided M5 hardware.

Double check that all hardware is secure.



# INSTALLATION MANUAL

**STEP 10** | Congratulations, installation of the CCJK-01 Center Console is now complete.

