

A-PILLAR DUAL POD MOUNTS

2020+ JEEP JL

LBJL-12



TOOLS REQUIRED

- T-40 Torque head socket
- 5mm Allen head sockets
- 10mm wrench

SKILL LEVEL

- Novice/Intermediate
- 1 (you)

Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.

HARDWARE INCLUDED

- (2) M8x30mm Allen Bolts
- (2) M8 Flat Washers
- (2) M8 Split Washers

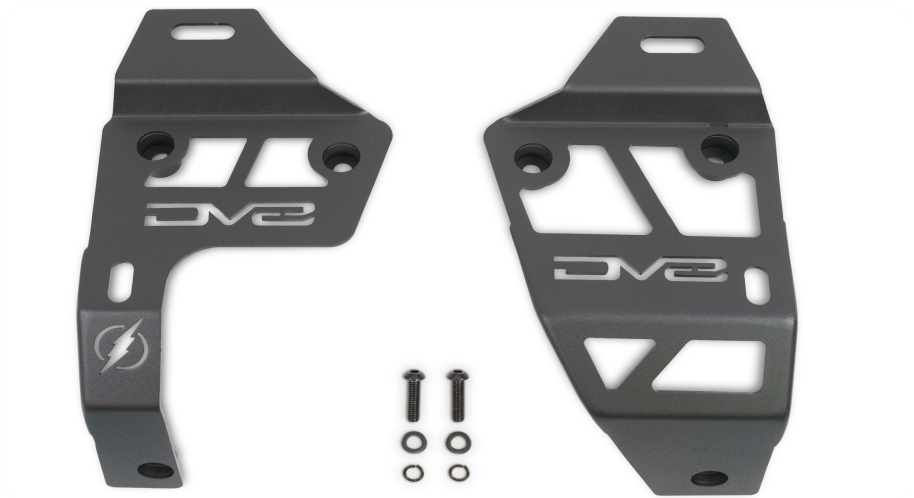

STEP 1 | On a work bench, place the foam gaskets on to the A-Pillar Dual Pod Mounts.



INSTALLATION MANUAL

STEP 2 | Mount the Pod lights to the DV8 A- Pillar Dual Pod Mount, using the hardware provided with light kit.





STEP 3 | Remove the antenna using a 10mm wrench.



INSTALLATION MANUAL

STEP 4 | Using a T40 Torx bit, remove the (4) factory bolts on each side, (8) bolts in total.

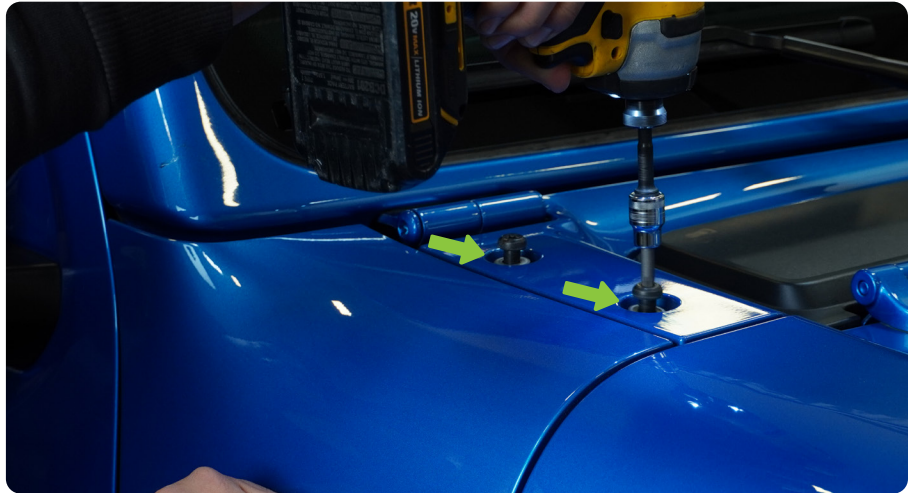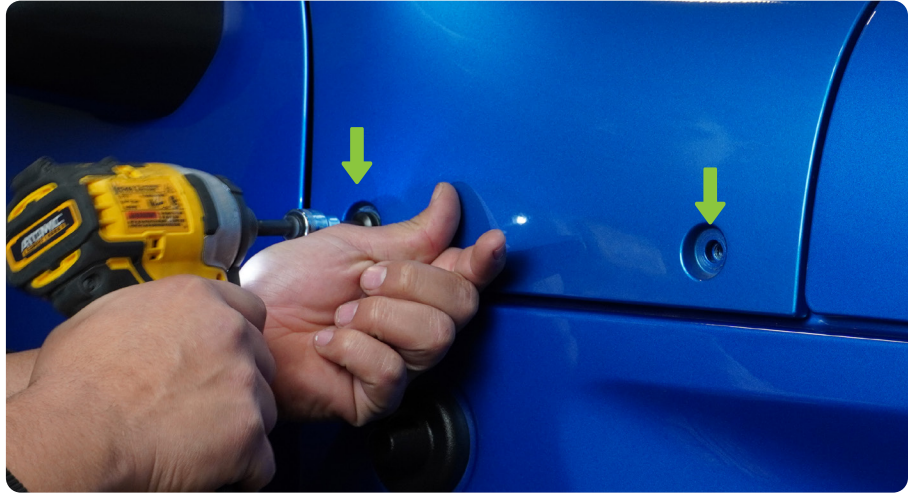

INSTALLATION MANUAL

STEP 5 | Route your Pod light wiring harness under the A-Pillar Cowl.

Place the DV8 A-Pillar Dual Pod Light Mount onto the vehicle.



STEP 6 | Using a T40 Torx bit and factory hardware, secure the DV8 A-Pillar Dual Pod Mount to the A-pillar Cowl.



INSTALLATION MANUAL

STEP 7 | Using a #5 Allen bit and provided hardware secure the side of the A-Pillar Dual Pod Mount.



STEP 8 | Double check that all factory hardware is secure.

Congratulations installation of the DV8 A-Pillar Dual Pod Mount is complete.

